








Installation Instructions, Faux Post Bases

4x4 (4x4-FPB-LS) 56689 4x4 (4x4-FPB-IW) 51789 6x6 (6x6-FPB-LS) 56690 6x6 (6x6-FPB-IW) 51790 8x8 (8x8-FPB-LS) 56691 8x8 (8x8-FPB-IW) 51791








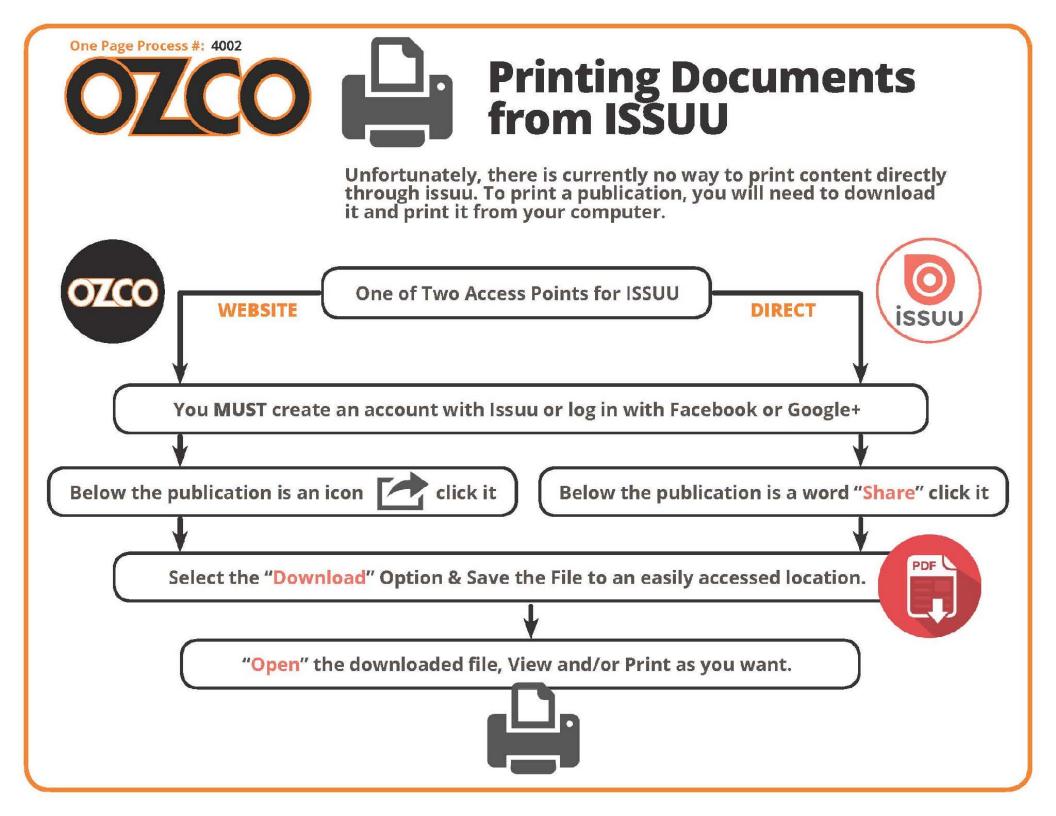

Laredo Sunset & Ironwood

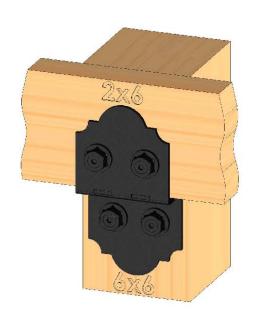


Laredo Sunset (566XX series)

2 great styles

Same functionality

choose your connection lifestyle

both styles available for most products

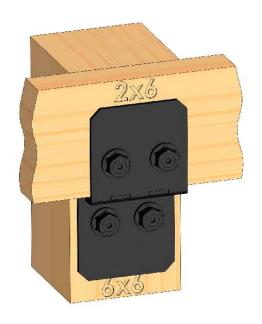



Ironwood (517XX series)










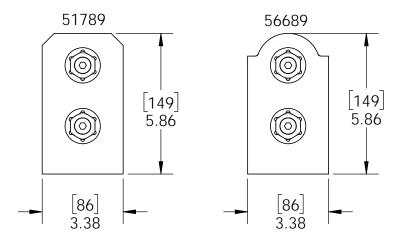

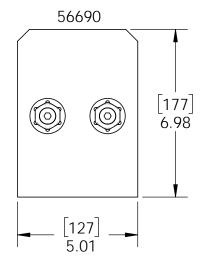

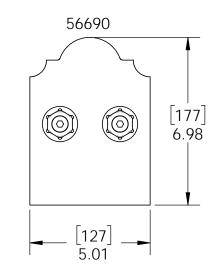

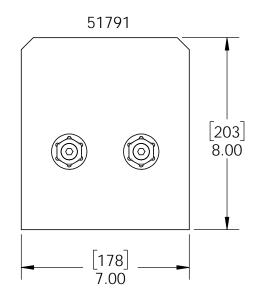


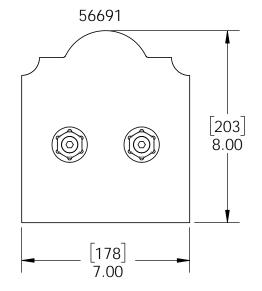


Overview





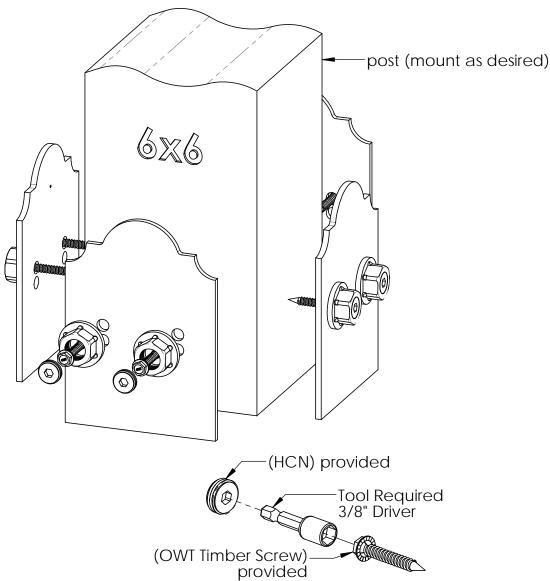

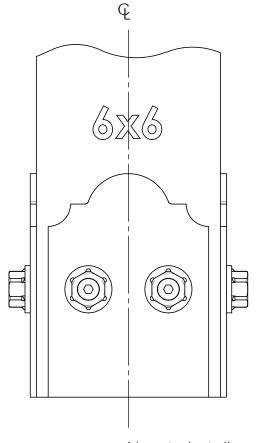

use power driver to install

Typical Installation & Basic Assembly