


Installation Instructions, 56639 6-8" Joist Hanger Flush (JHF-68-LS) 51739 6-8" Joist Hanger Flush (JHF-68-IW)

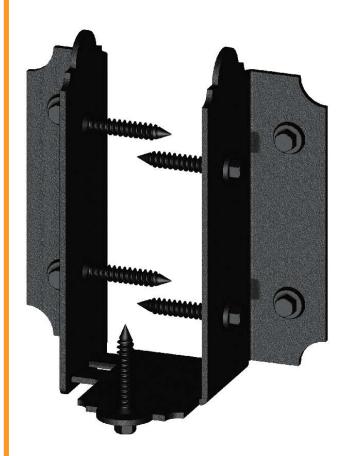


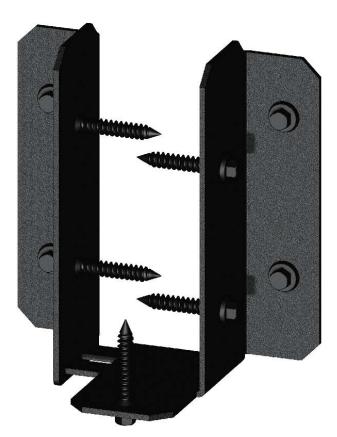


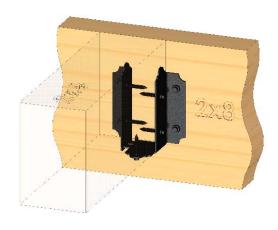


Typical Installation Laredo Sunset shown





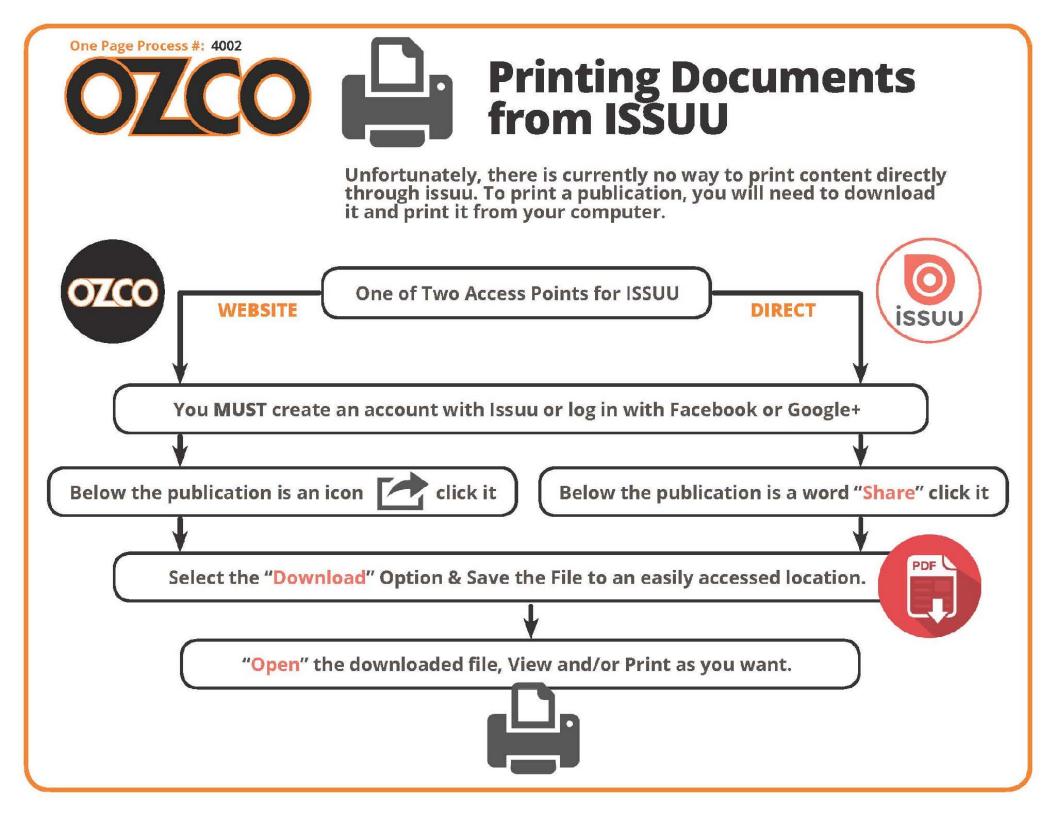

Laredo Sunset & Ironwood

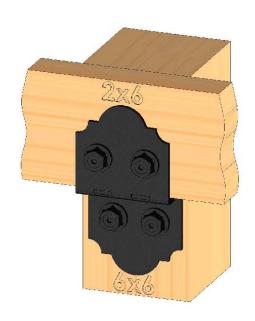


Laredo Sunset (566XX series)

2 great styles

Same functionality

choose your connection lifestyle

both styles available for most products

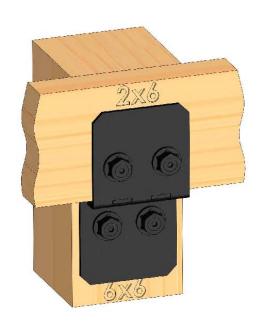



Ironwood (517XX series)









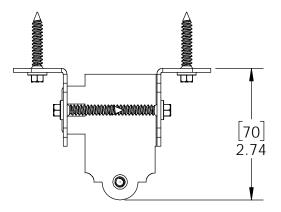

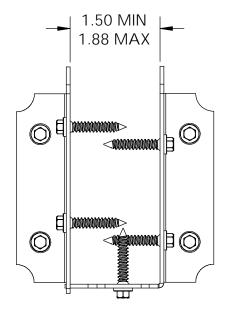

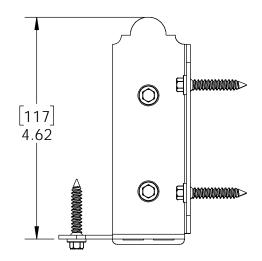

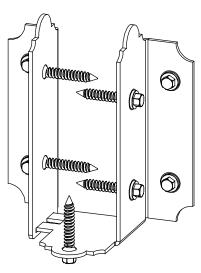



kit includes 6 assemblies


56639






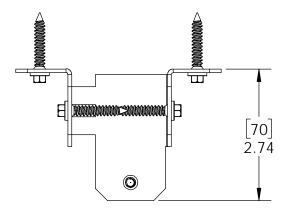

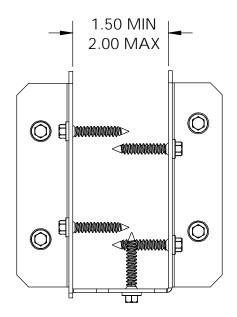


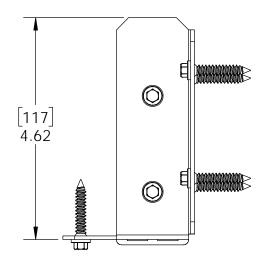

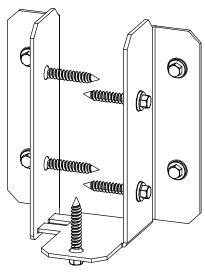


kit includes 6 assemblies

51739

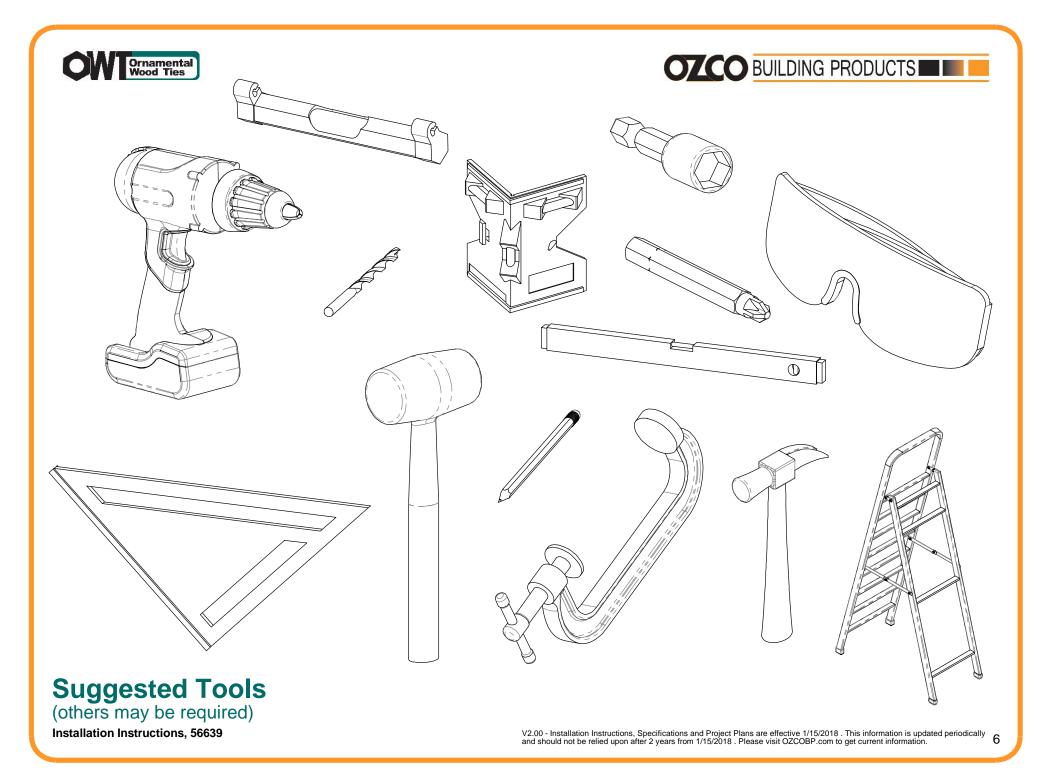






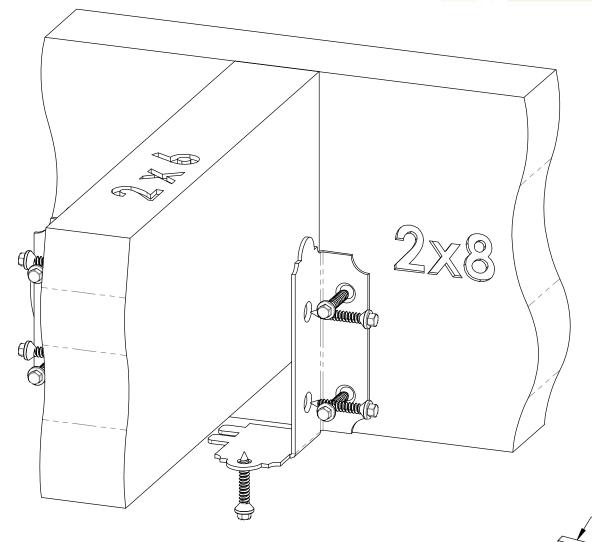

Typical Installation & Assembly

Tool Required 1/4" Driver

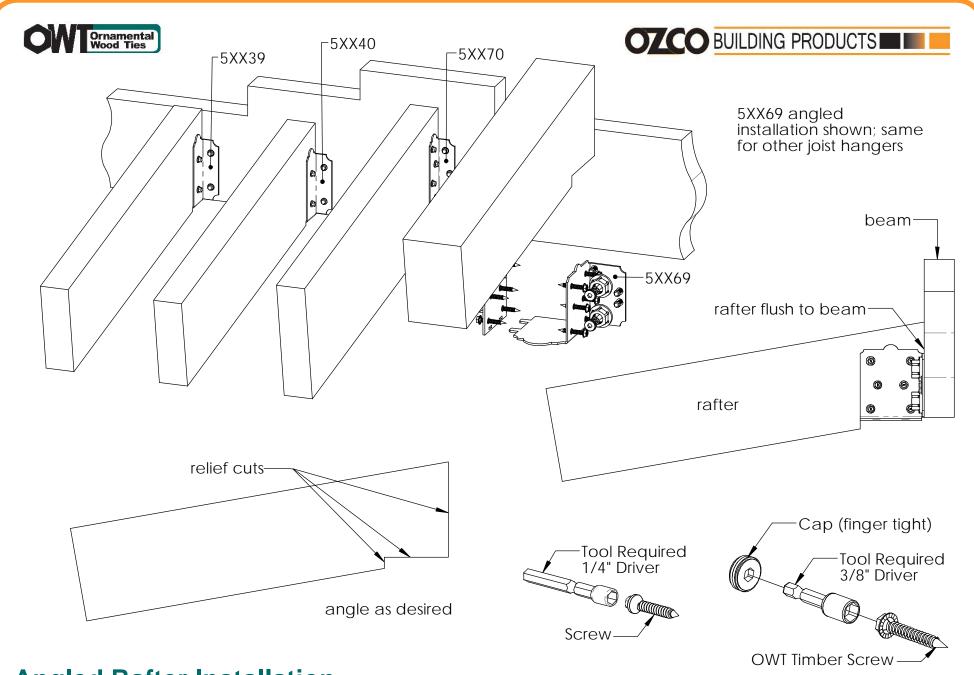

Angled Rafter Installation