


Installation Instructions, Osco Truss System

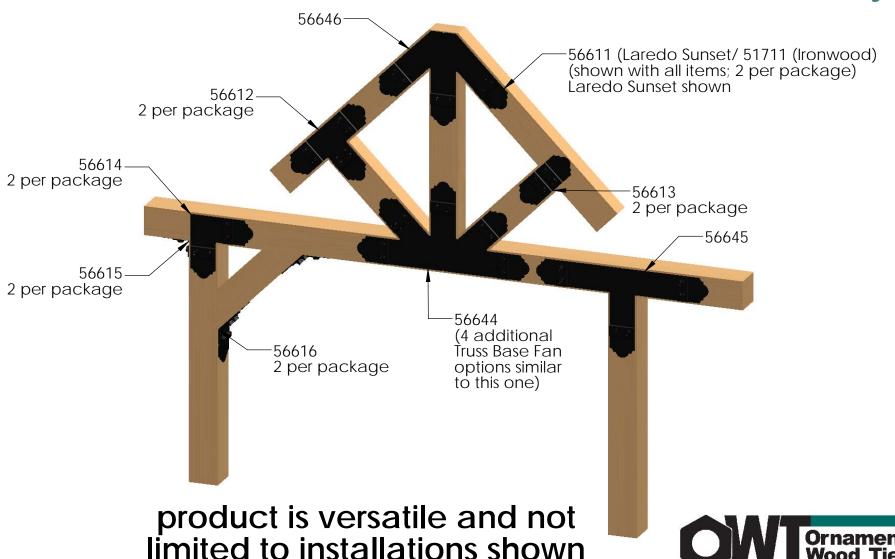

O7CO BUILDING PRODUCTS■■

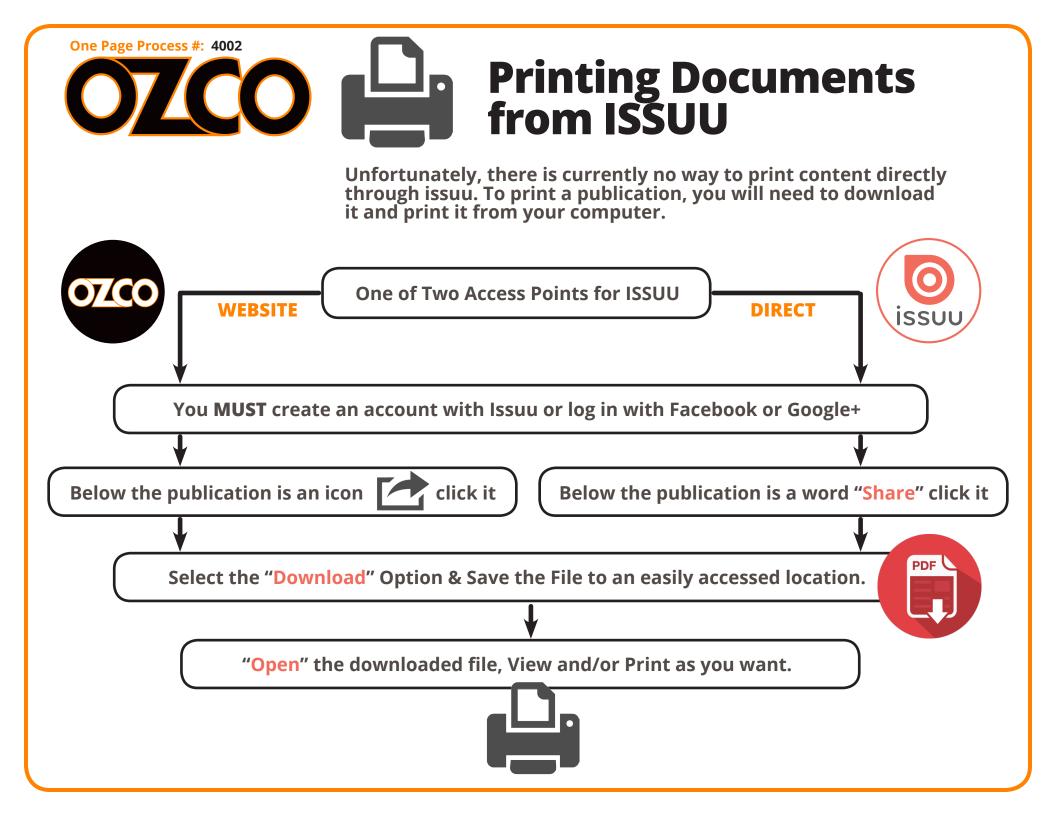


Laredo Sunset vs. Ironwood

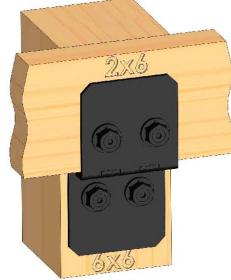

Ironwood (517XX series) 2 great styles same functionality

choose your connection lifestyle


both styles available for most products

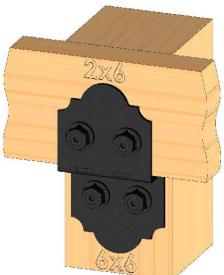

Laredo Sunset (566XX series)






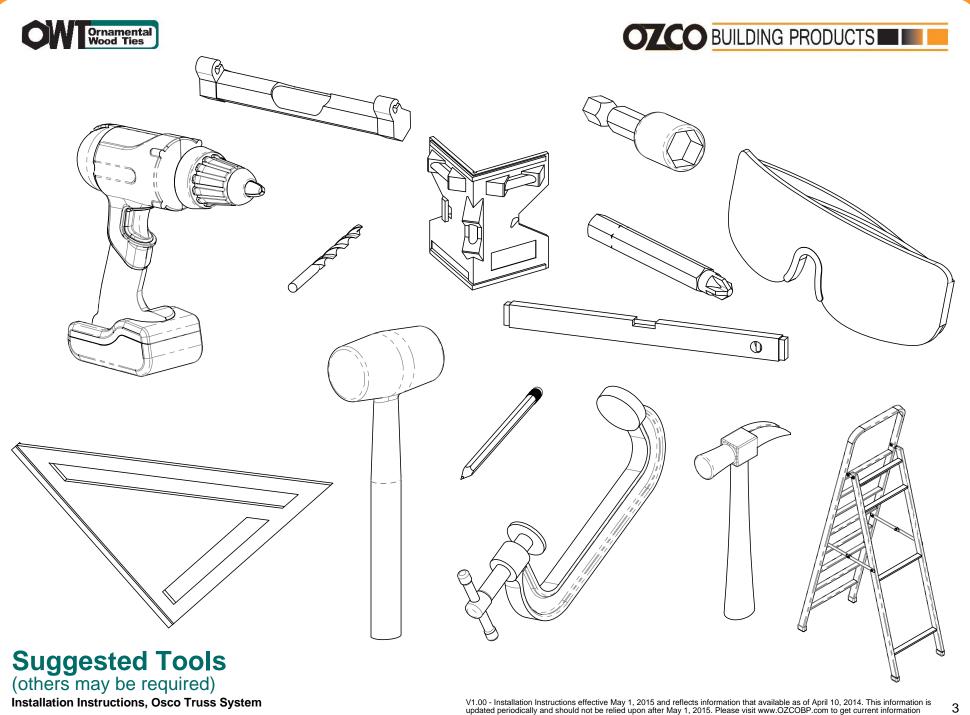






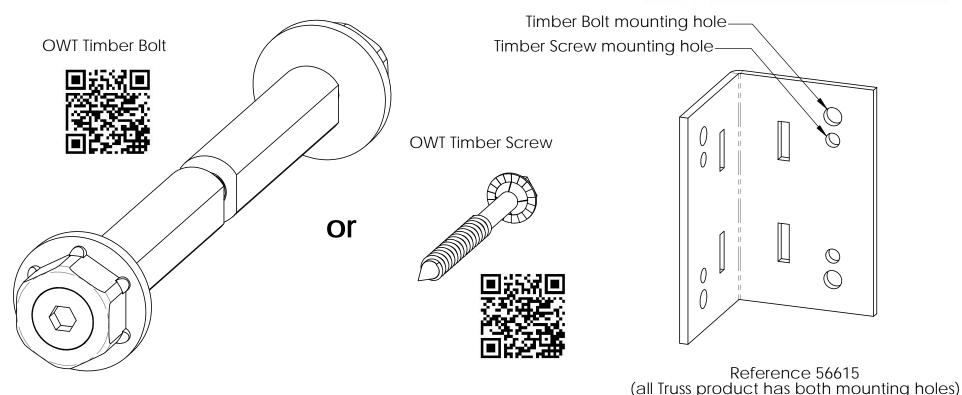

Fasteners purchased separately.

Must be selected based on <u>length and strength requirements</u> product pages will show both options to assist with selection

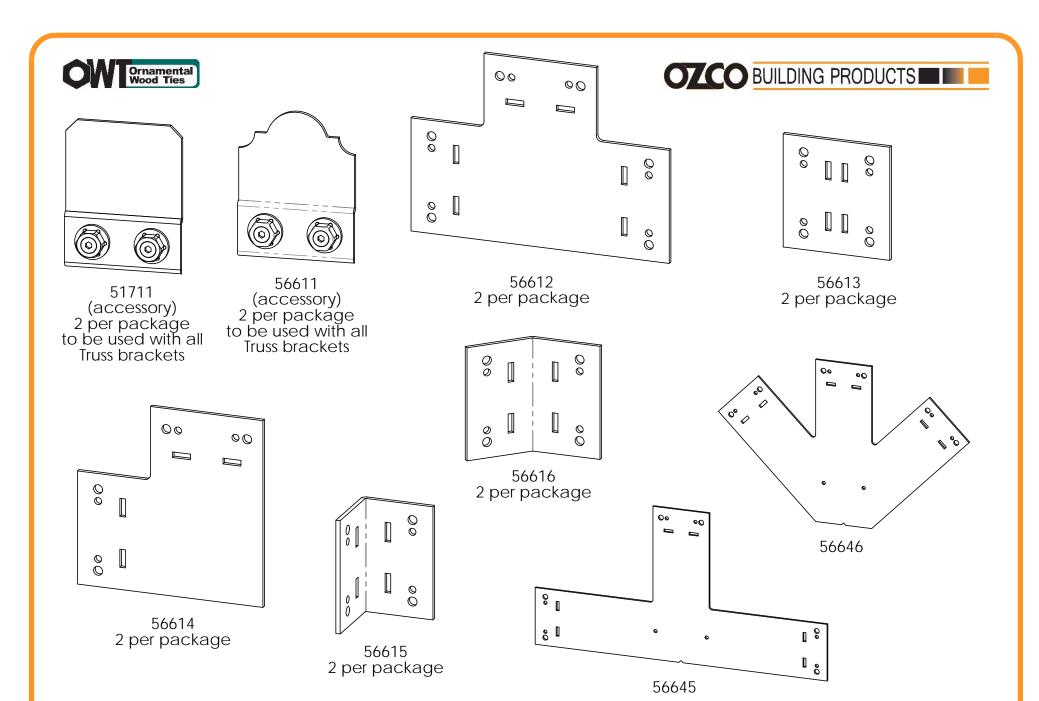


Truss Ties & Accent

Installation Instructions, Osco Truss System




56619 8:12 Truss Base Fan (TBF-8-12)

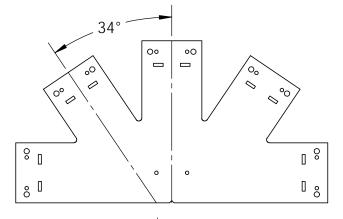


56642 4:12 Truss Base Fan (TBF-4-12)


56620

10:12 Truss Base Fan (TBF-10-12)

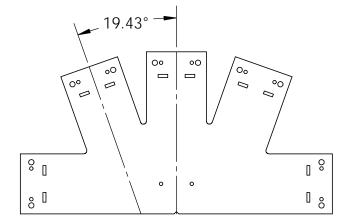




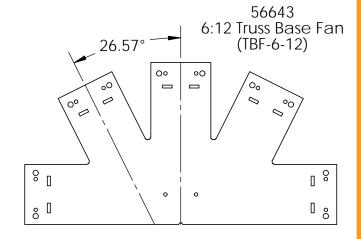


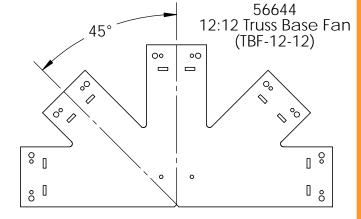


Truss Base Fan

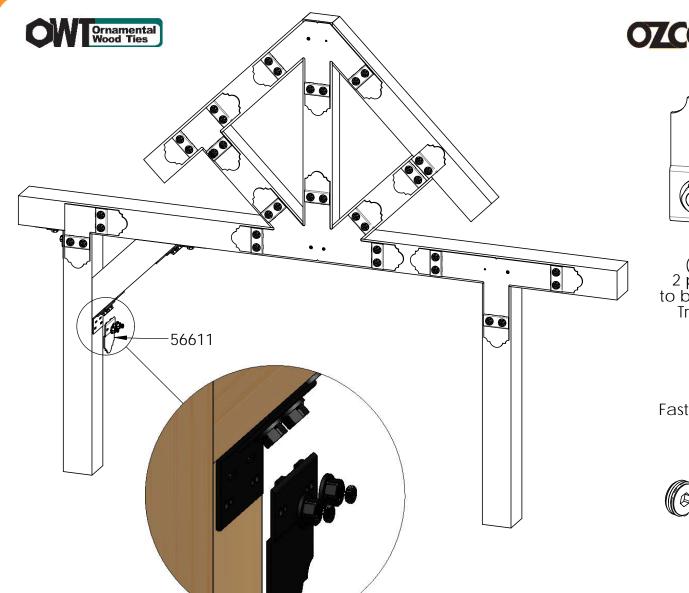



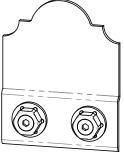




56611 (accessory) (accessory)
2 per package
to be used with all Truss brackets

Truss brackets

Fasteners not shown.


Fasteners from brackets will be utilized



this accessory compliments all Ozco Truss brackets


56611

(shown installed on all)

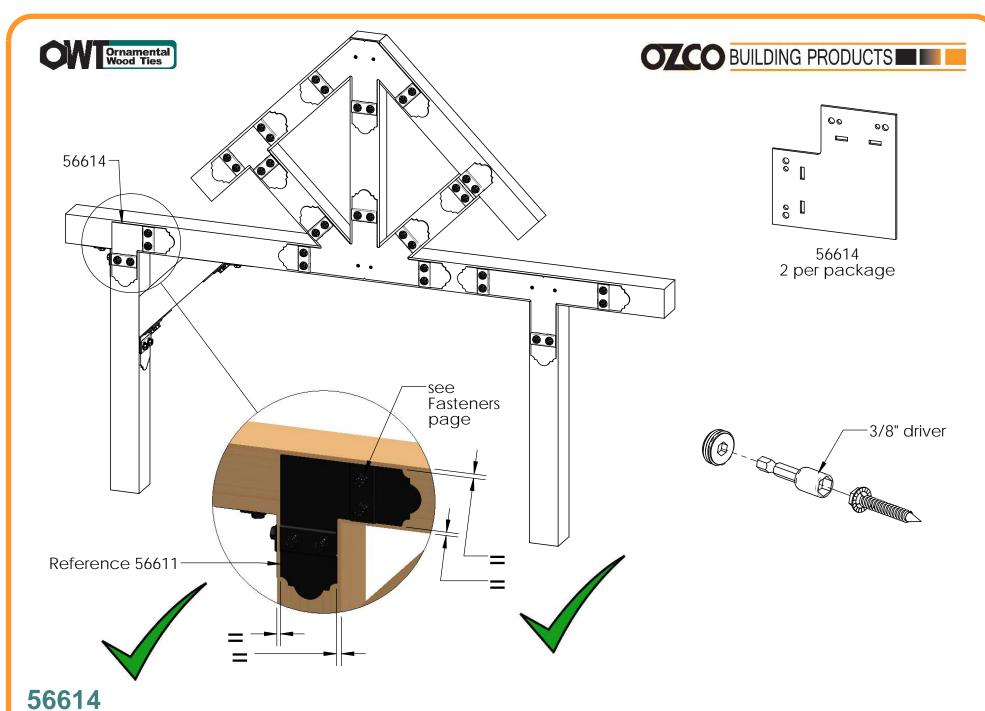


Installation Instructions, Osco Truss System


V1.00 - Installation Instructions effective May 1, 2015 and reflects information that available as of April 10, 2014. This information is updated periodically and should not be relied upon after May 1, 2015. Please visit www.OZCOBP.com to get current information

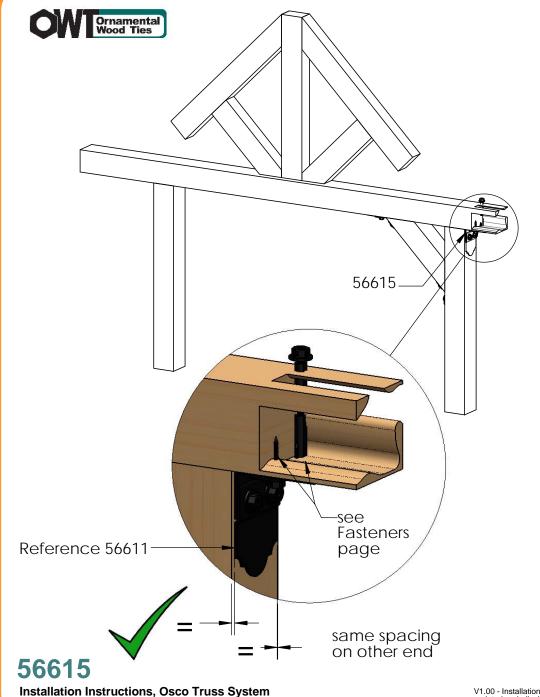









56615 2 per package



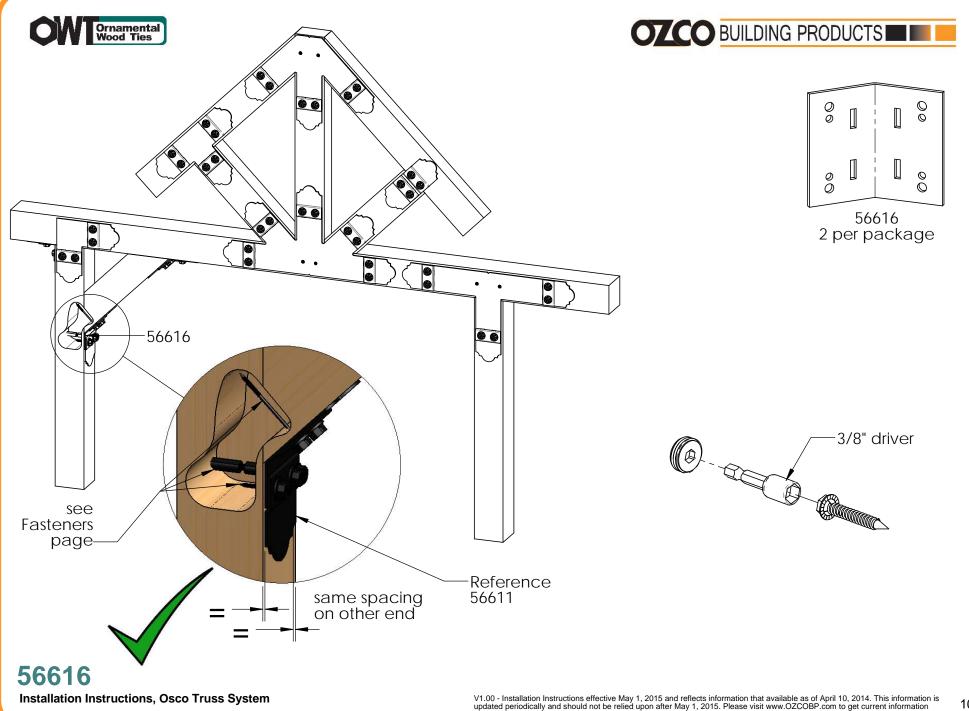


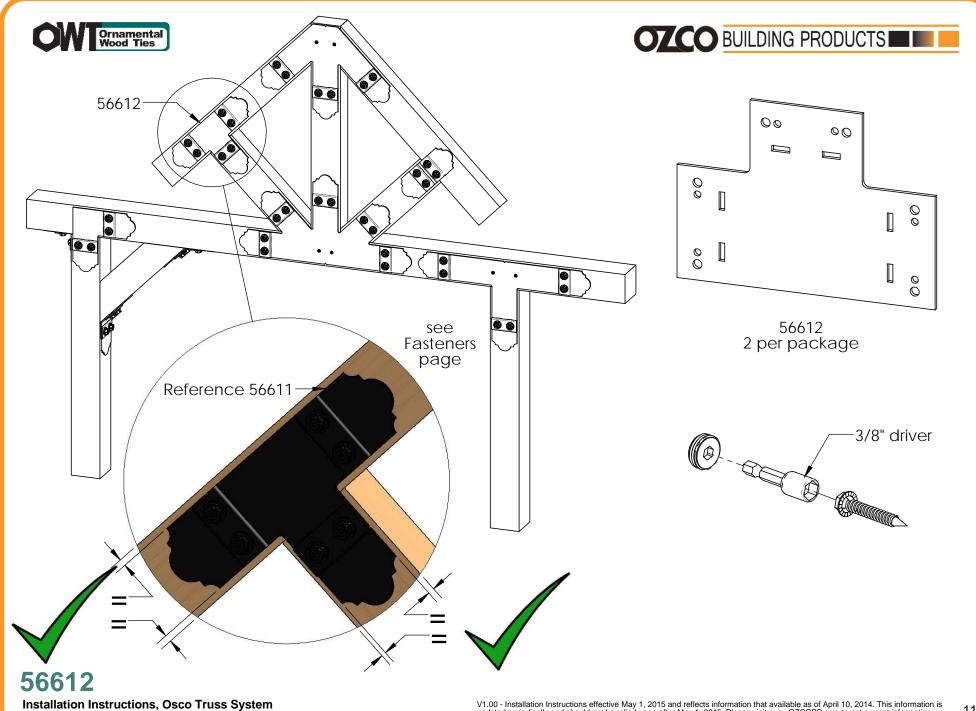


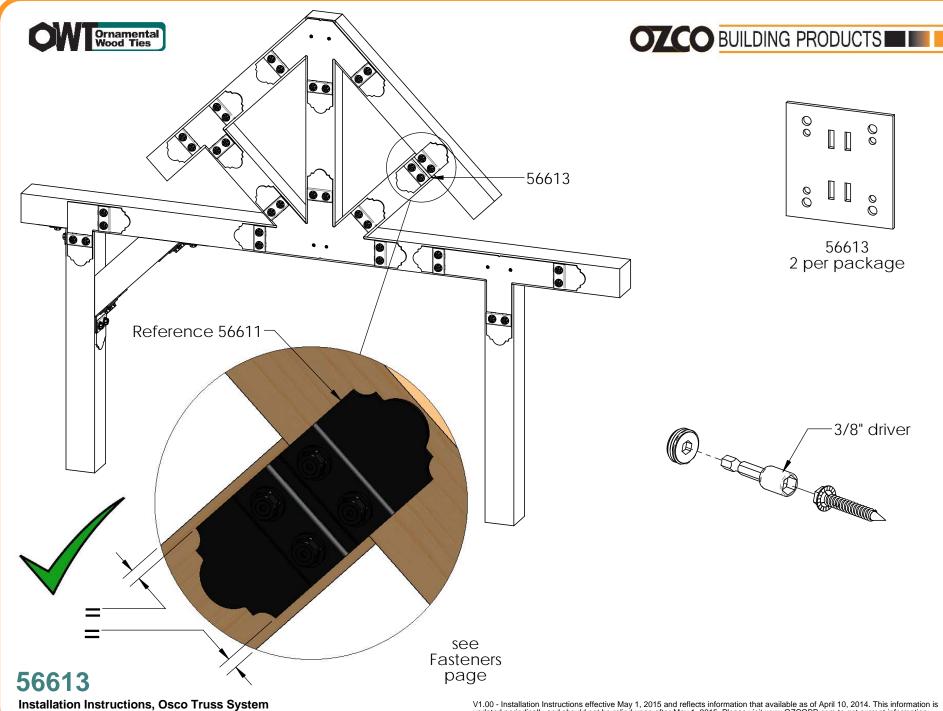

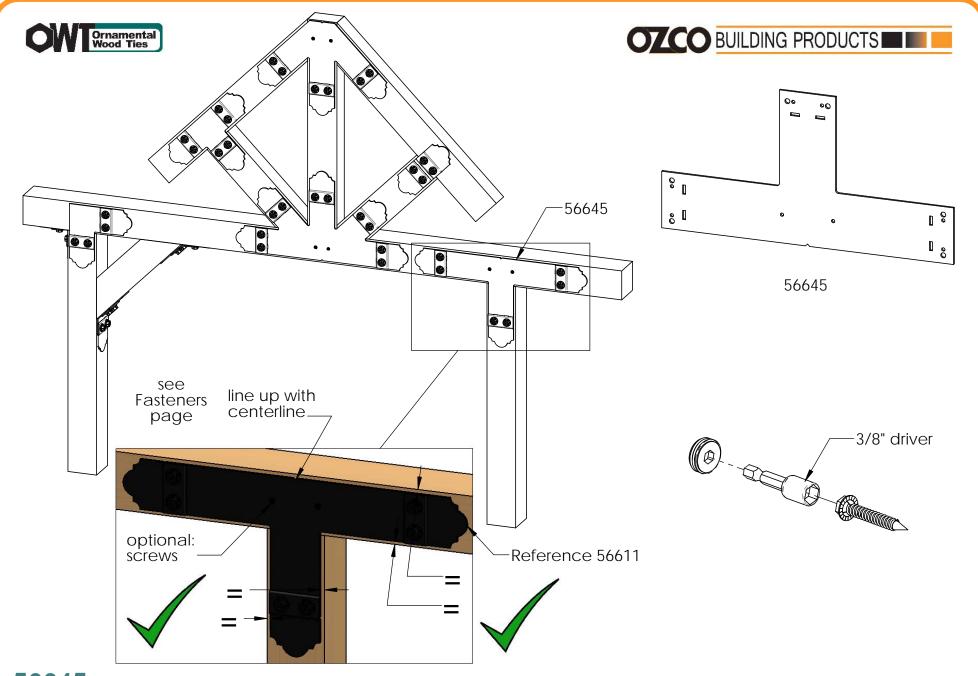

56645

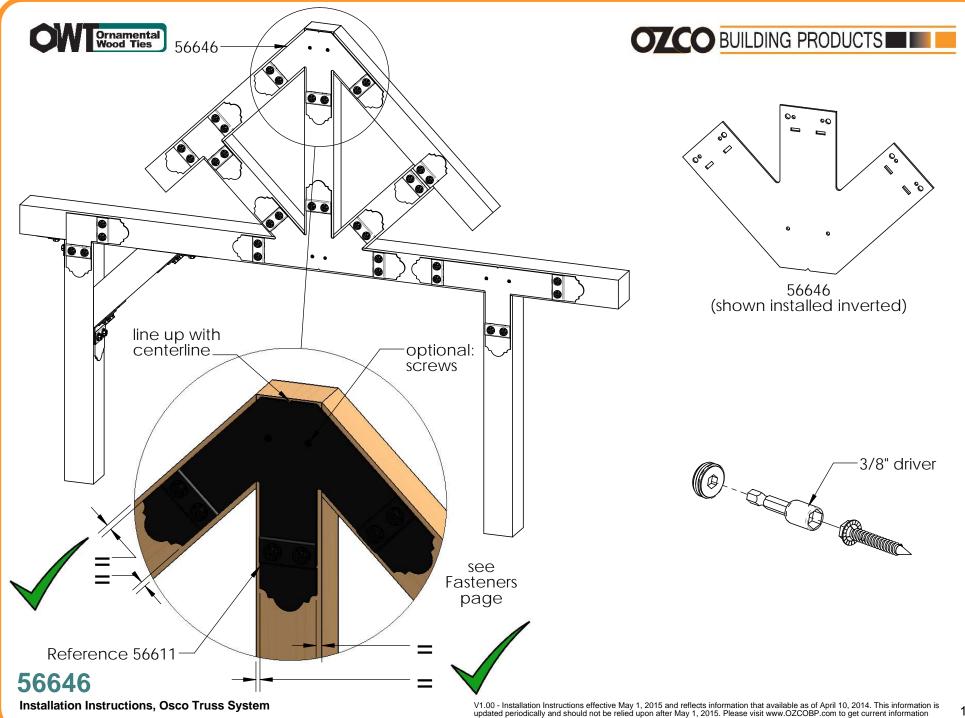

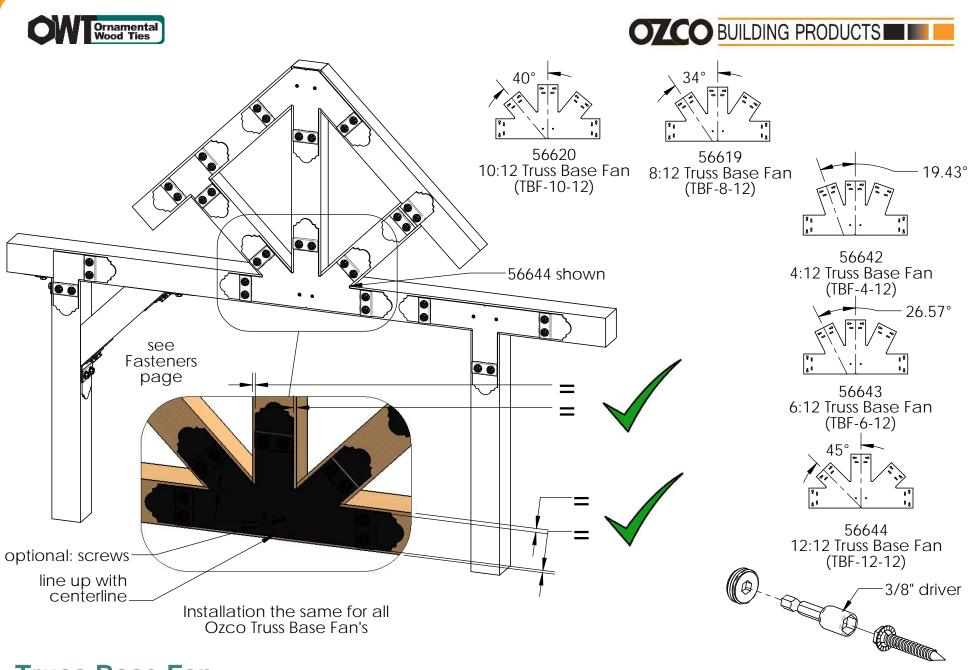

Installation Instructions, Osco Truss System