## PURCHASE CONSTRUCT

## DESIGN


Installation Instructions, Post Driver Kit 20500 (MDK-13) Manual Driver 20480 (JDK-10) Jackhammer Driver


**ENJOY** 

Accessories 20440 (OH-02) Jackhammer Driver Bit 50740 Post Level 40640 (HSP-HB) 40600 (HSP-13) 40540 (HSP-T6) 40580 (HSP-125) 40520 (HSP-T46)



Installation Instructions, Post Drivers

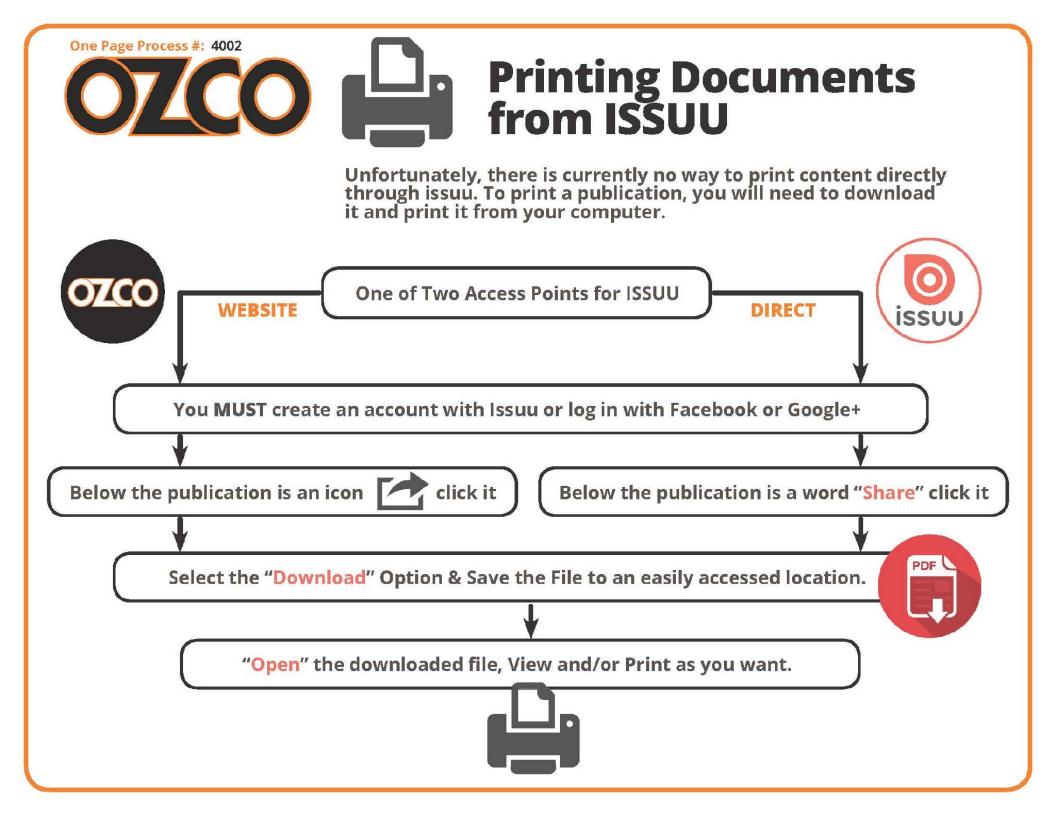


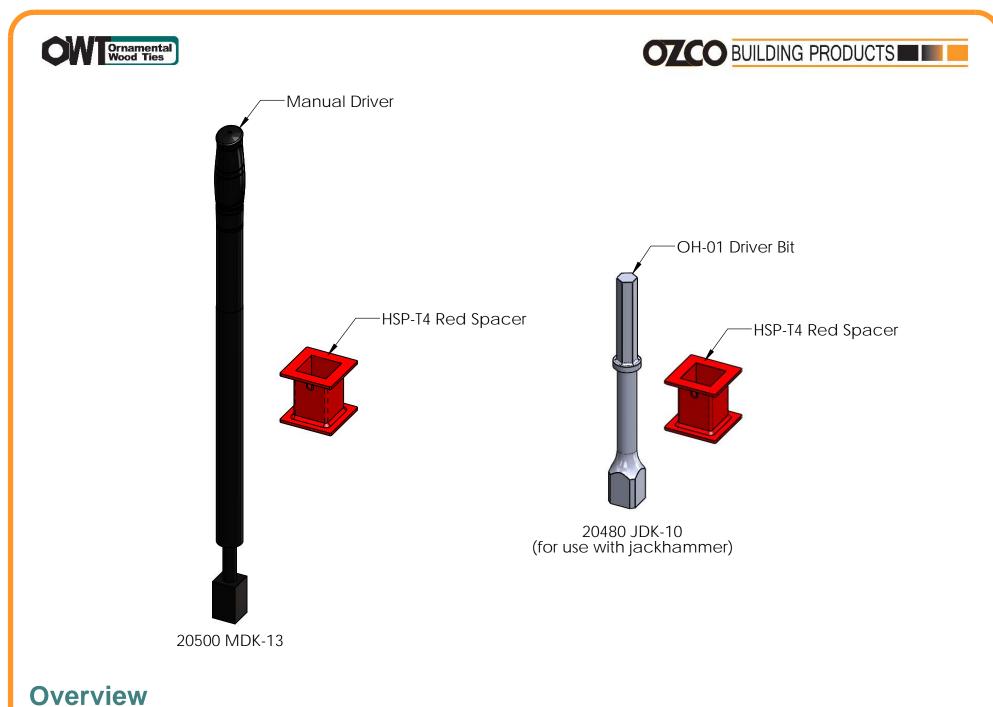

Installation Instructions, Post Drivers




## 

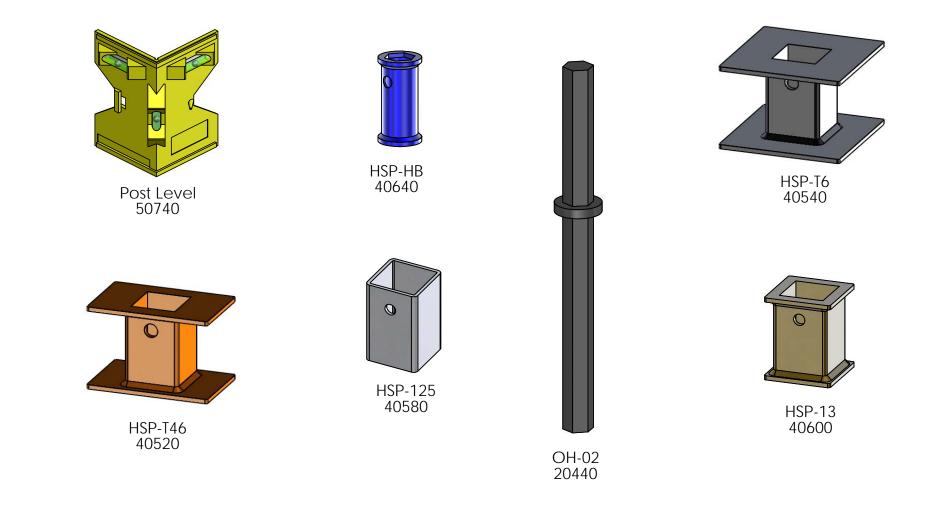


## **Accessories**

Installation Instructions, Post Drivers

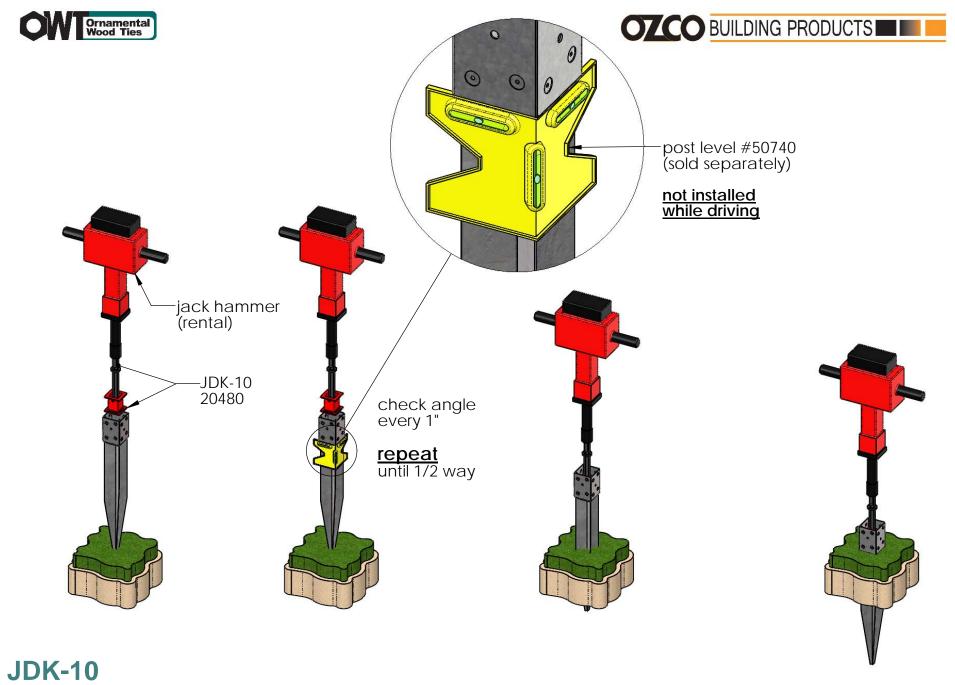

Installation Instructions, Post Drivers

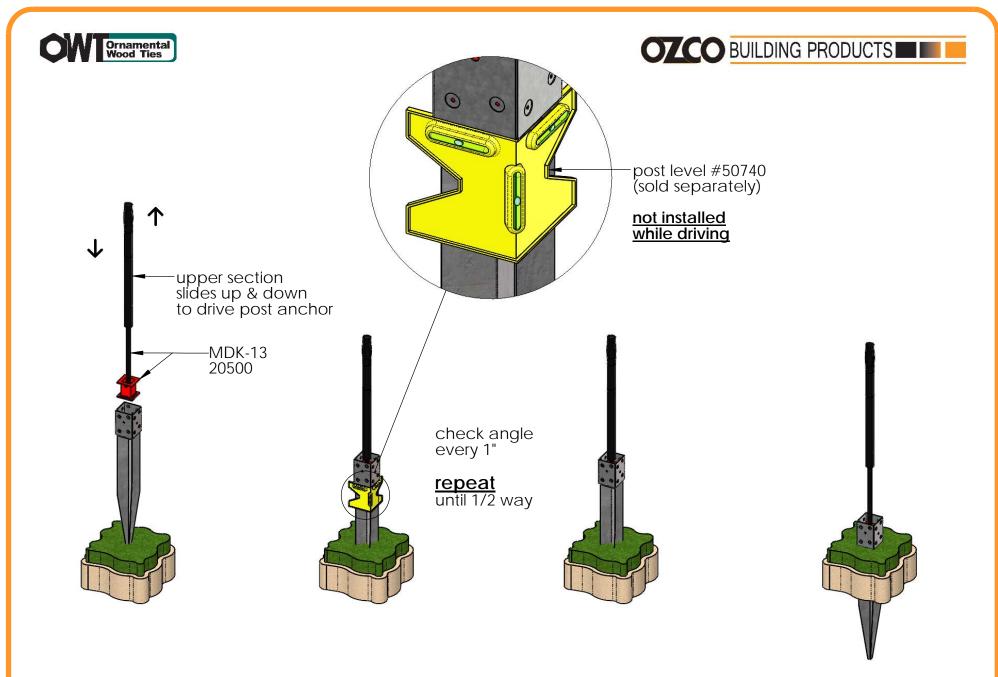

MDK-13 Installation Instructions, Post Drivers