

DESIGN

PURCHASE


CONSTRUCT

ENJOY


Installation Instructions, Wood Post Anchors

30180 T4-600 24" 4x4
30160 T4-850 34" 4x4
30200 C4-850 34" 4x4
30380 T46-850 36" 4x6
30400 T6-850 36" 6x6
30700 MB-24 24" 4x4
30410 T6-700 34" 6x6

Accessory-Deck Plate 50880 OD-T4 12"x12"

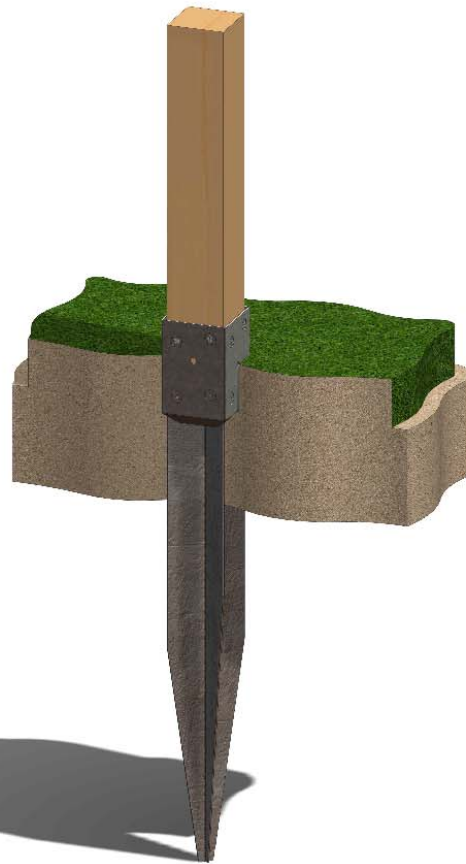

Typical Installation

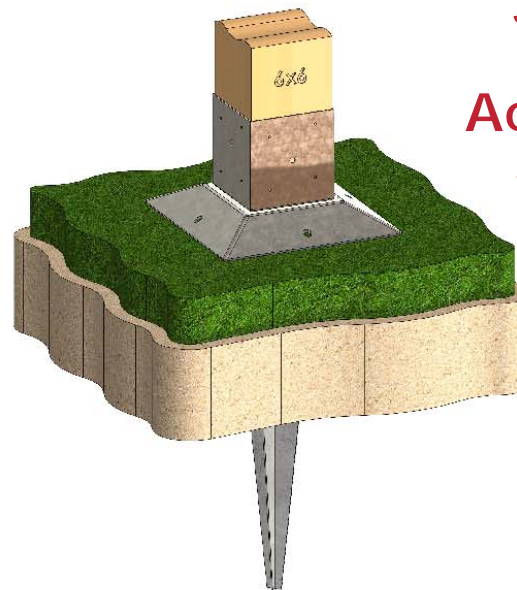

with 50880 Deck Plate






OZCO BUILDING PRODUCTS



Printing Documents from ISSUU

Unfortunately, there is currently no way to print content directly through issuu. To print a publication, you will need to download it and print it from your computer.

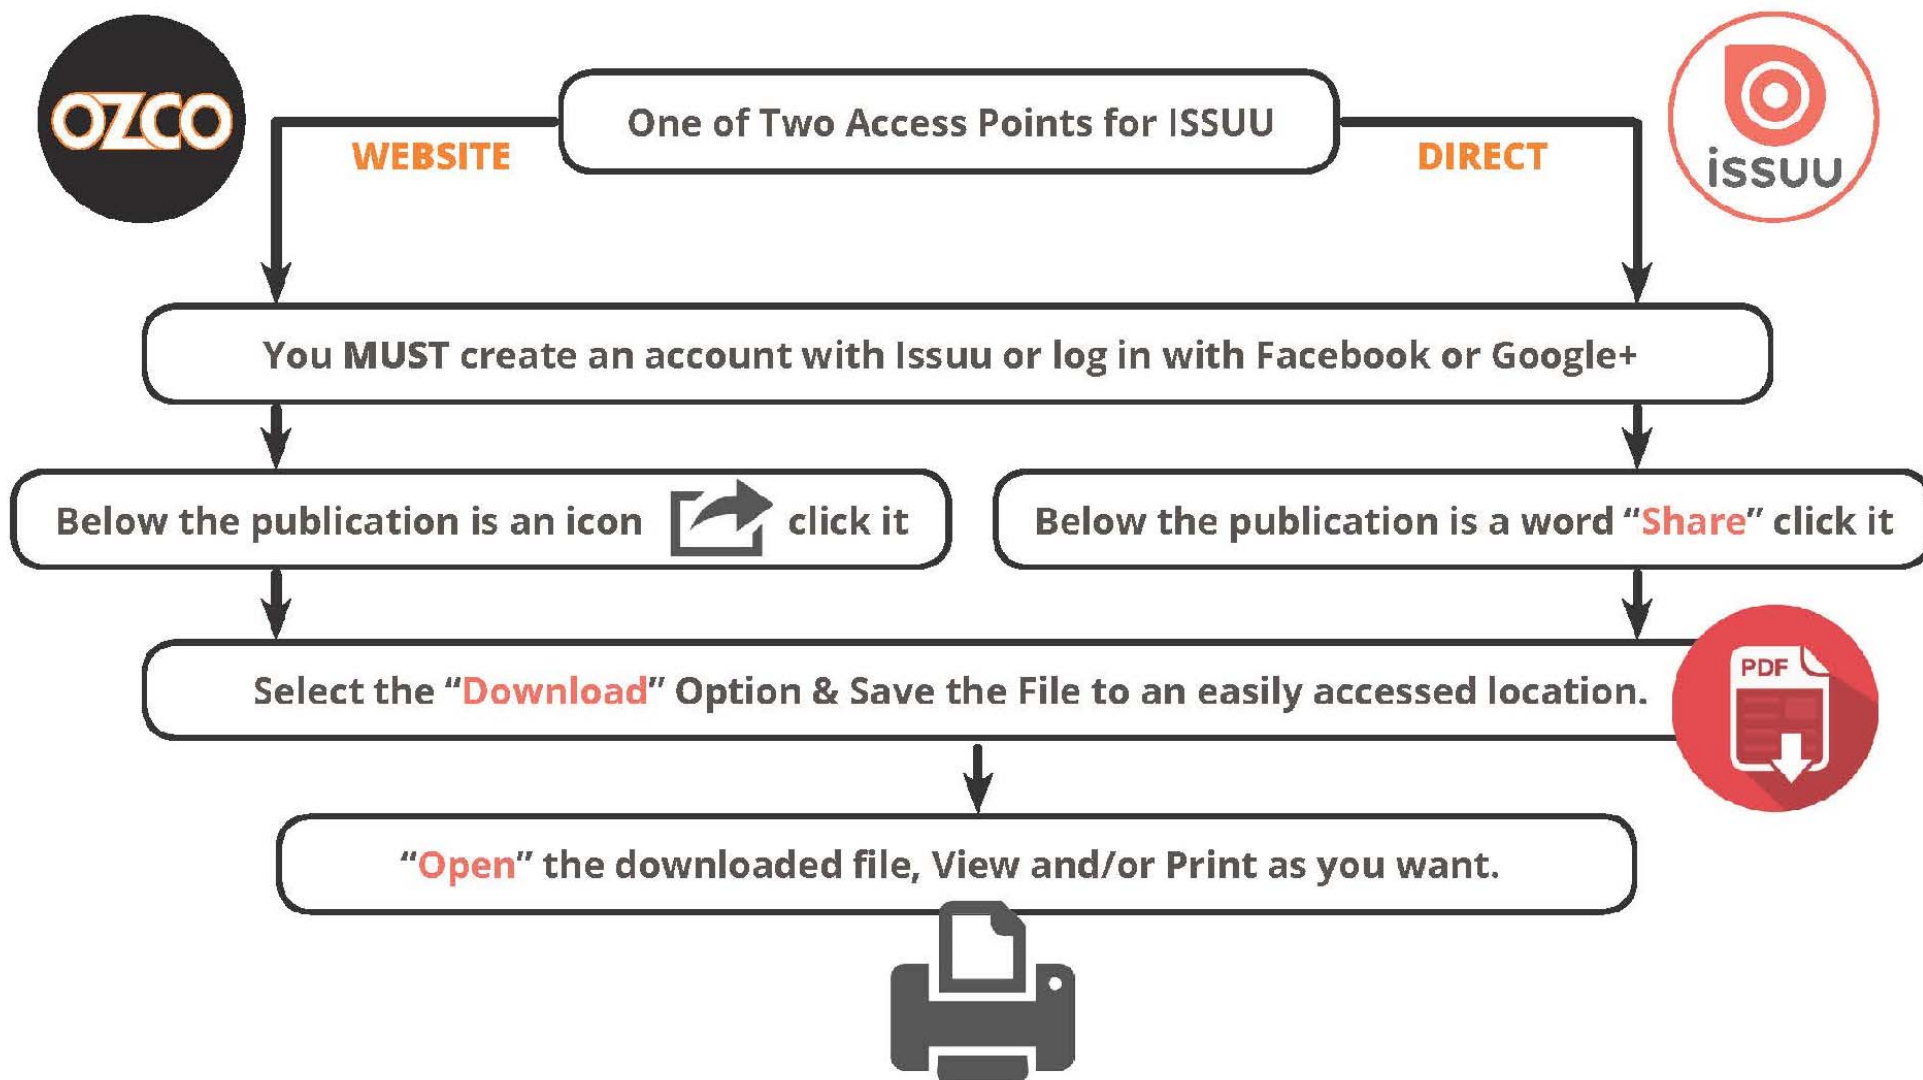

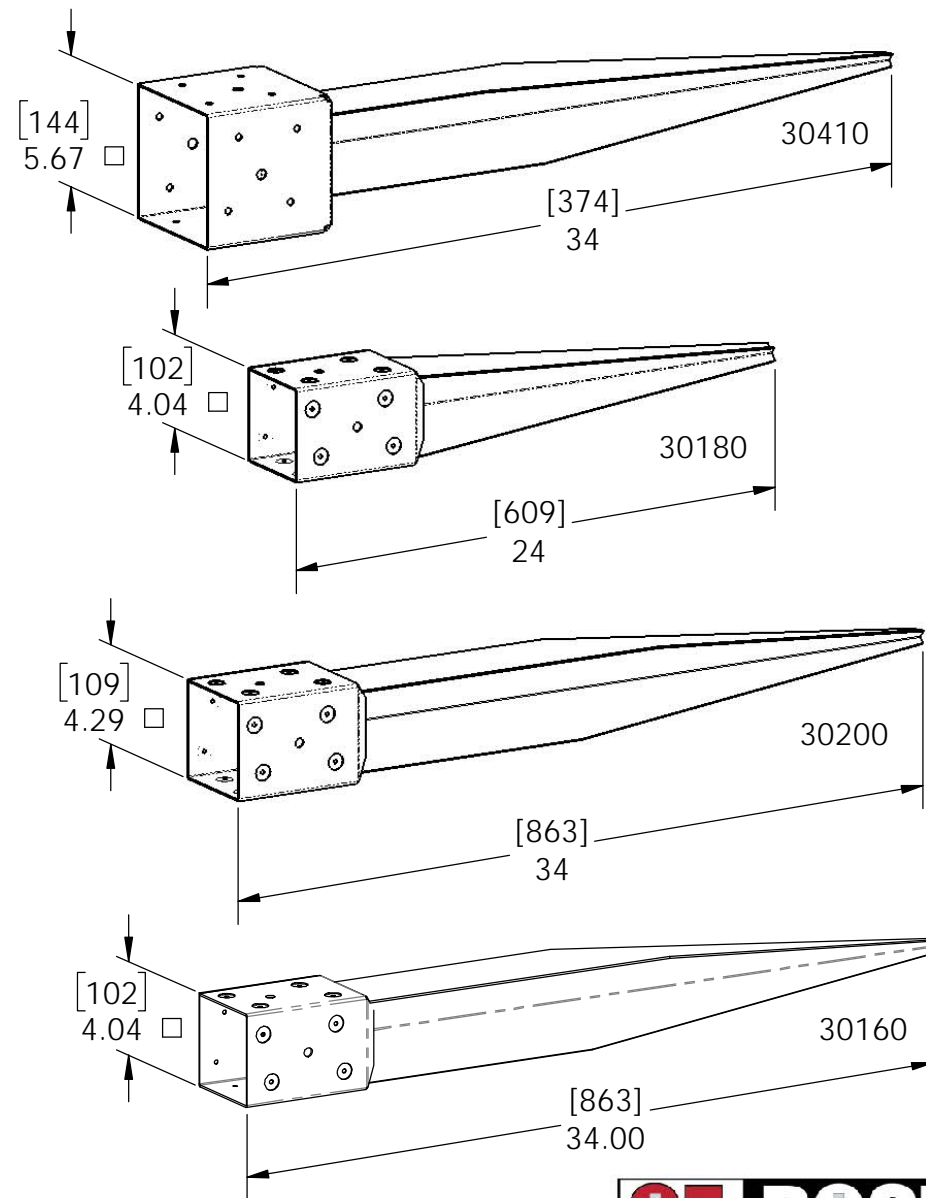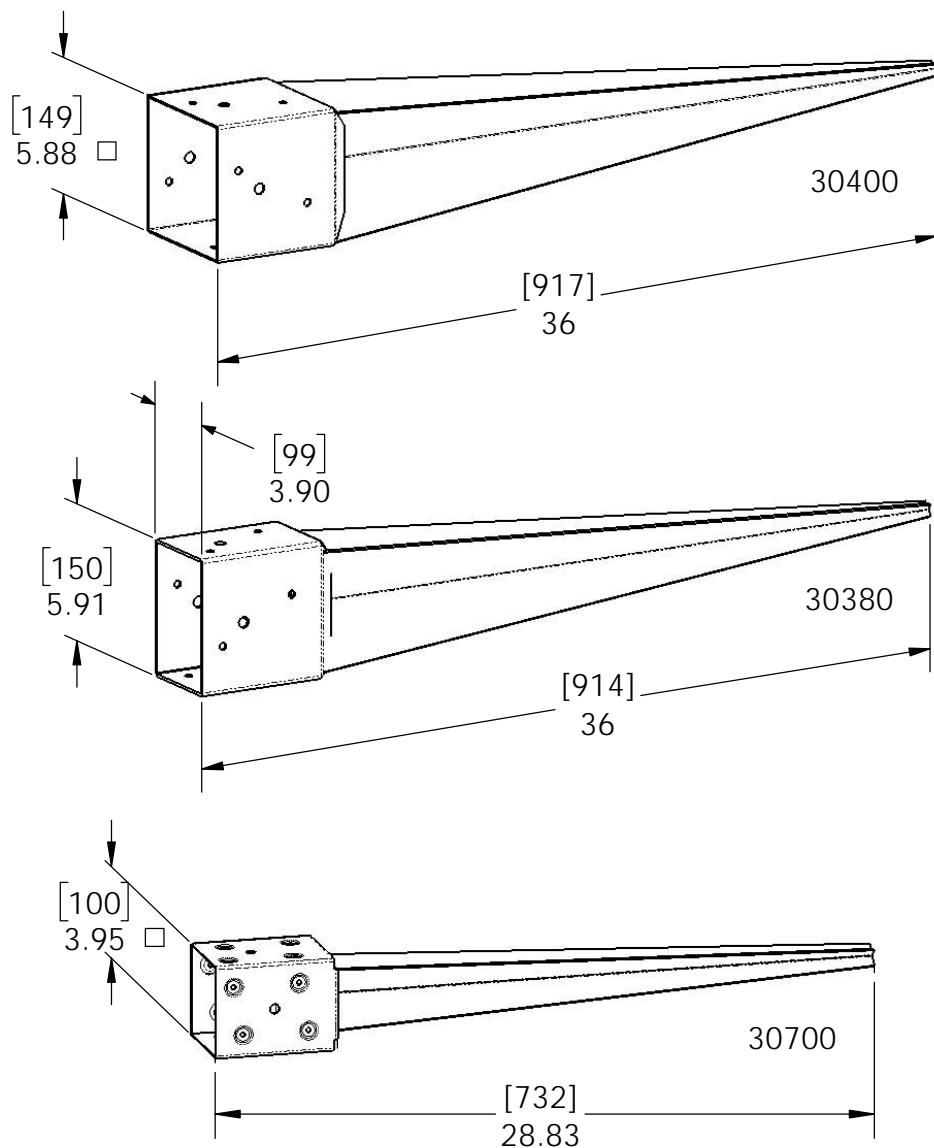



Overview

Installation Instructions, Wood Post Anchors

OZ-POST
instant post holes

OZCO BUILDING PRODUCTS

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/16/2018. This information is updated periodically and should not be relied upon after 2 years from 5/16/2018. Please visit OZCOBP.com to get current information.

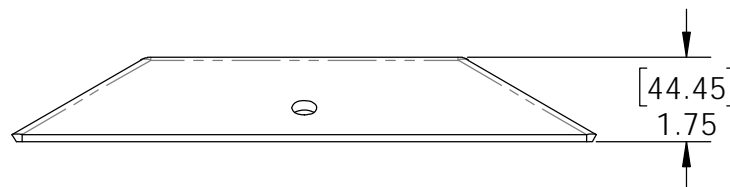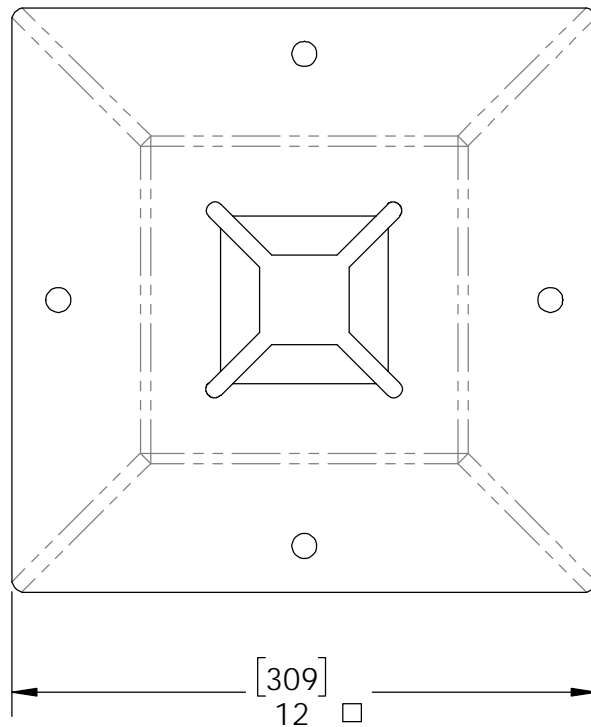

for use with the following ONLY

30180 T4-600 24" 4x4
 30160 T4-850 34" 4x4
 30200 C4-850 34" 4x4
 30380 T46-850 36" 4x6
 30400 T6-850 36" 6x6
 30410 T6-700 32" 6x6

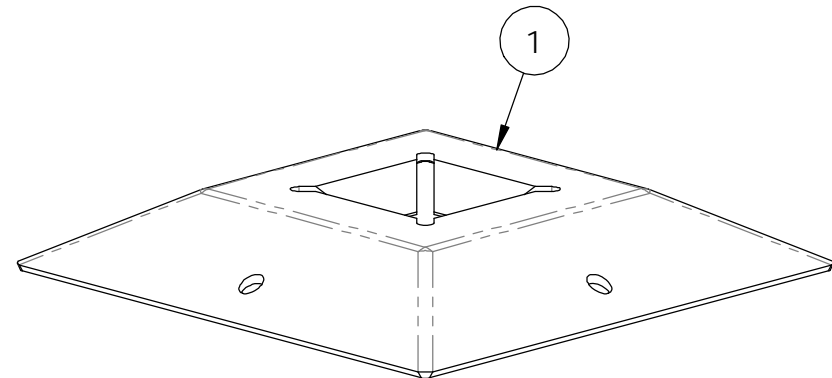


plate can be painted to match black post anchors with automotive spray can bedliner


Accessory: 50880

Installation Instructions, Wood Post Anchors

OZ-POST
 instant post holes

OZCO BUILDING PRODUCTS

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/16/2018 . This information is updated periodically and should not be relied upon after 2 years from 5/16/2018 . Please visit OZCOBP.com to get current information.

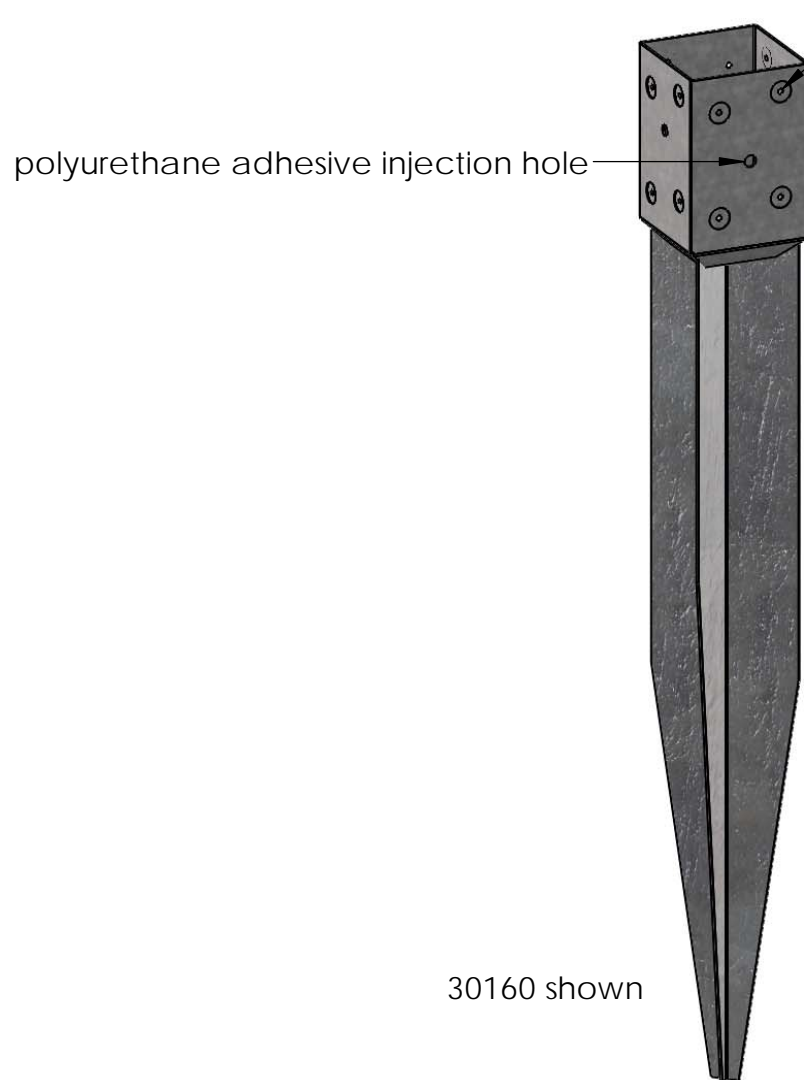

Post securing options

- #10 x 1-1/4" panhead screw mounting holes (screws not included)
- Polyurethane adhesive; 3-4 squeezes on chaulk gun applicator inside "injection hole"
- Both methods above

notes:

- post anchor may be driven into any desired depth.
- recommend using polyurethane adhesive on applications where securing holes are below surface level to prevent post rot.

30160 shown


Typical

Installation Instructions, Wood Post Anchors



OZCO BUILDING PRODUCTS

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/16/2018 . This information is updated periodically and should not be relied upon after 2 years from 5/16/2018 . Please visit OZCOBP.com to get current information.

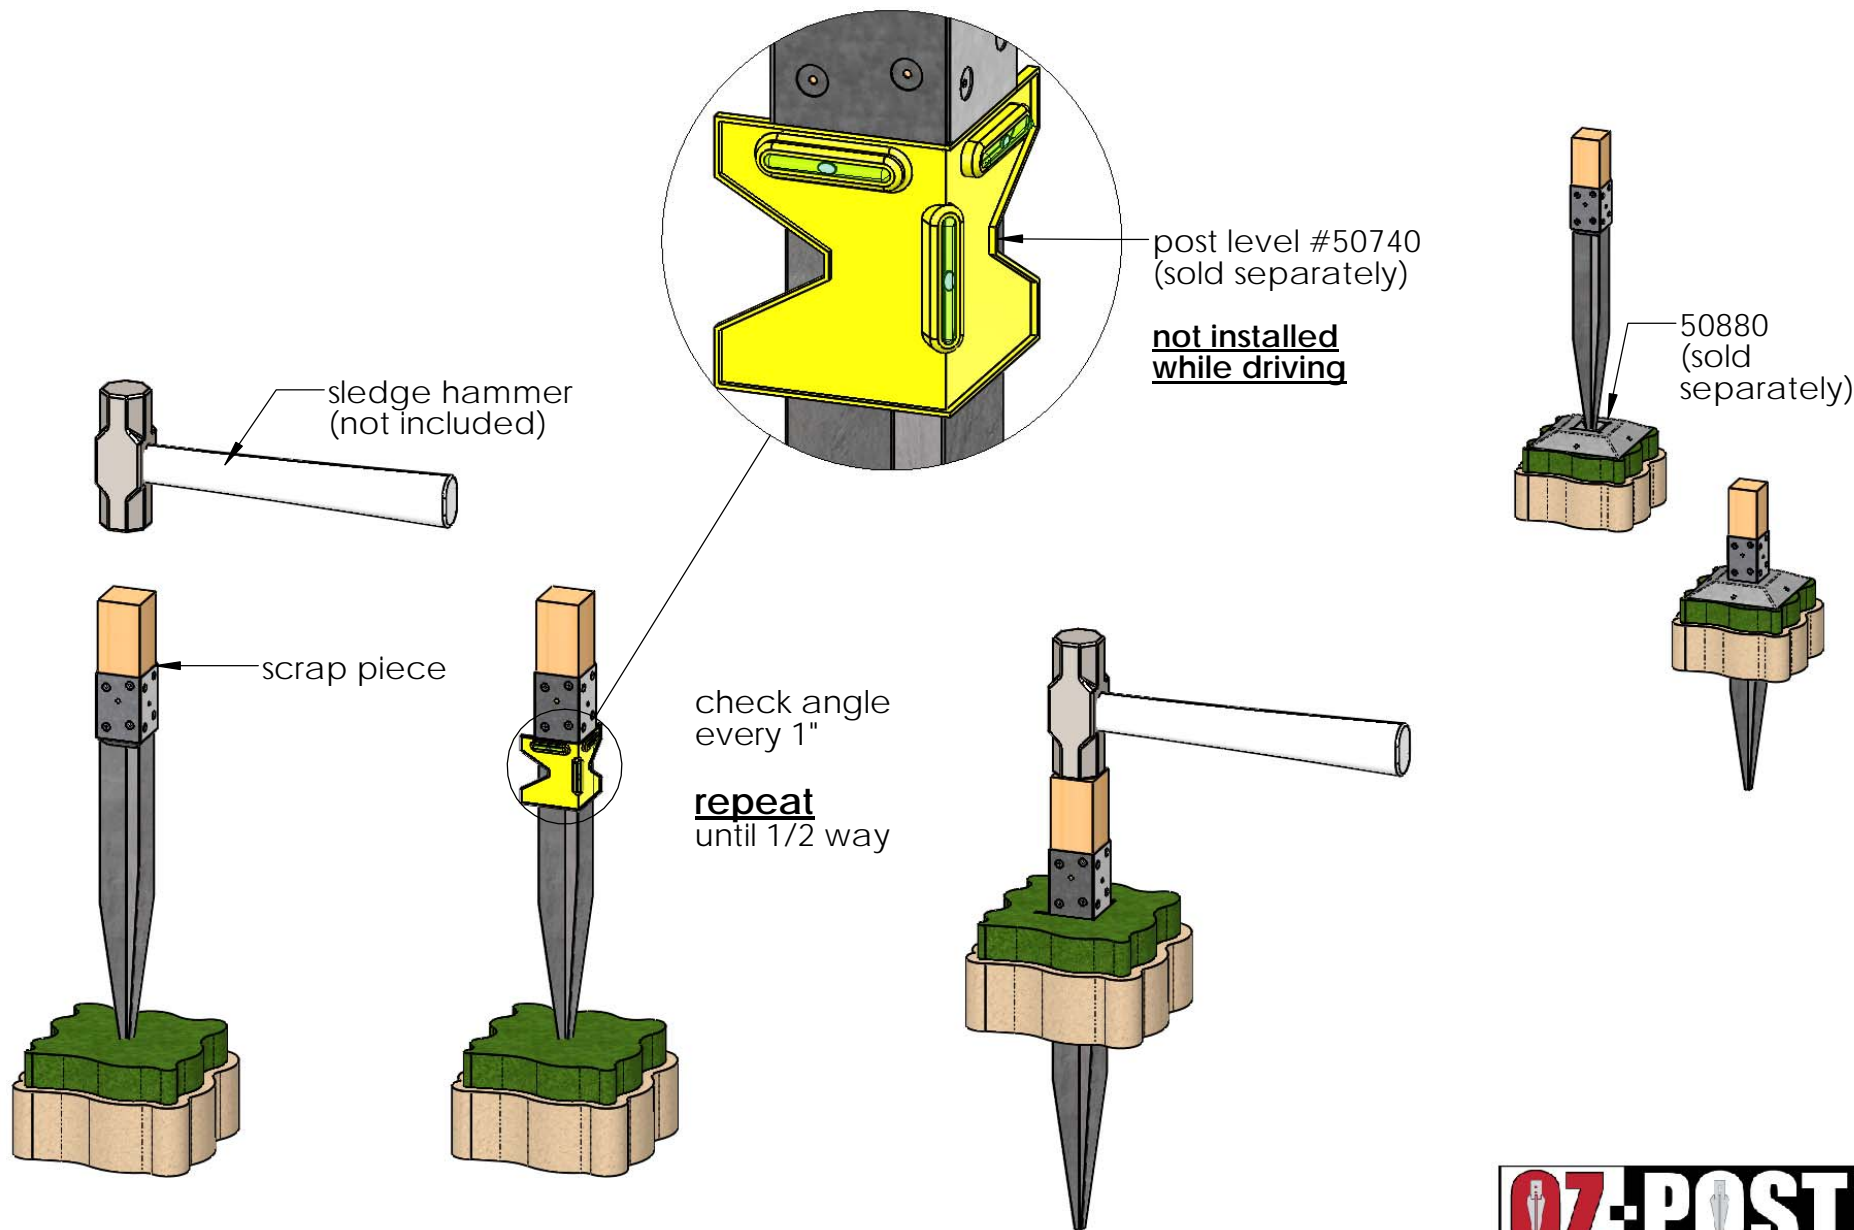


sledge hammer installation

Installation Instructions, Wood Post Anchors

OZ-POST
instant post holes

OZCO BUILDING PRODUCTS

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/16/2018. This information is updated periodically and should not be relied upon after 2 years from 5/16/2018. Please visit OZCOBP.com to get current information.

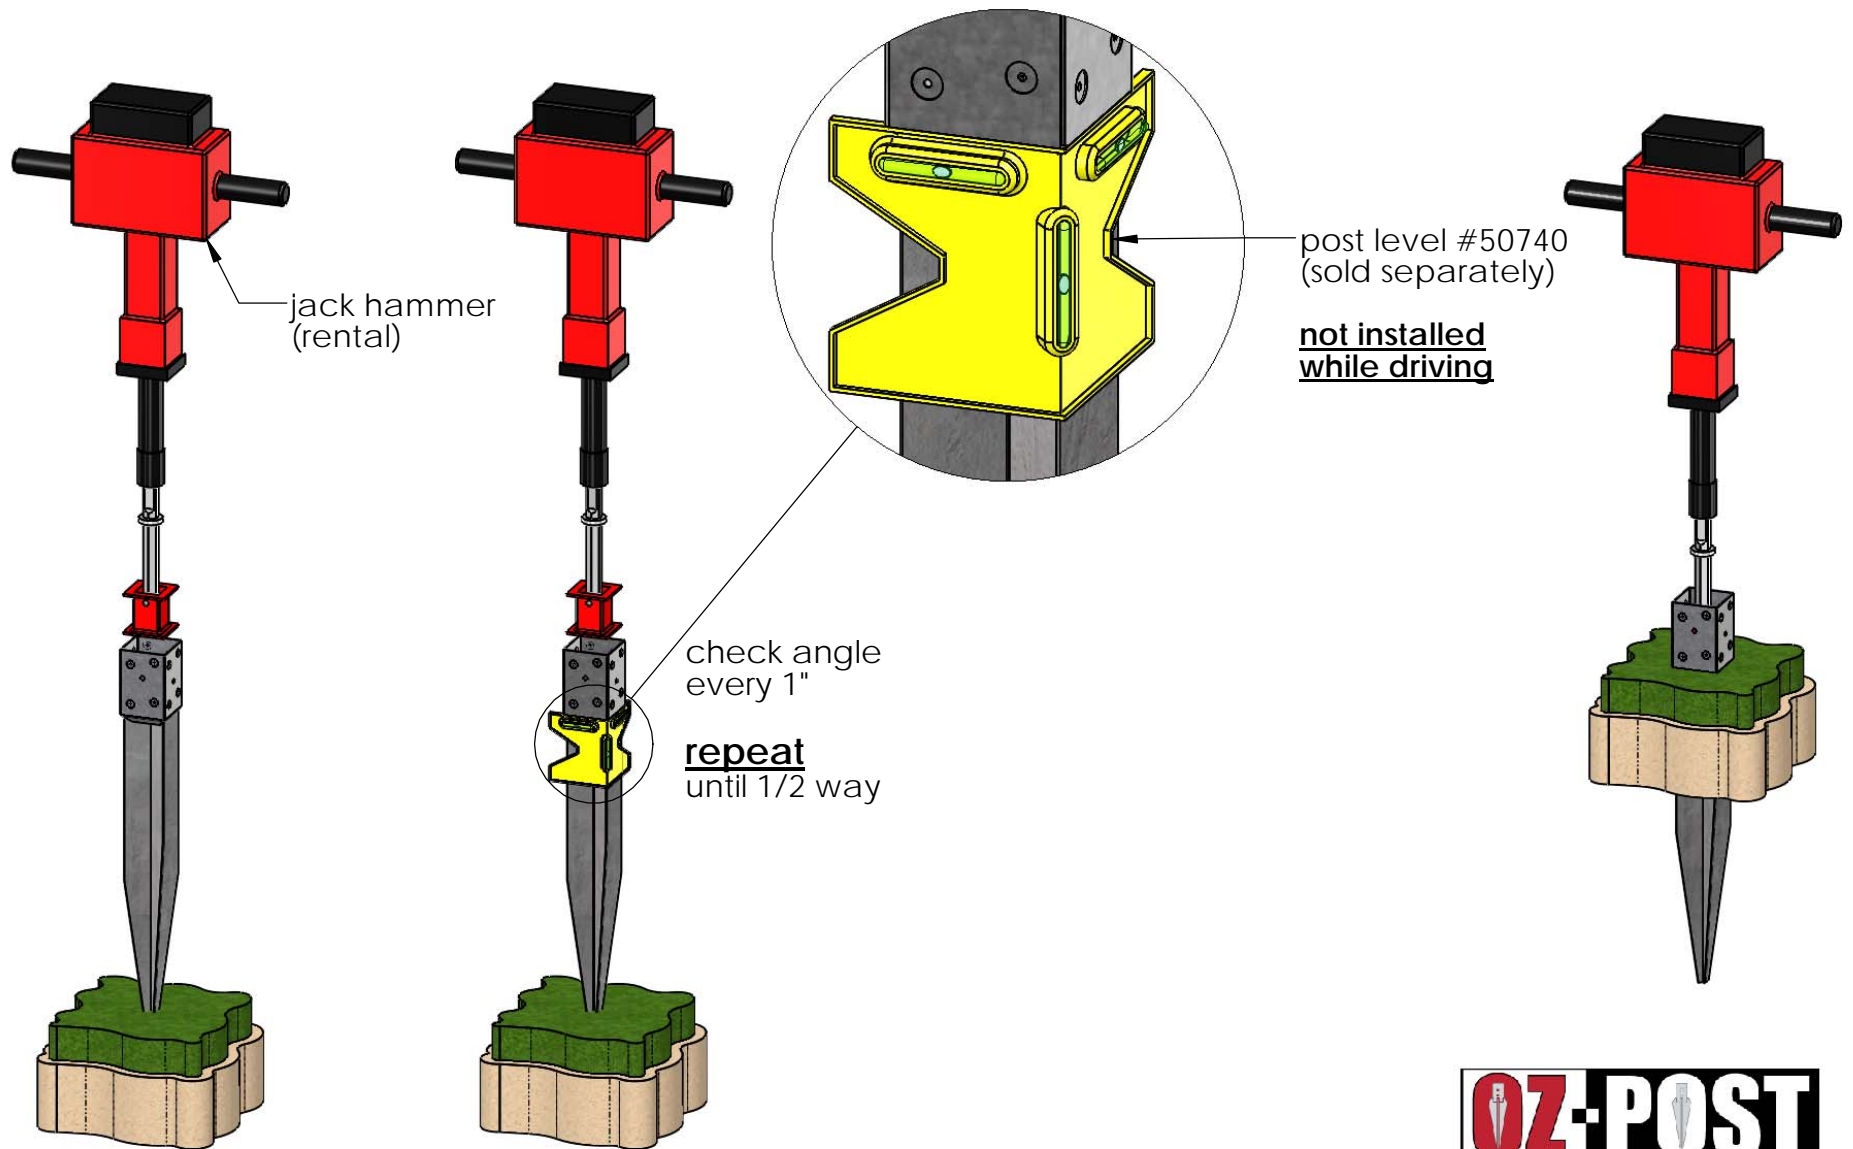


JDK installation


Installation Instructions, Wood Post Anchors

OZ-POST
instant post holes

OZCO BUILDING PRODUCTS

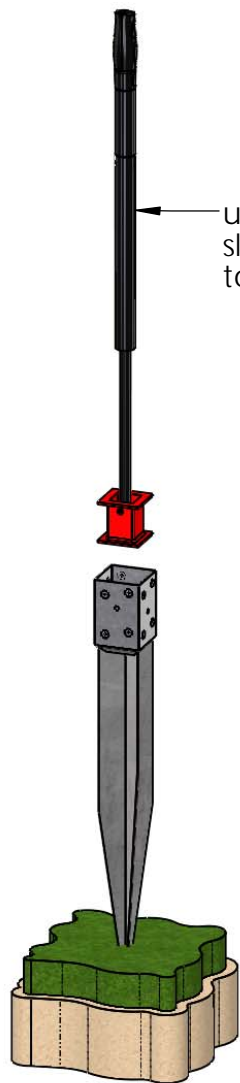


upper section
slides up & down
to drive post anchor

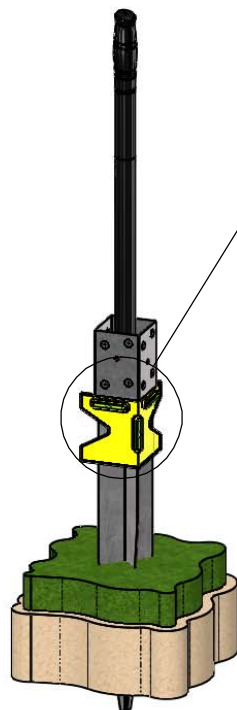


check angle
every 1"

repeat
until 1/2 way

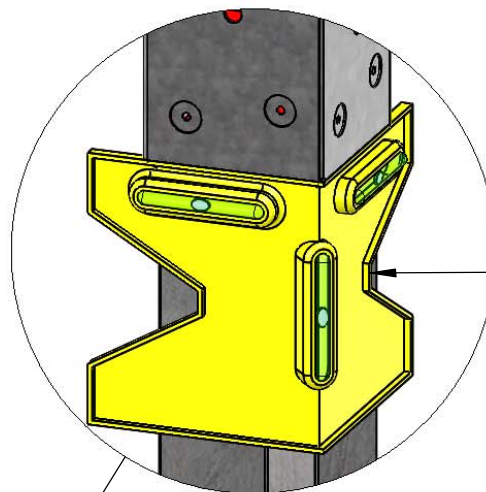

post level #50740
(sold separately)

not installed
while driving

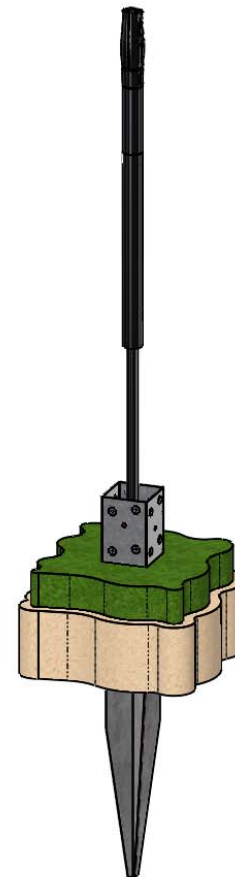


MDK installation

Installation Instructions, Wood Post Anchors

OZ-POST
instant post holes

OZCO BUILDING PRODUCTS

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/16/2018 . This information is updated periodically and should not be relied upon after 2 years from 5/16/2018 . Please visit OZCOBP.com to get current information.

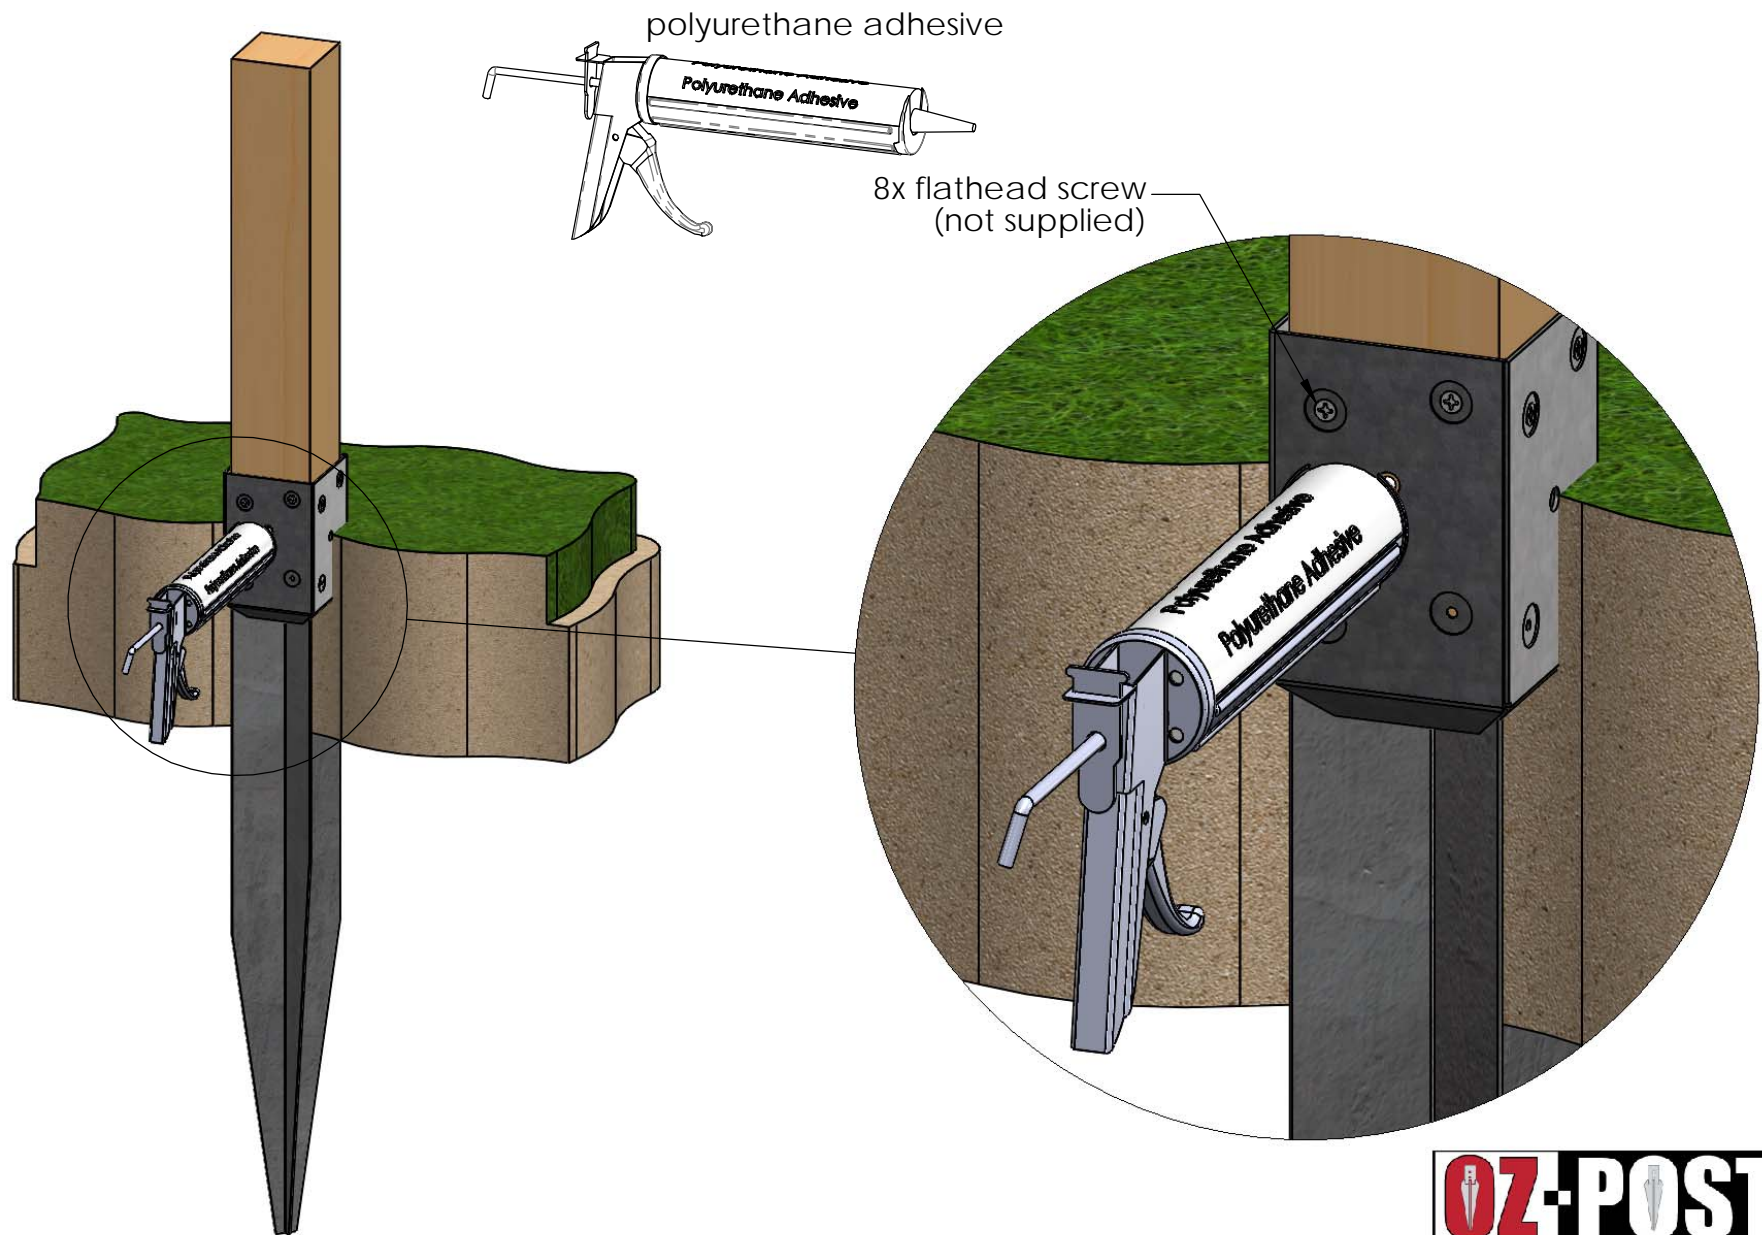


Method 1: halfway depth with screws & adhesive

Installation Instructions, Wood Post Anchors

OZ-POST
instant post holes

OZCO BUILDING PRODUCTS

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/16/2018. This information is updated periodically and should not be relied upon after 2 years from 5/16/2018. Please visit OZCOBP.com to get current information.

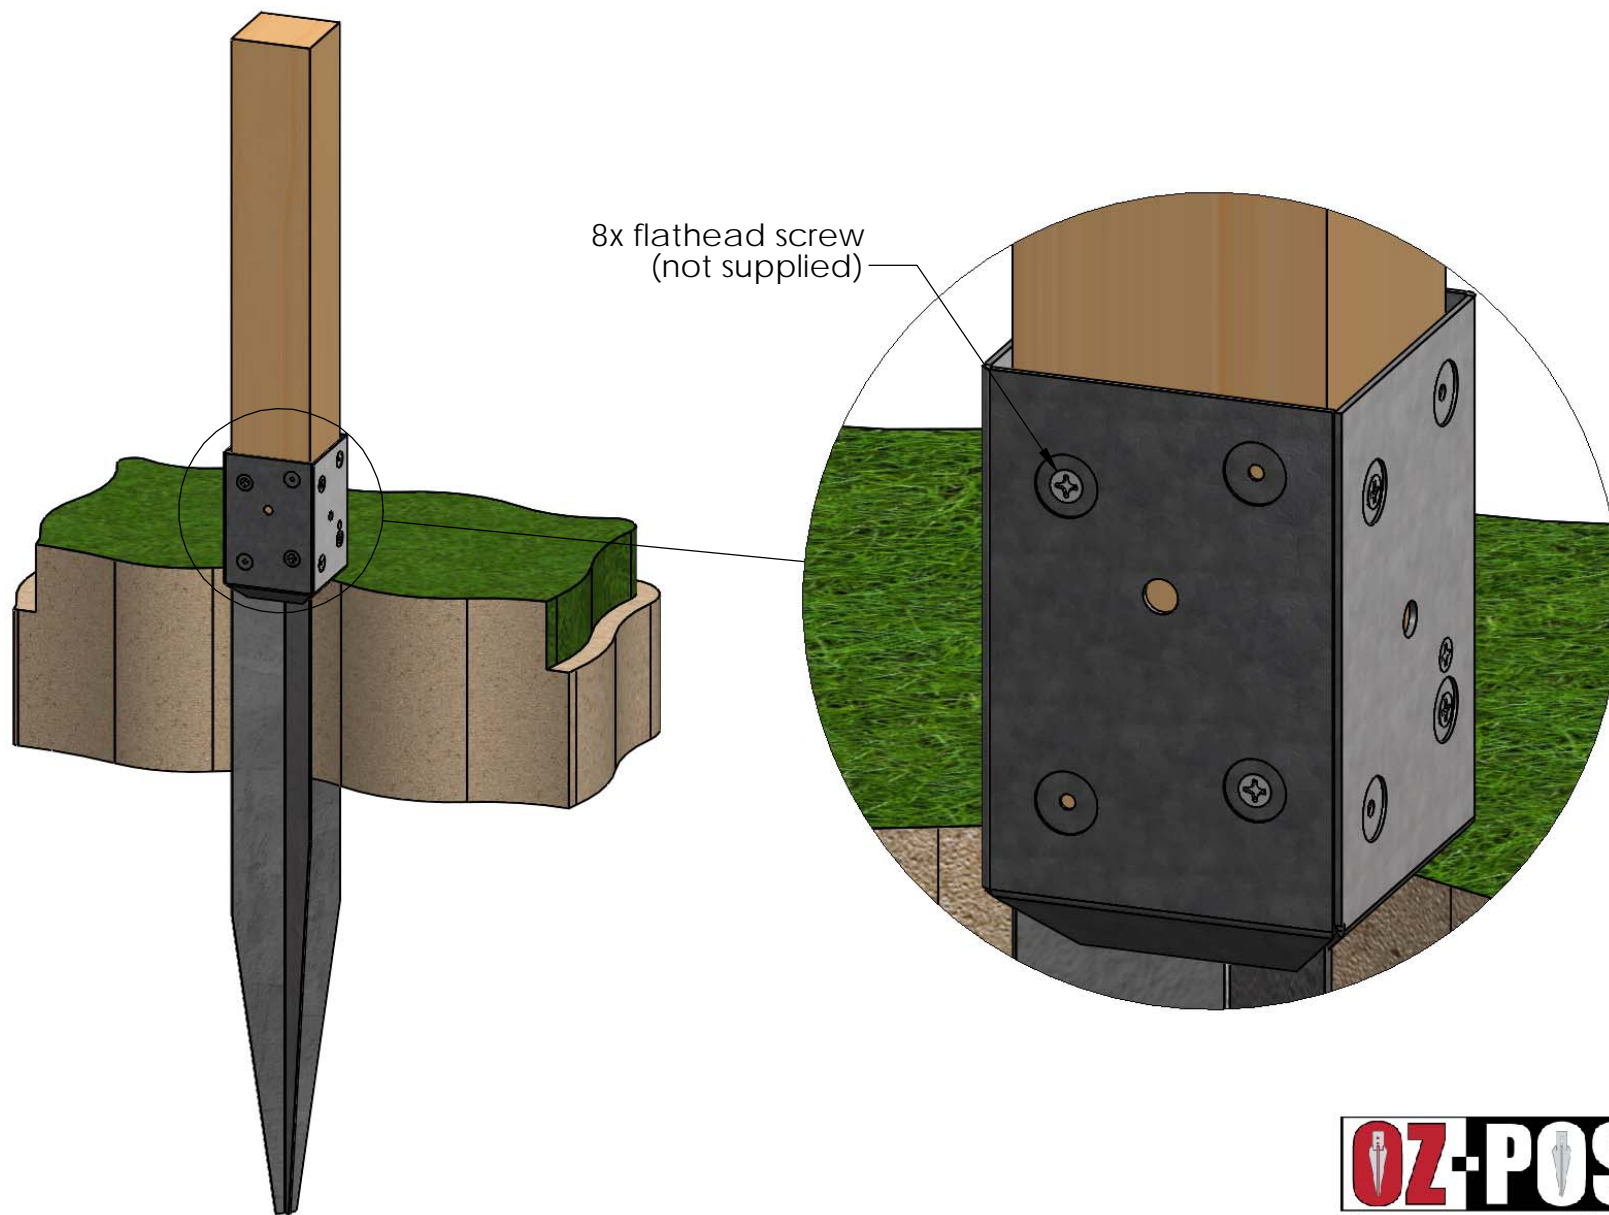


Method 2: ground level depth with screws

Installation Instructions, Wood Post Anchors

OZ-POST
instant post holes

OZCO BUILDING PRODUCTS

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/16/2018. This information is updated periodically and should not be relied upon after 2 years from 5/16/2018. Please visit OZCOBP.com to get current information.

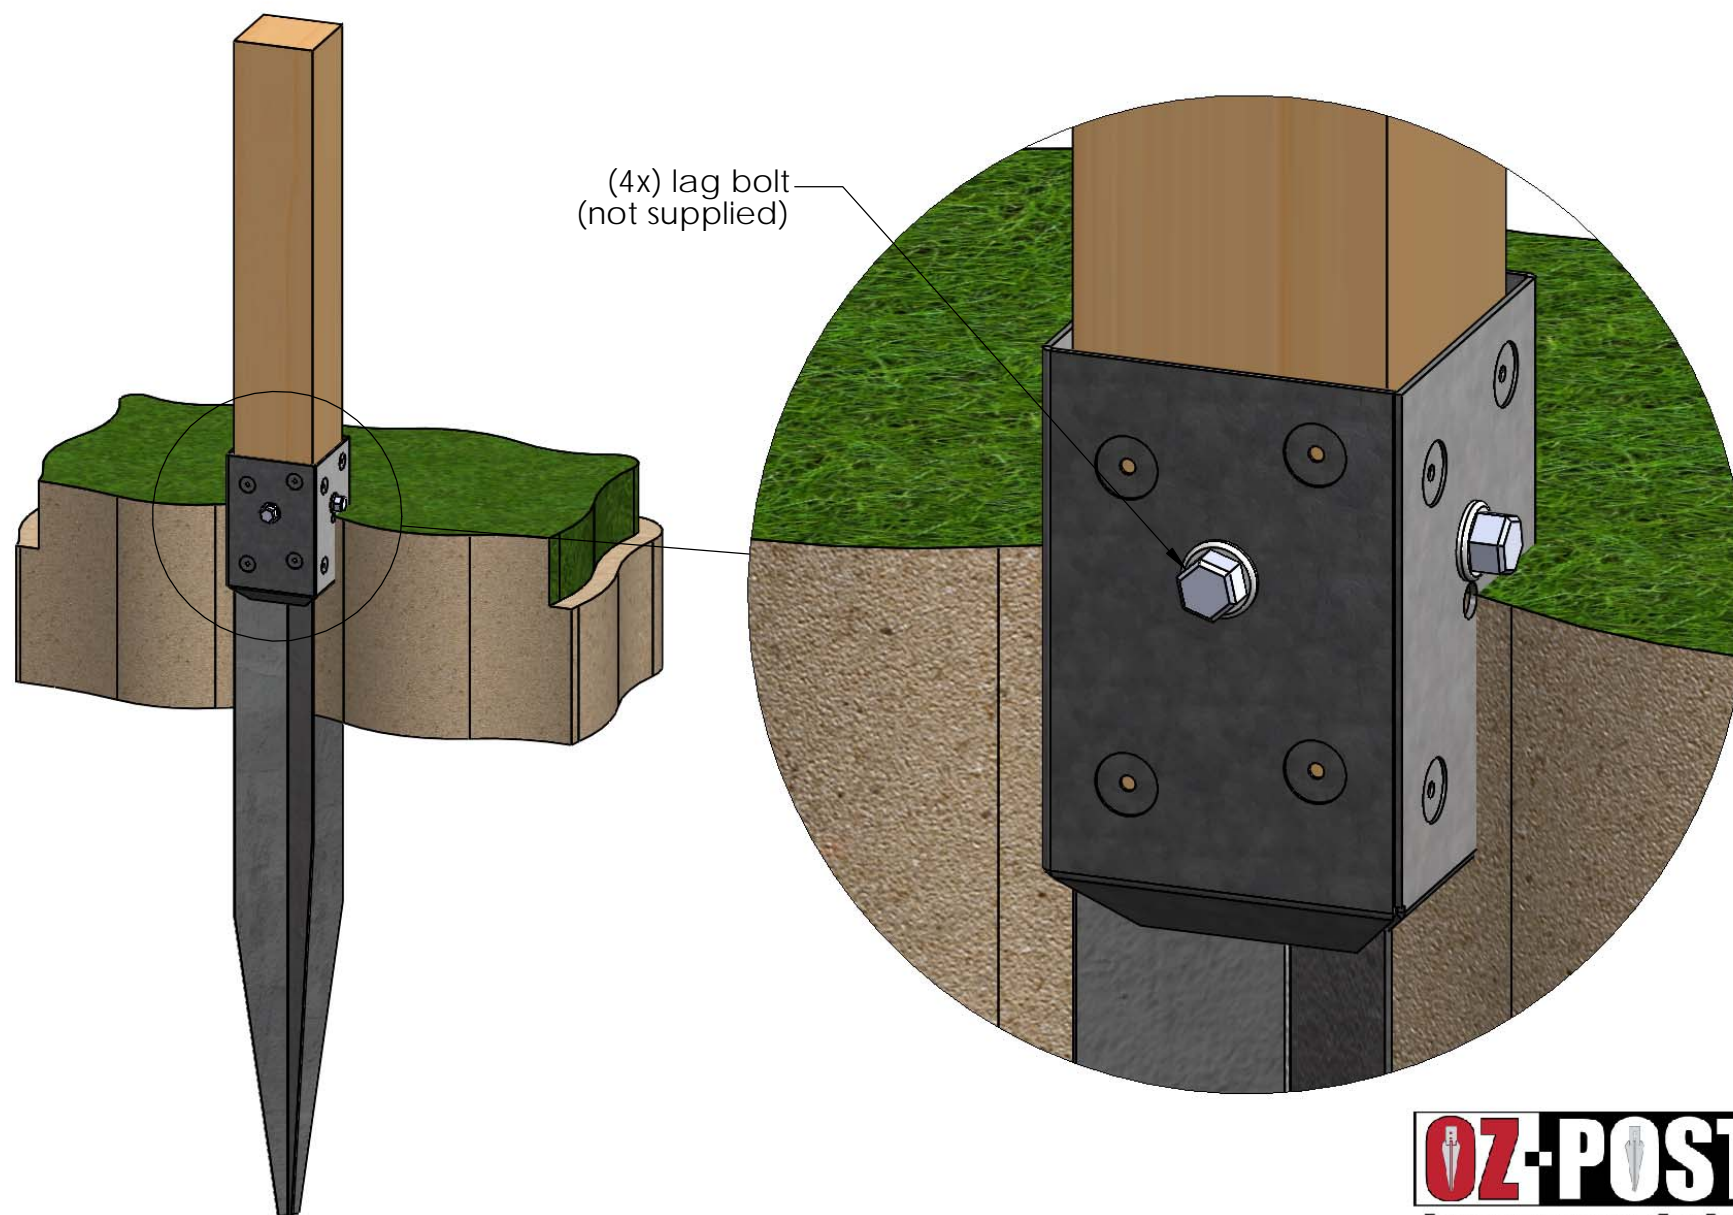


Method 3: halfway depth with lag bolts

Installation Instructions, Wood Post Anchors

OZ-POST
instant post holes

OZCO BUILDING PRODUCTS

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/16/2018 . This information is updated periodically and should not be relied upon after 2 years from 5/16/2018 . Please visit OZCOBP.com to get current information.

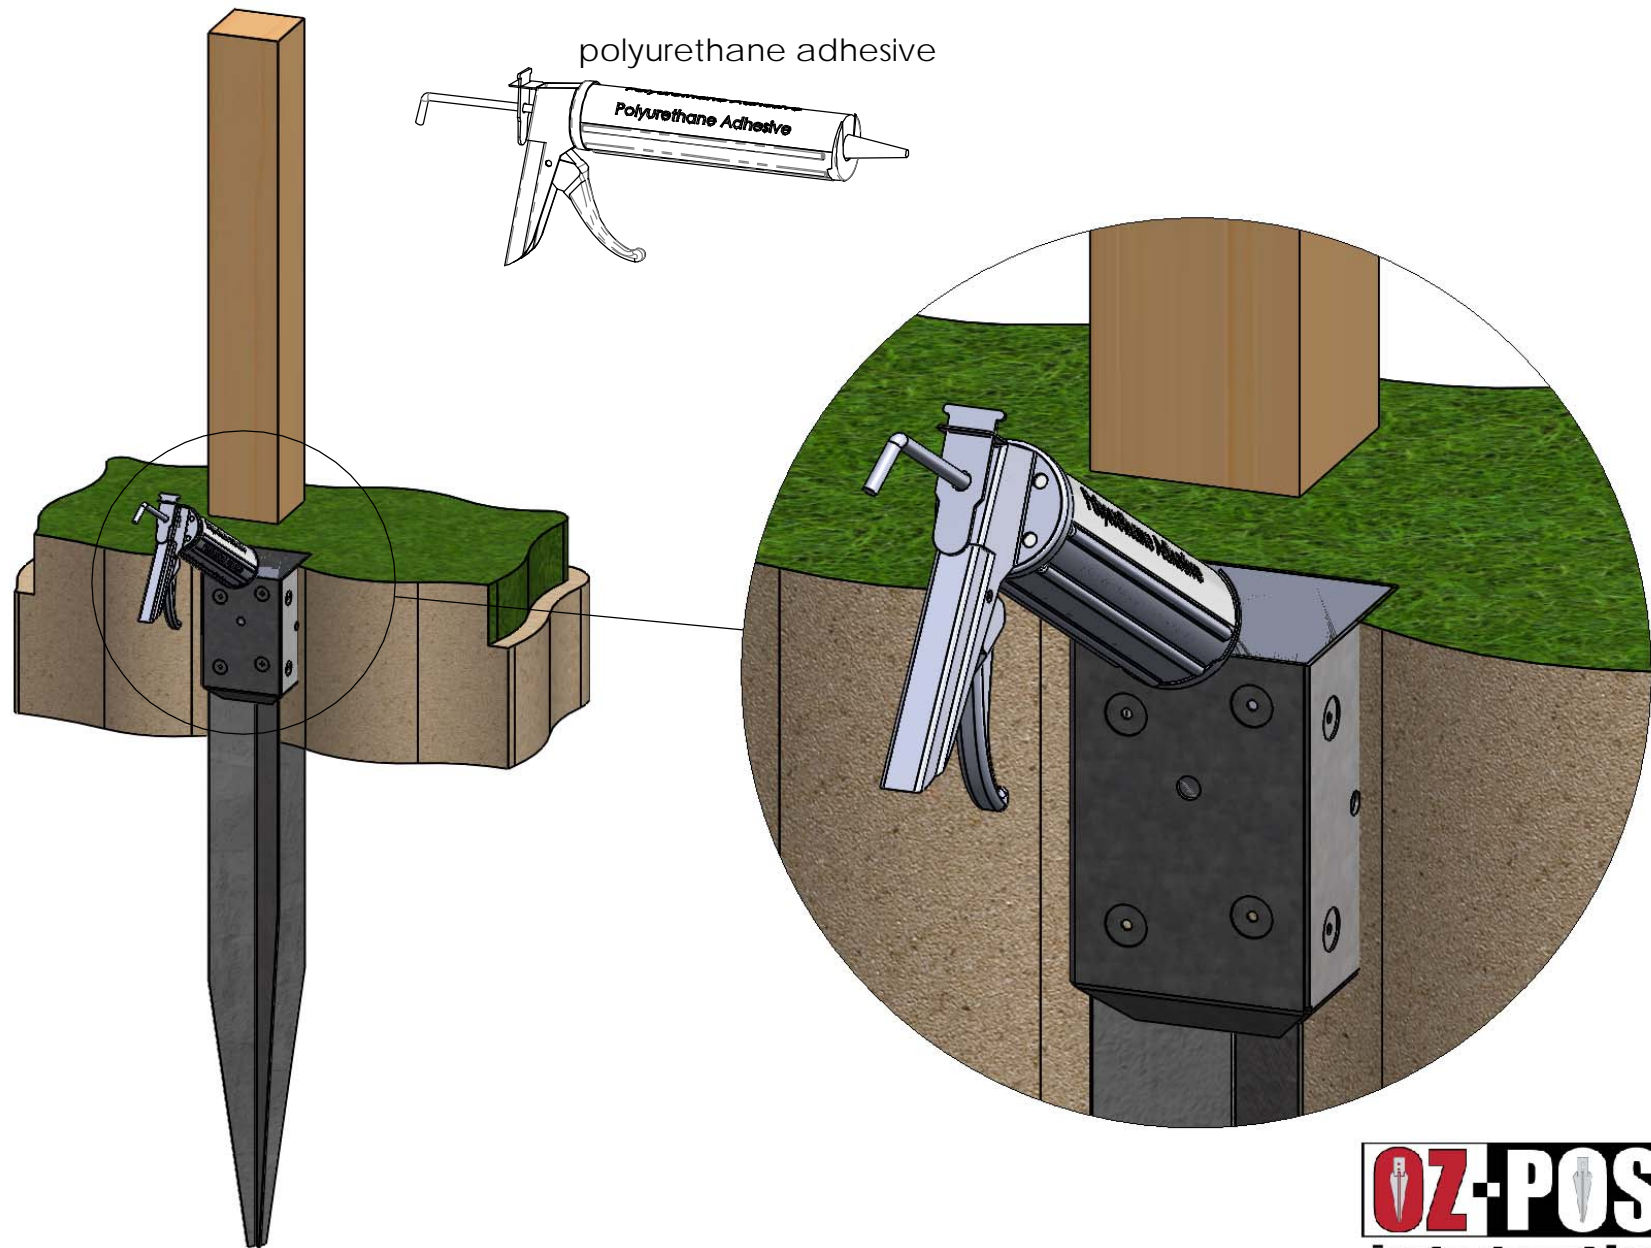




Method 4: full depth with adhesive

Installation Instructions, Wood Post Anchors

OZ-POST
instant post holes

OZCO BUILDING PRODUCTS

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/16/2018 . This information is updated periodically and should not be relied upon after 2 years from 5/16/2018 . Please visit OZCOBP.com to get current information.

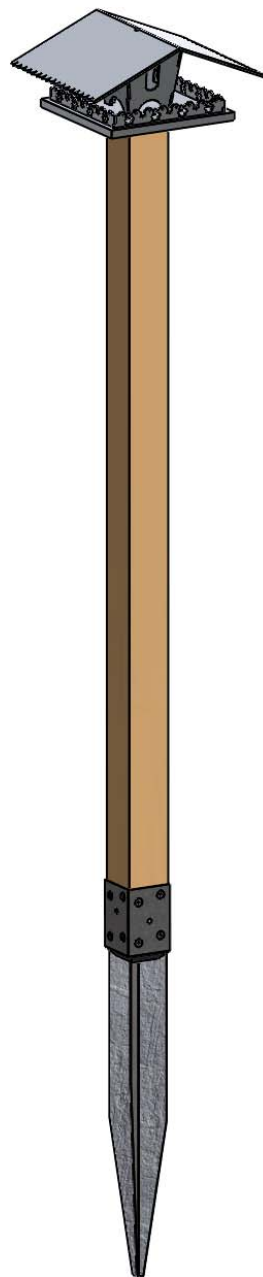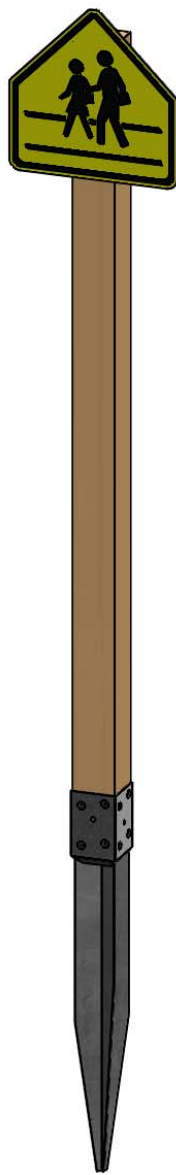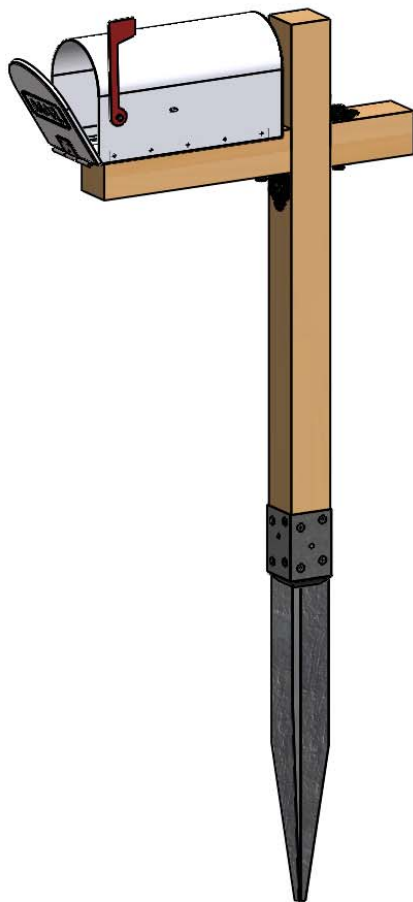


Idea's

Installation Instructions, Wood Post Anchors

OZ-POST
instant post holes


OZCO BUILDING PRODUCTS

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/16/2018 . This information is updated periodically and should not be relied upon after 2 years from 5/16/2018 . Please visit OZCOBP.com to get current information.

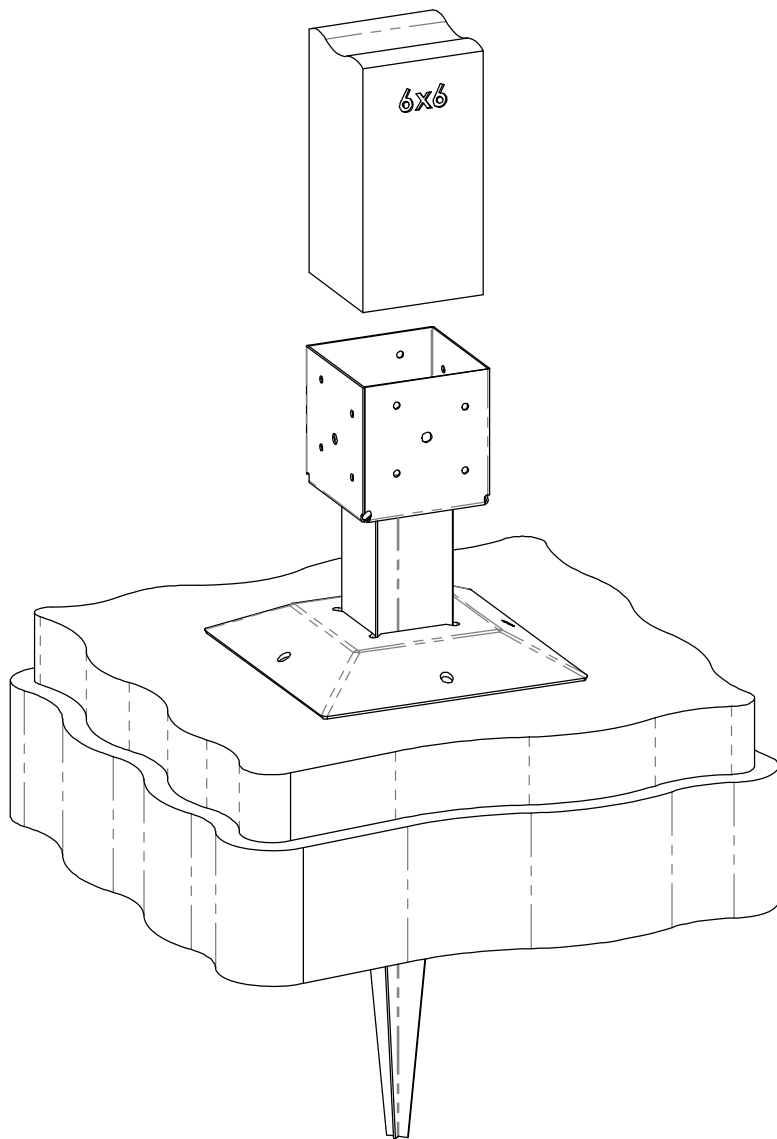

with 50880

Installation Instructions, Wood Post Anchors

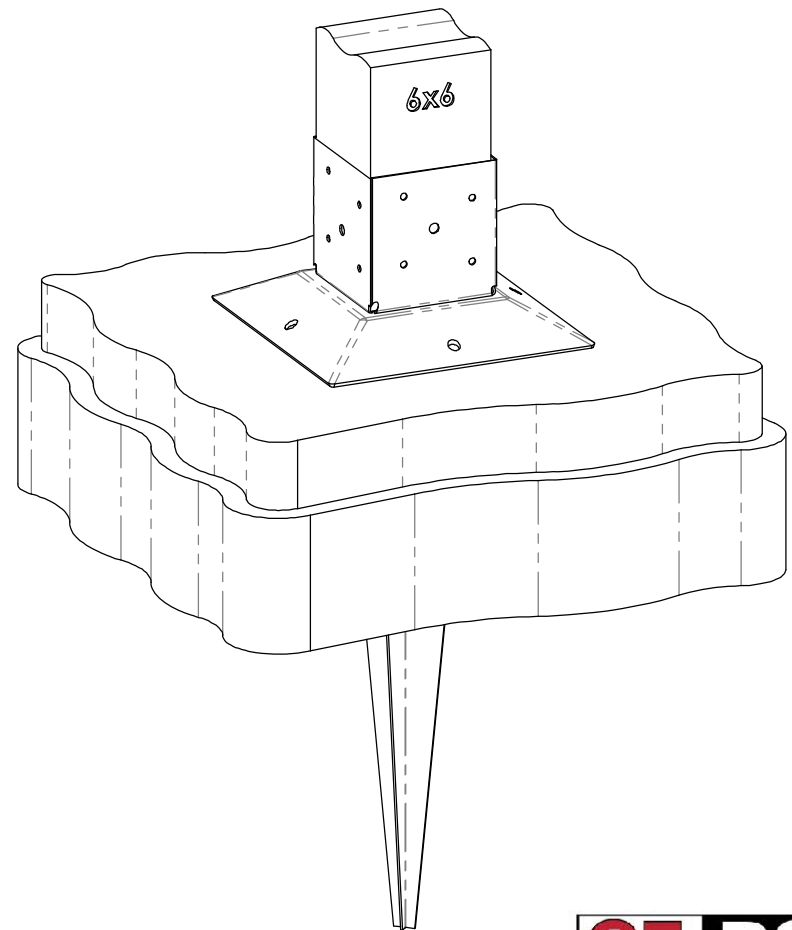


OZ-POST
instant post holes

OZCO BUILDING PRODUCTS

Accessory 50880

for use with the following ONLY

30180 T4-600 24" 4x4
30160 T4-850 34" 4x4
30200 C4-850 34" 4x4
30380 T46-850 36" 4x6
30400 T6-850 36" 6x6
30410 T6-700 32" 6x6

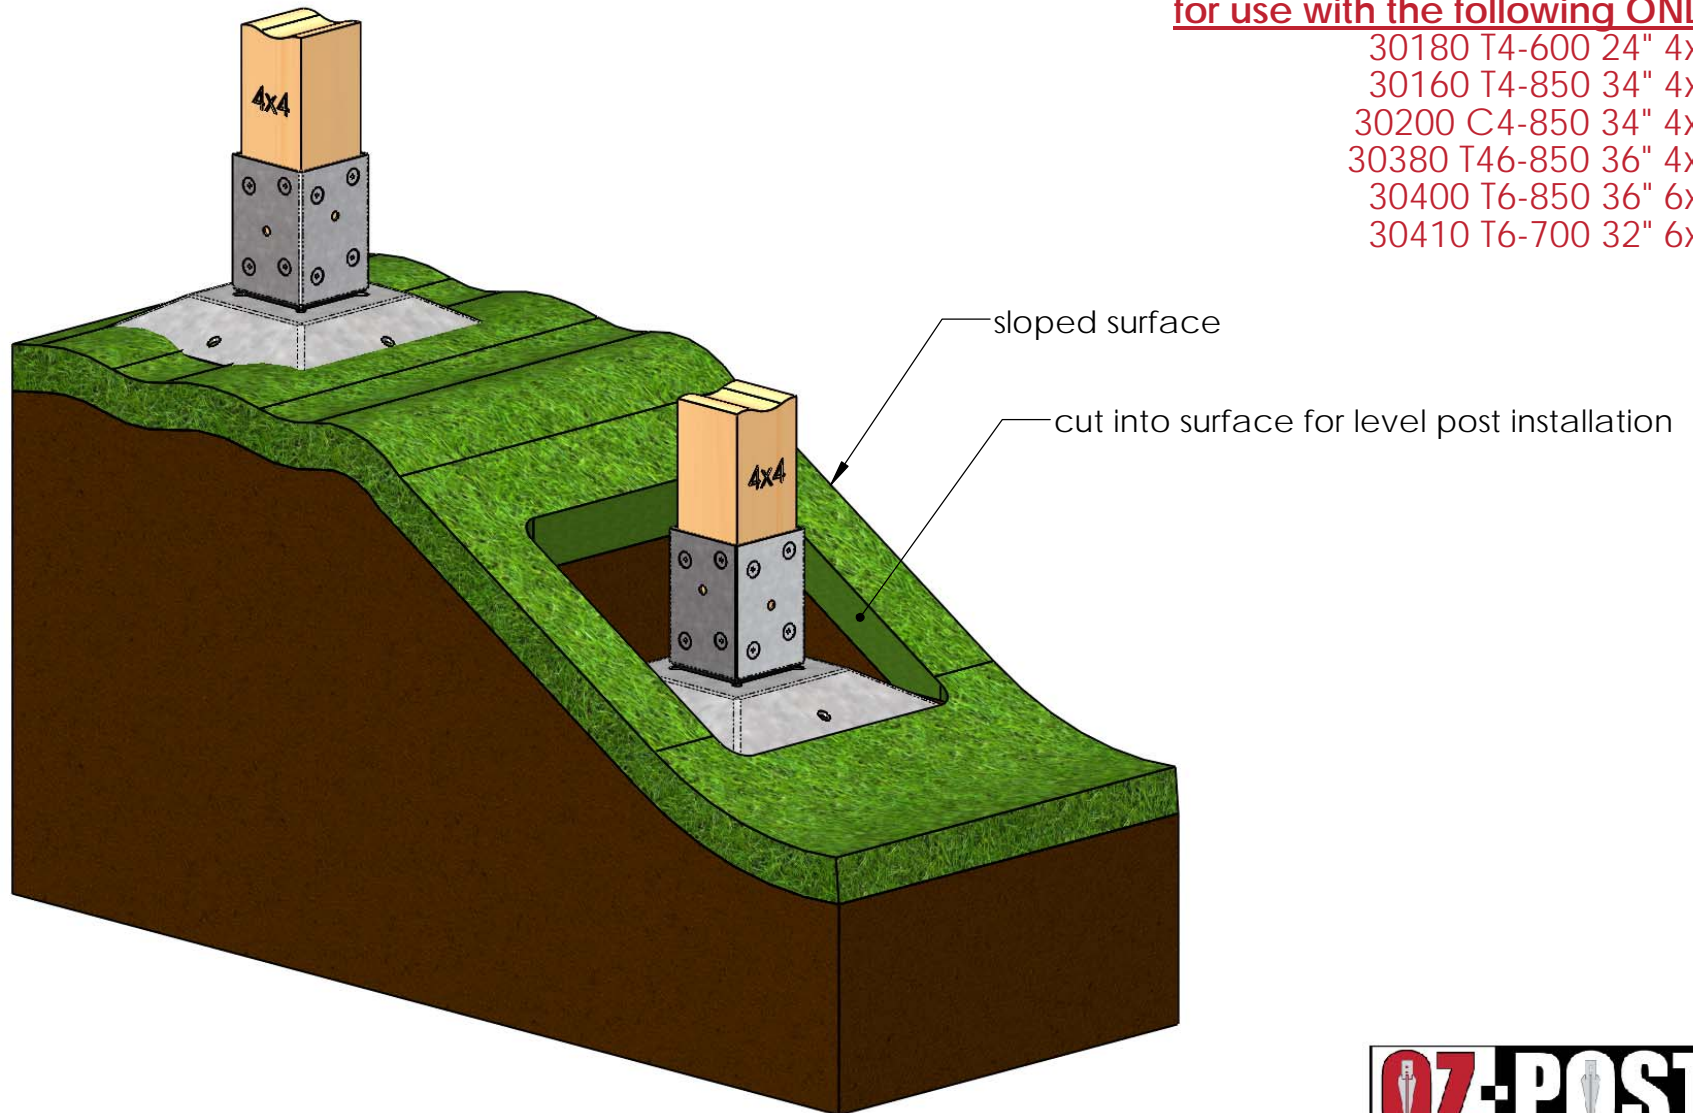

Sloped Surface Installation

Installation Instructions, Wood Post Anchors

OZ-POST
instant post holes

OZCO BUILDING PRODUCTS