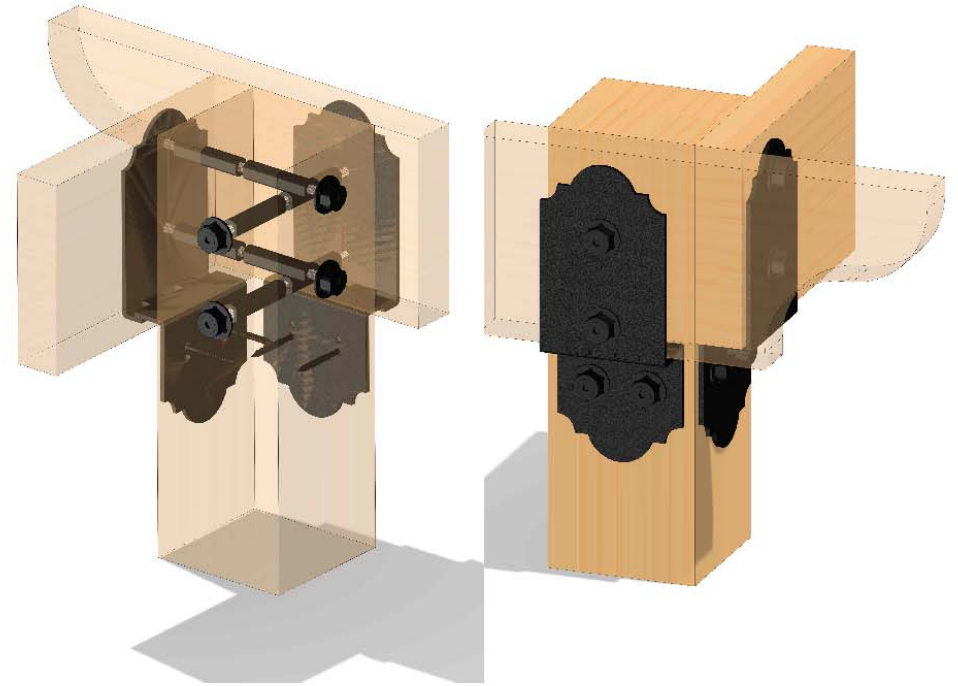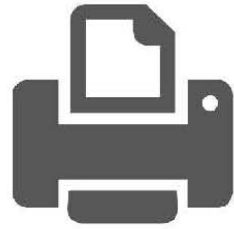# Installation Instructions, 56636 Bolt Offset (P2B-BO-LS) 51736 Bolt Offset (P2B-BO-IW)
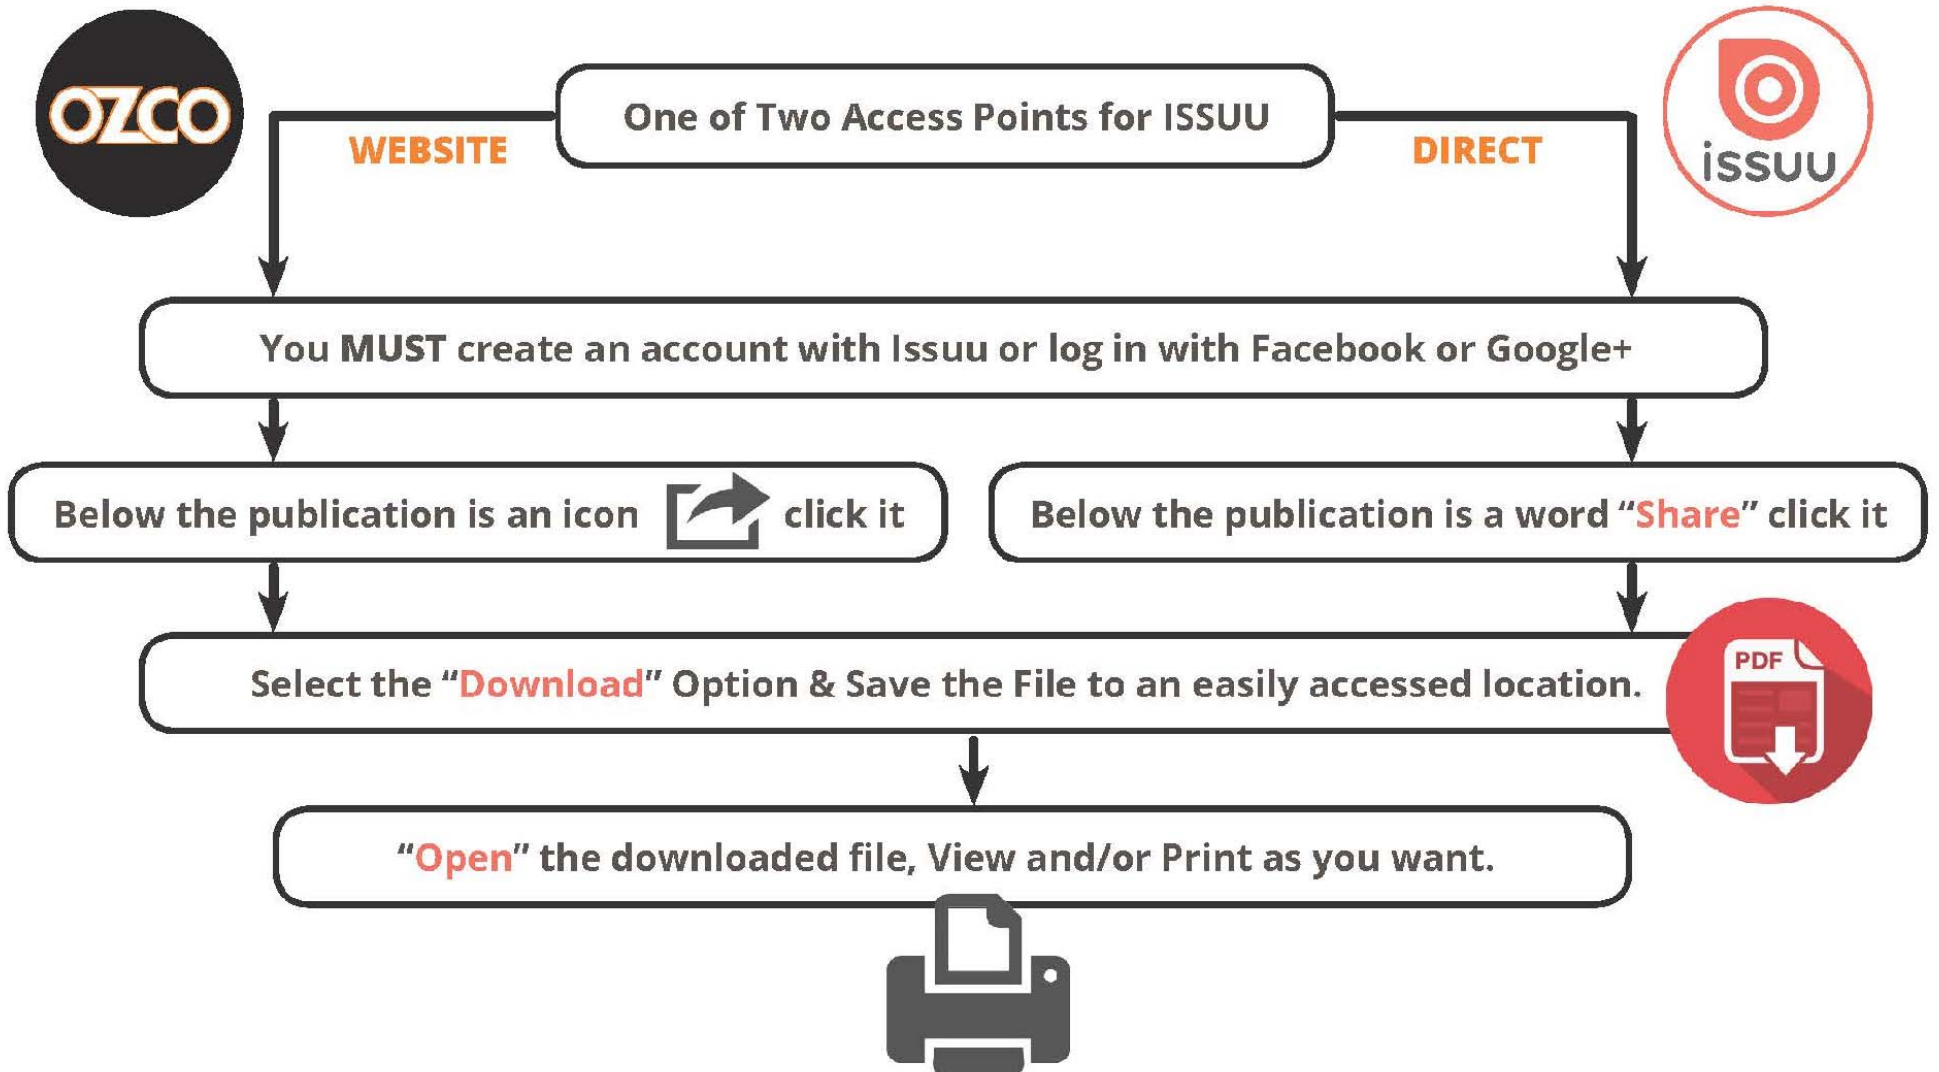
Typical Installation with
Timber Bolts (sold separately)
Laredo Sunset shown

OWT Ornamental Wood Ties

OZCO BUILDING PRODUCTS

1

OZCO

Printing Documents from ISSUU

Unfortunately, there is currently no way to print content directly through issuu. To print a publication, you will need to download it and print it from your computer.

One of Two Access Points for ISSUU

WEBSITE

DIRECT

You **MUST** create an account with Issuu or log in with Facebook or Google+

Below the publication is an icon click it

Below the publication is a word "Share" click it

Select the "Download" Option & Save the File to an easily accessed location.

"Open" the downloaded file, View and/or Print as you want.

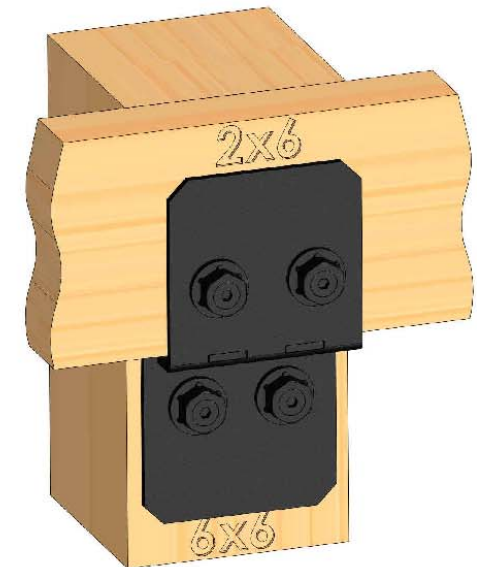# Laredo Sunset & Ironwood

Laredo Sunset
(566XX series)

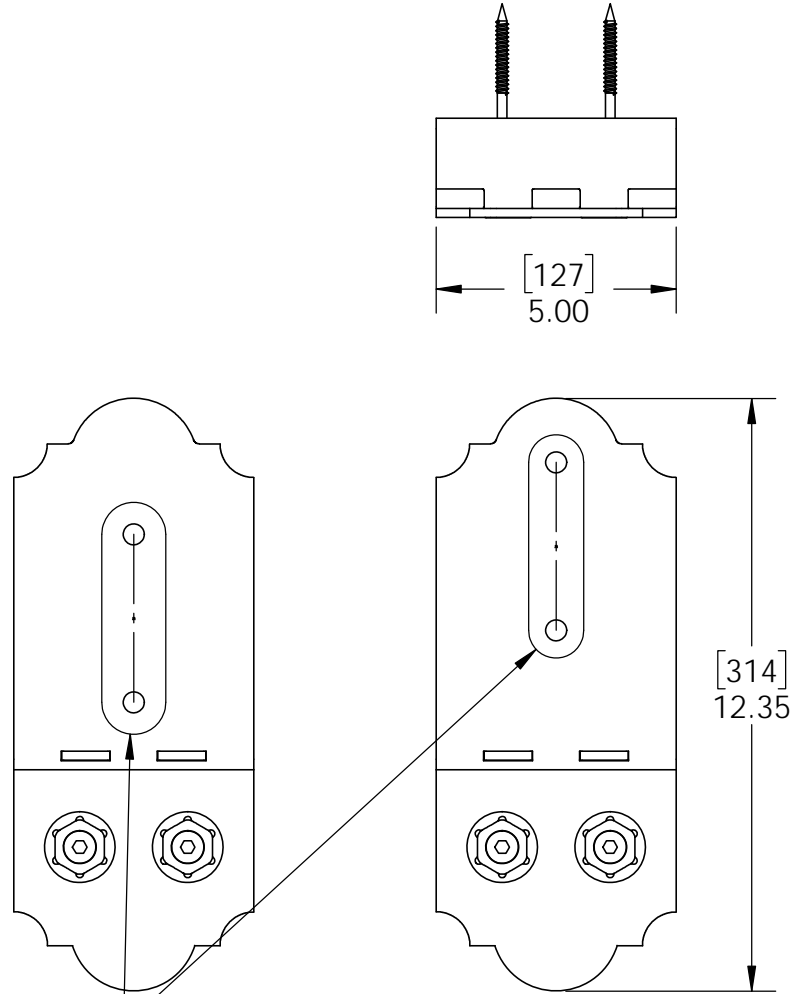2 great styles

Same functionality

choose your
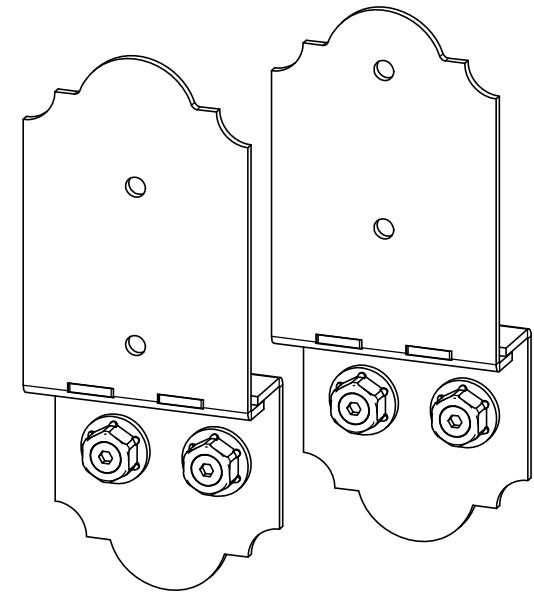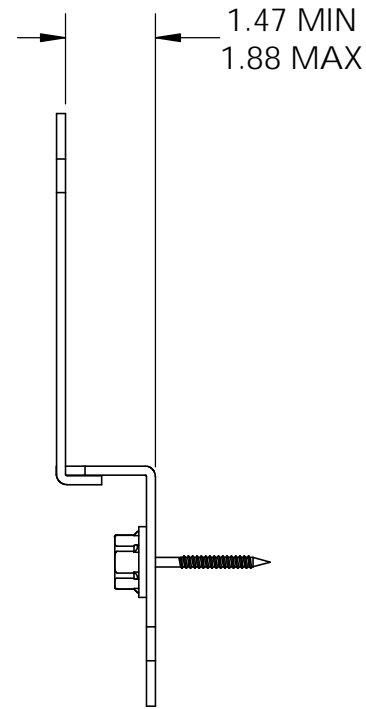connection lifestyle

both styles available for
most products

Ironwood
(517XX series)

OWT Ornamental Wood Ties

OZCO BUILDING PRODUCTS
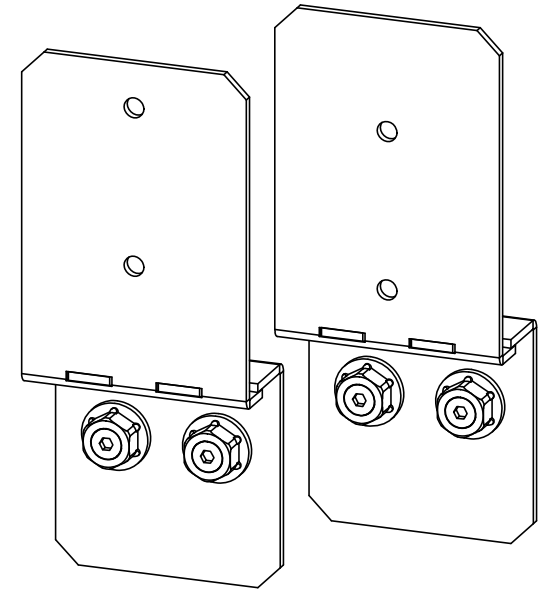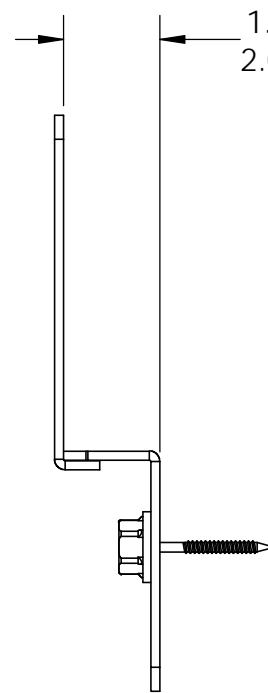
[127]
5.00

1.47 MIN
1.88 MAX

[314]
12.35

note hole location
difference
between 2
included plates

kit contains 2 assemblies (shown)

56636
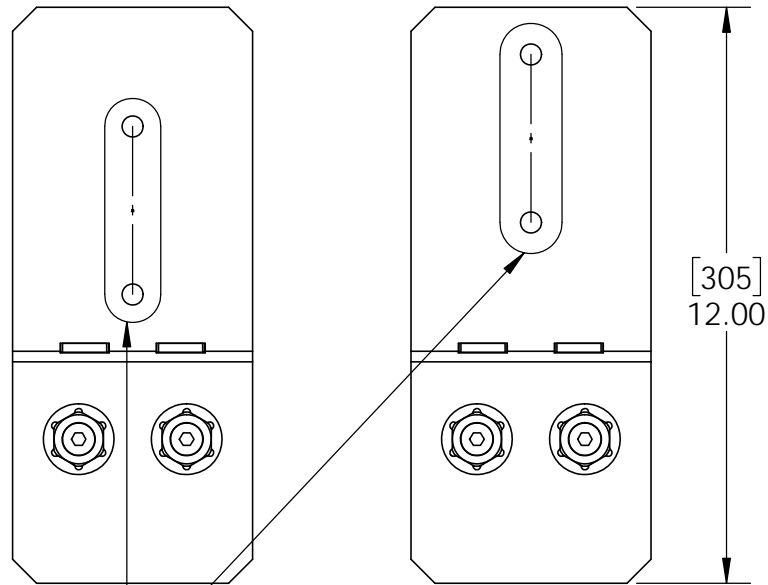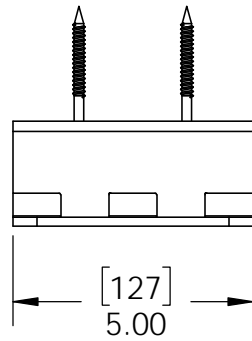
OWT **Ornamental Wood Ties**

OZCO BUILDING PRODUCTS

[127]
5.00

1.50 MIN
2.00 MAX

[305]
12.00

kit contains 2 assemblies (shown)

note hole location
difference
between 2
included plates

51736

Installation Instructions, 56636

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/3/2017 . This information is updated periodically and should not be relied upon after 2 years from 5/3/2017 . Please visit OZCOBP.com to get current information.   14
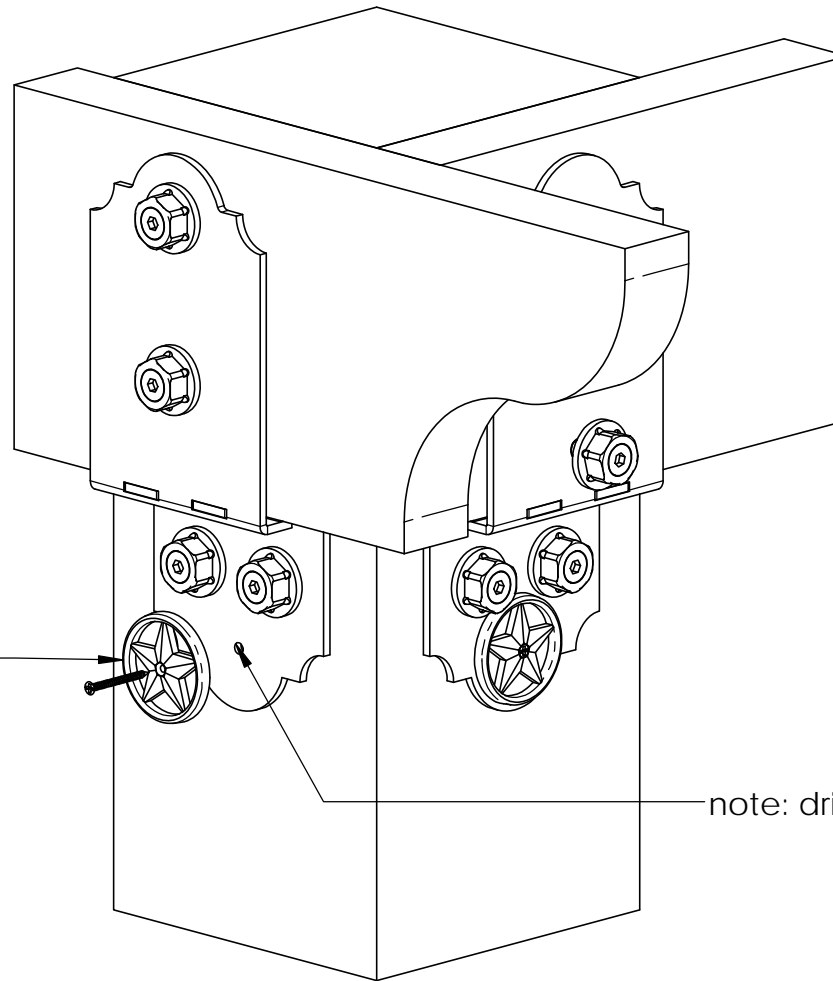
Suggested Tools
(others may be required)

Installation Instructions, 56636

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/3/2017 . This information is updated periodically and should not be relied upon after 2 years from 5/3/2017 . Please visit OZCOBP.com to get current information.
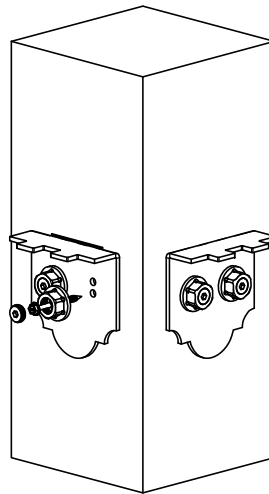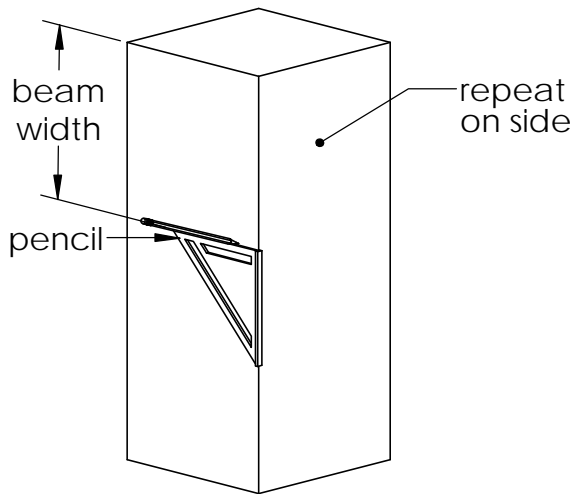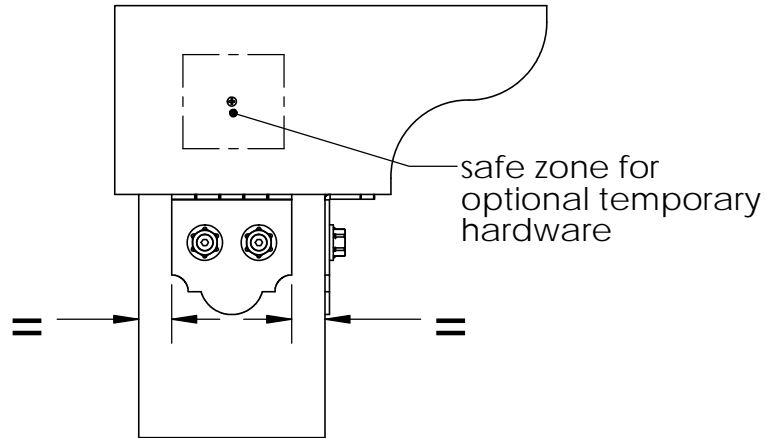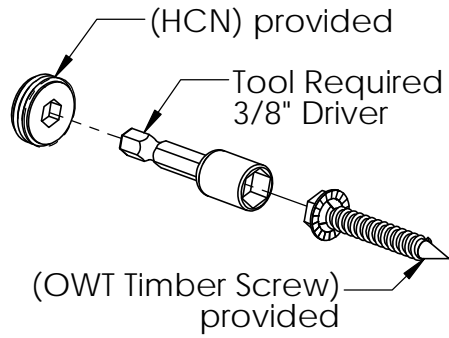
6

![OWT Ornamental Wood Ties]
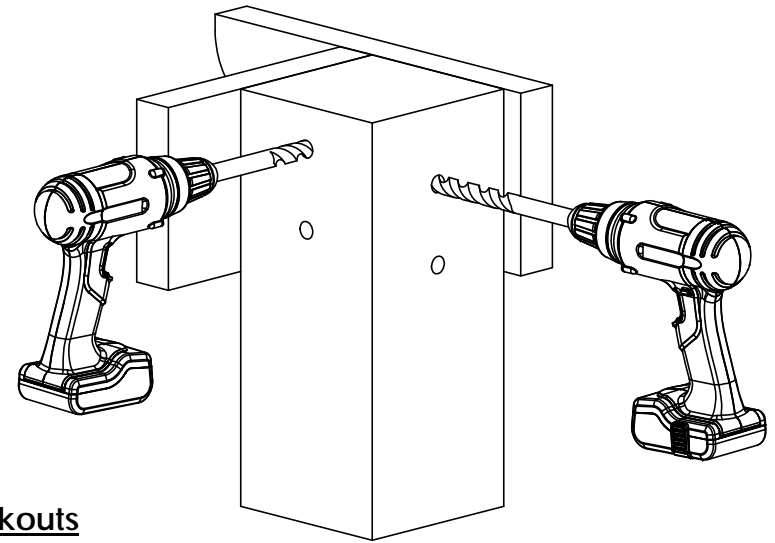
56623 option
(sold separately)

note: drill hole BEFORE step 1
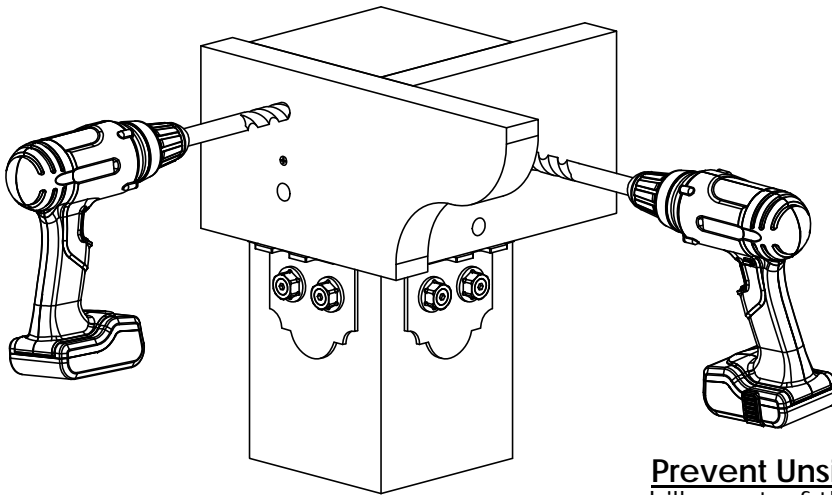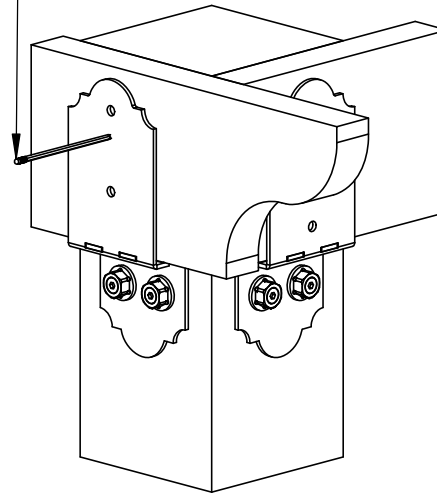
optional accessory

Installation Instructions, 56636

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/3/2017 . This information is updated periodically and should not be relied upon after 2 years from 5/3/2017 . Please visit OZCOBP.com to get current information.

7

(HCN) provided

Tool Required
3/8" Driver

(OWT Timber Screw)
provided

safe zone for
optional temporary
hardware

＝ ＝

optional screw or nail
temporary hardware

beam
width

repeat
on side

pencil

step 1

Installation Instructions, 56636

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/3/2017 . This information is updated periodically
and should not be relied upon after 2 years from 5/3/2017 . Please visit OZCOBP.com to get current information.   8
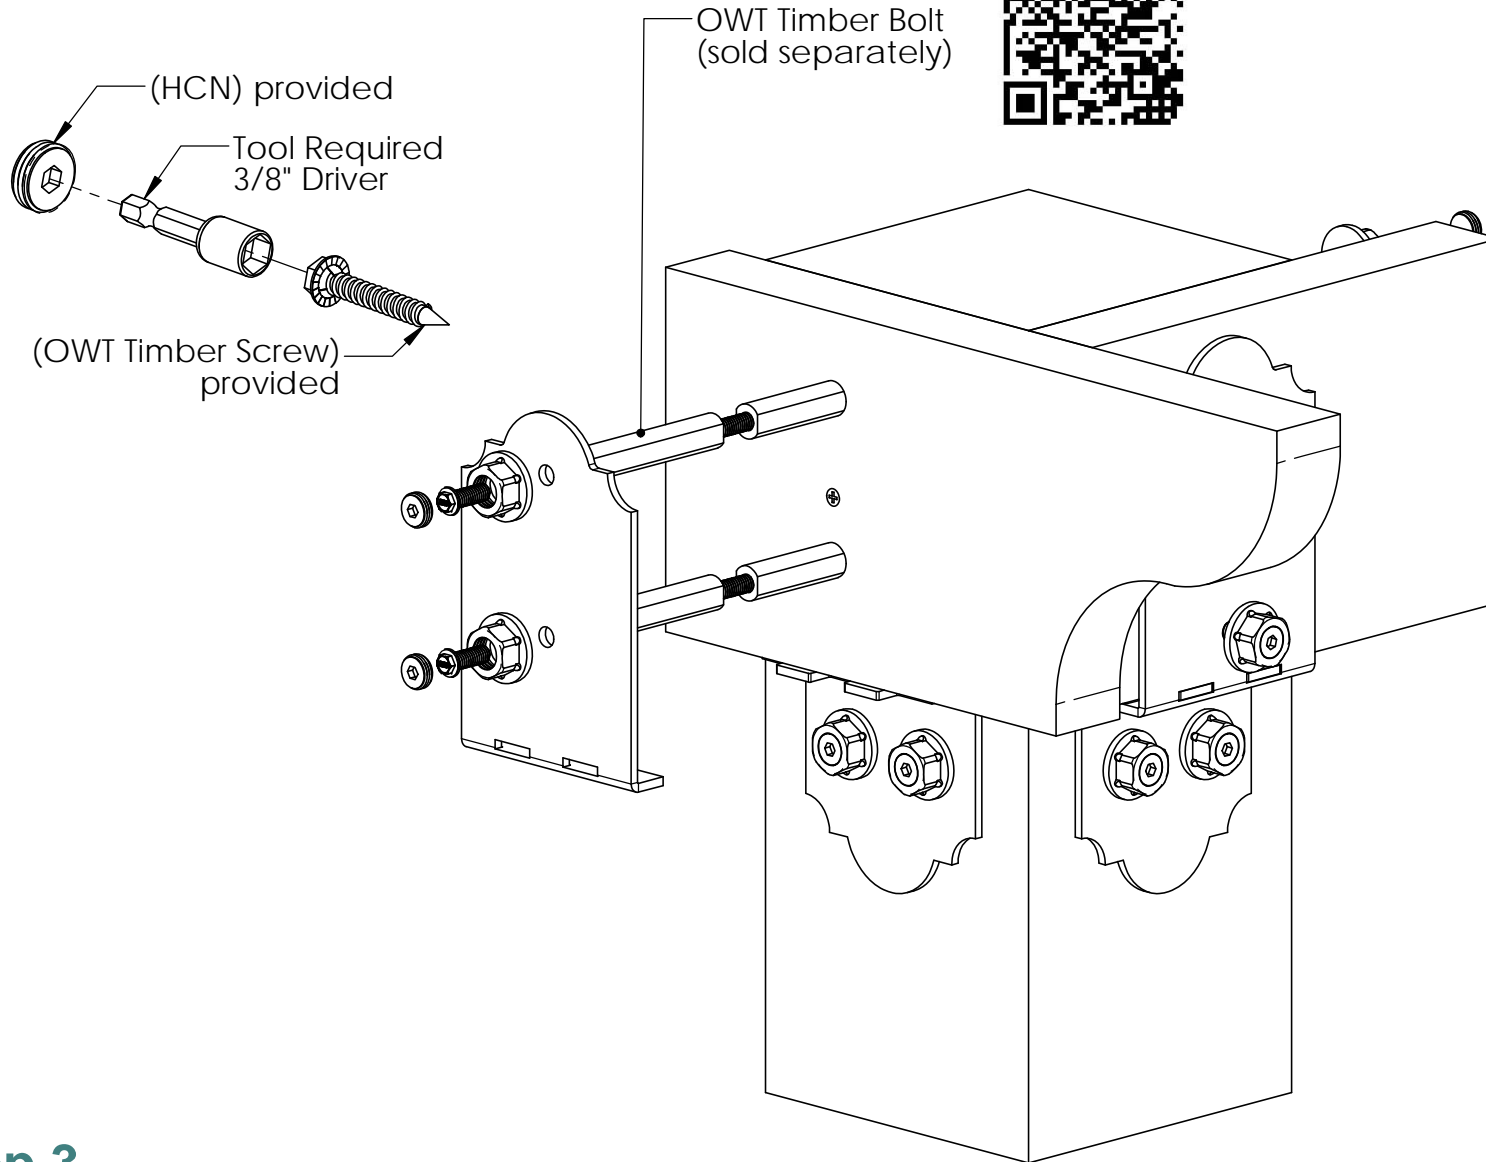
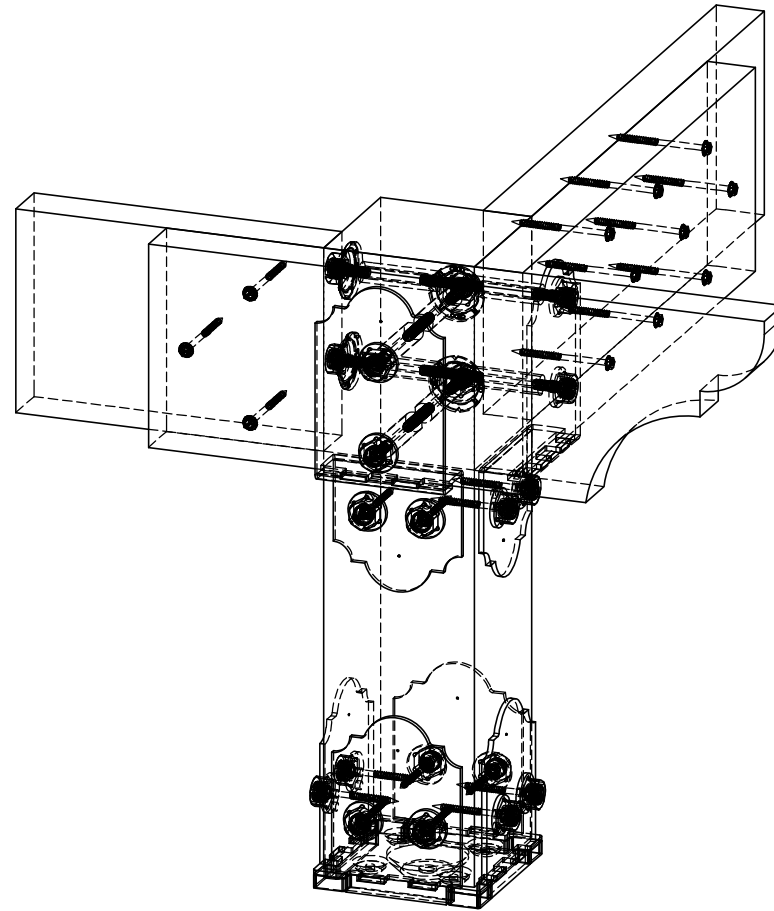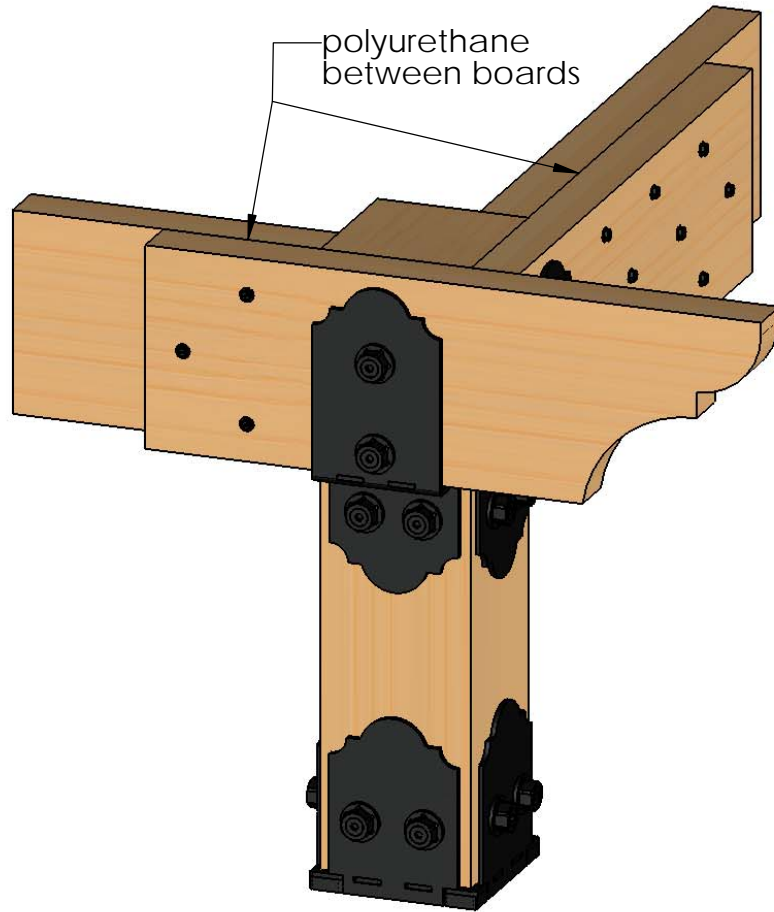temporarily install plates
and mark center of holes

Prevent Unsightly Breakouts
drill most of the way from one
side DO NOT breakout then
repeat from opposite side

step 2

Installation Instructions, 56636

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/3/2017 . This information is updated periodically
and should not be relied upon after 2 years from 5/3/2017 . Please visit OZCOBP.com to get current information.   9

OWT Timber Bolt
(sold separately)

(HCN) provided

Tool Required
3/8" Driver

(OWT Timber Screw)
provided

step 3

Installation Instructions, 56636
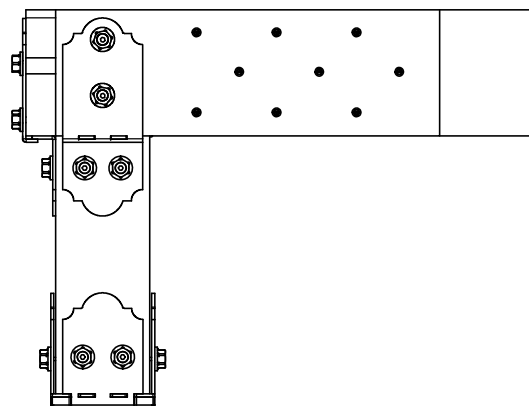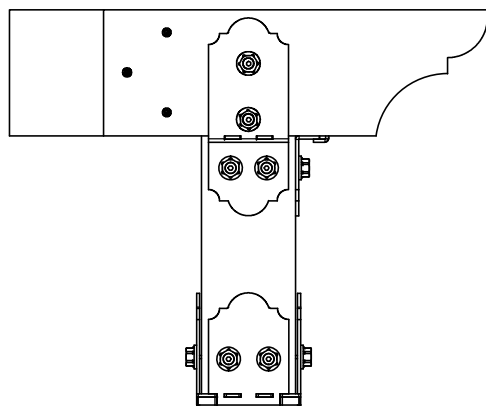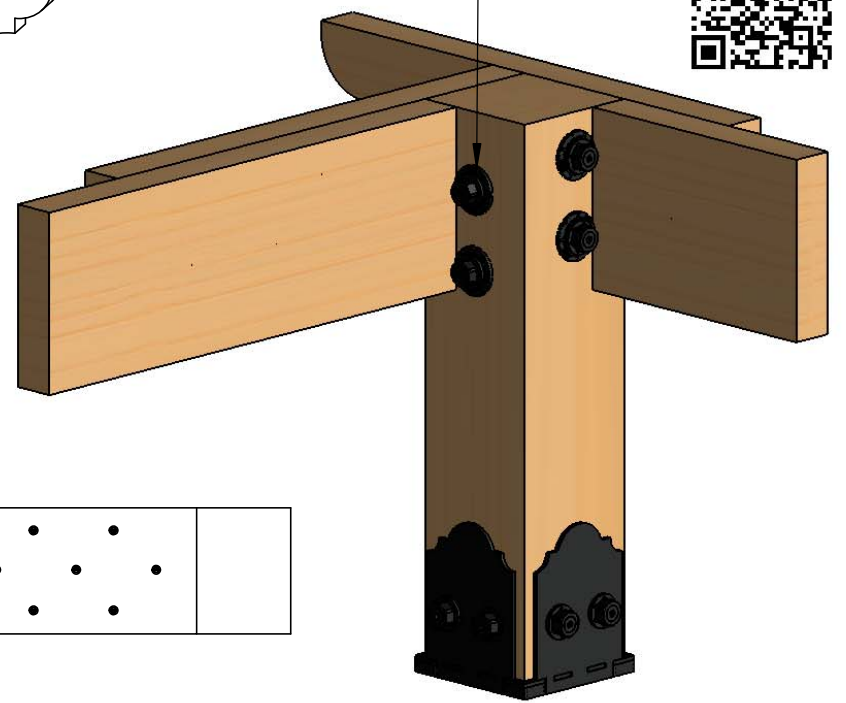
polyurethane
between boards

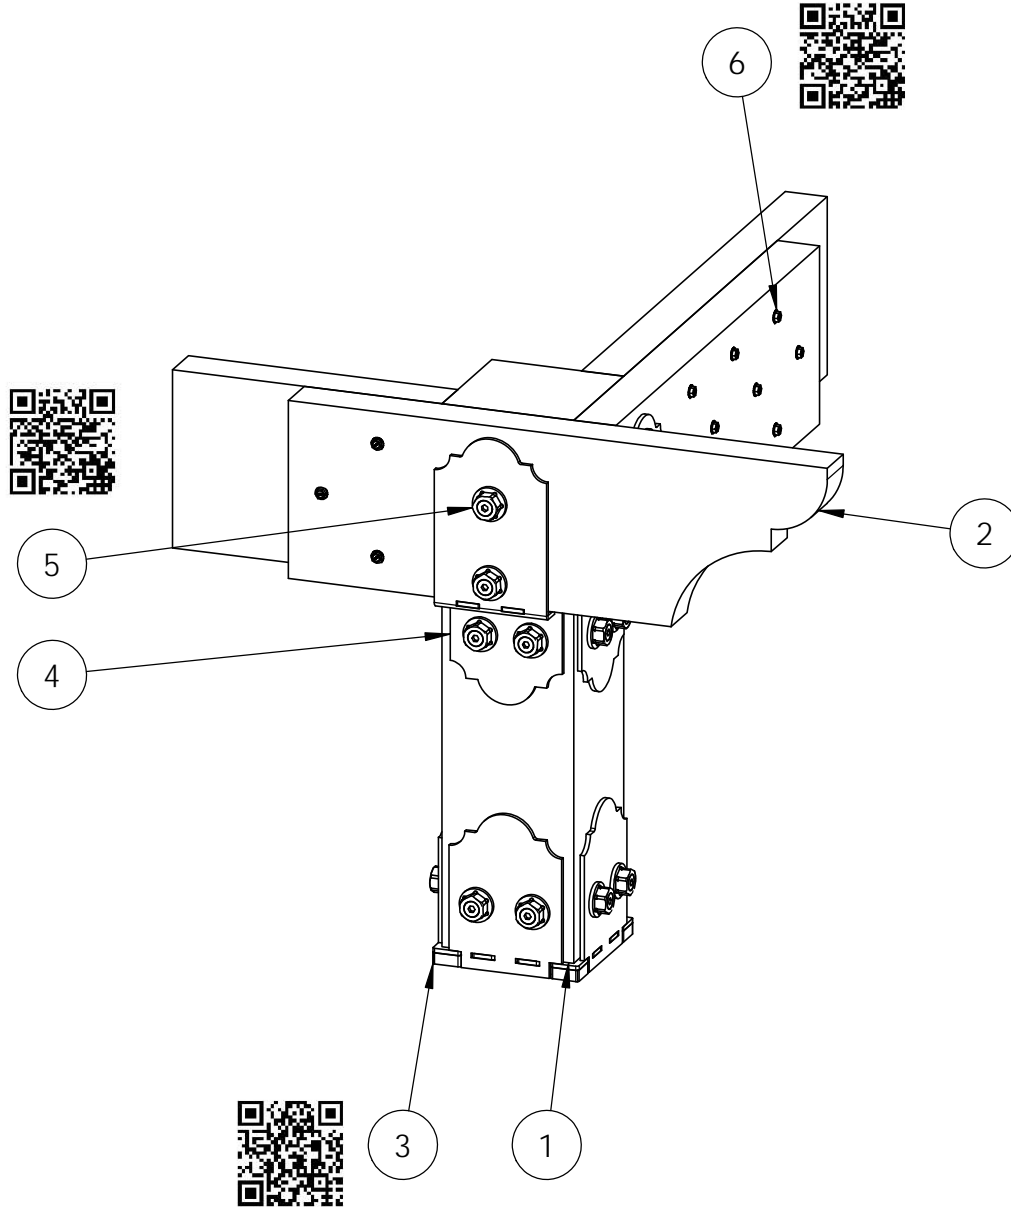# Additional Construction Technique

Installation Instructions, 56636
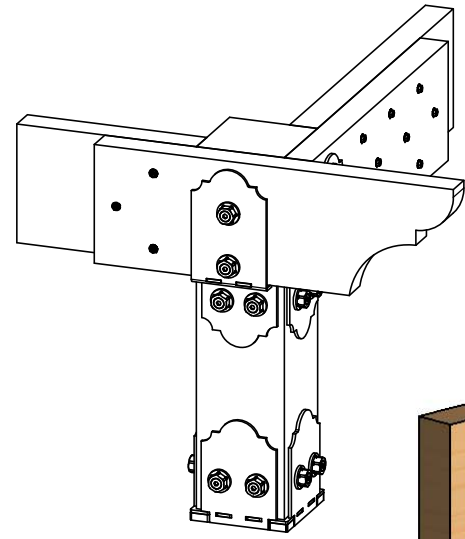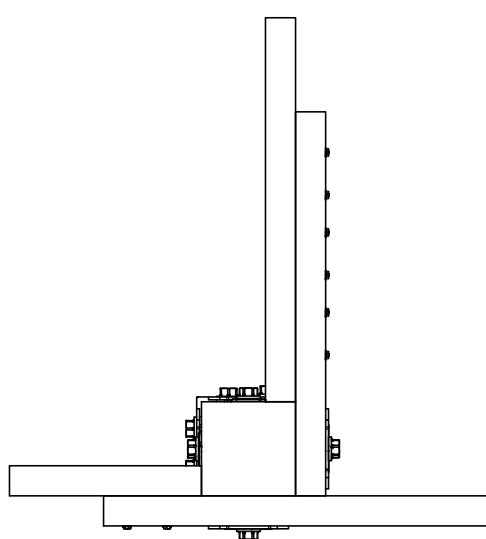
optional 2" Timber Bolt Heavy Duty Washer (OWT-TBW-2)#56680

Additional Construction Technique

Installation Instructions, 56636

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/3/2017 . This information is updated periodically and should not be relied upon after 2 years from 5/3/2017 . Please visit OZCOBP.com to get current information.

12

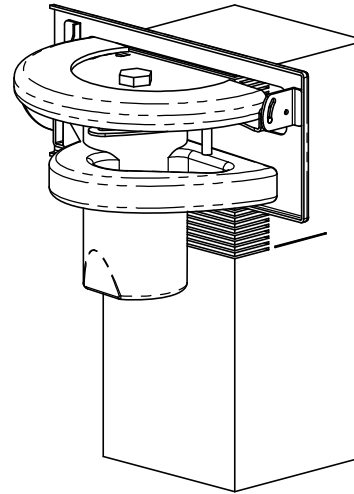| ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	6x6 Cedar Post	6x6x24.00
2	4	2x8 Cedar Board	2x8x12.00
3	1	56608	6x6 Post Base Kit (6X6-PB-LS)
4	1	56636	
5	2	56650	OWT Timber Bolt 6-8"
6	0.48	56627	OWT Timber Screw 3-3/4"

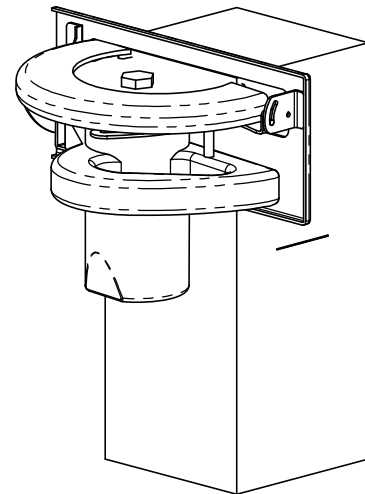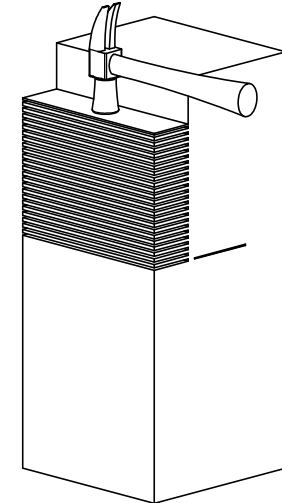# Additional Construction Technique

Installation Instructions, 56636

mark ledge location

Y

pencil
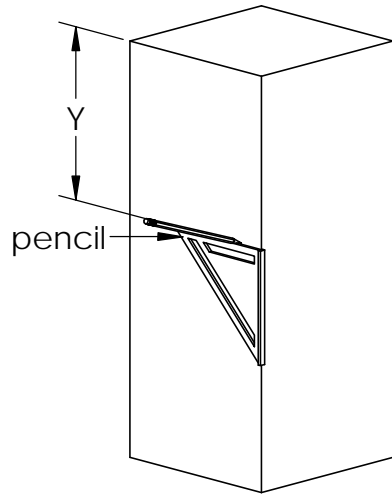
multiple cuts
approximately 1/4"
apart to mark

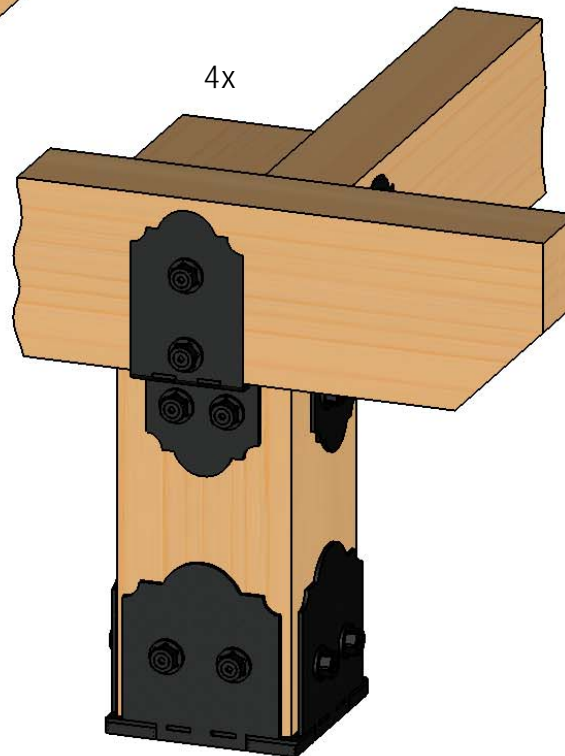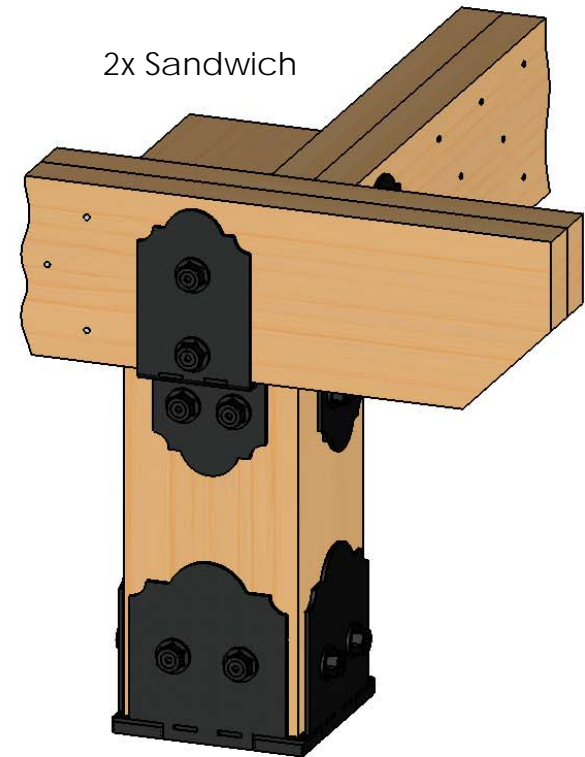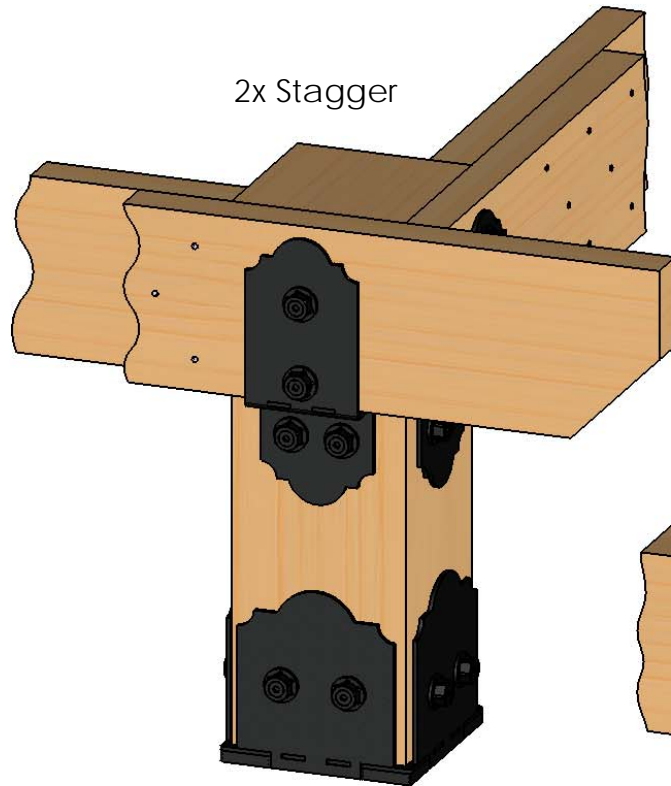remove pieces

set saw cut depth;
start cuts 1/4" from top

Dato cut for 4x lumber

Installation Instructions, 56636

V2.00 - Installation Instructions, Specifications and Project Plans are effective 5/3/2017 . This information is updated periodically and should not be relied upon after 2 years from 5/3/2017 . Please visit OZCOBP.com to get current information.
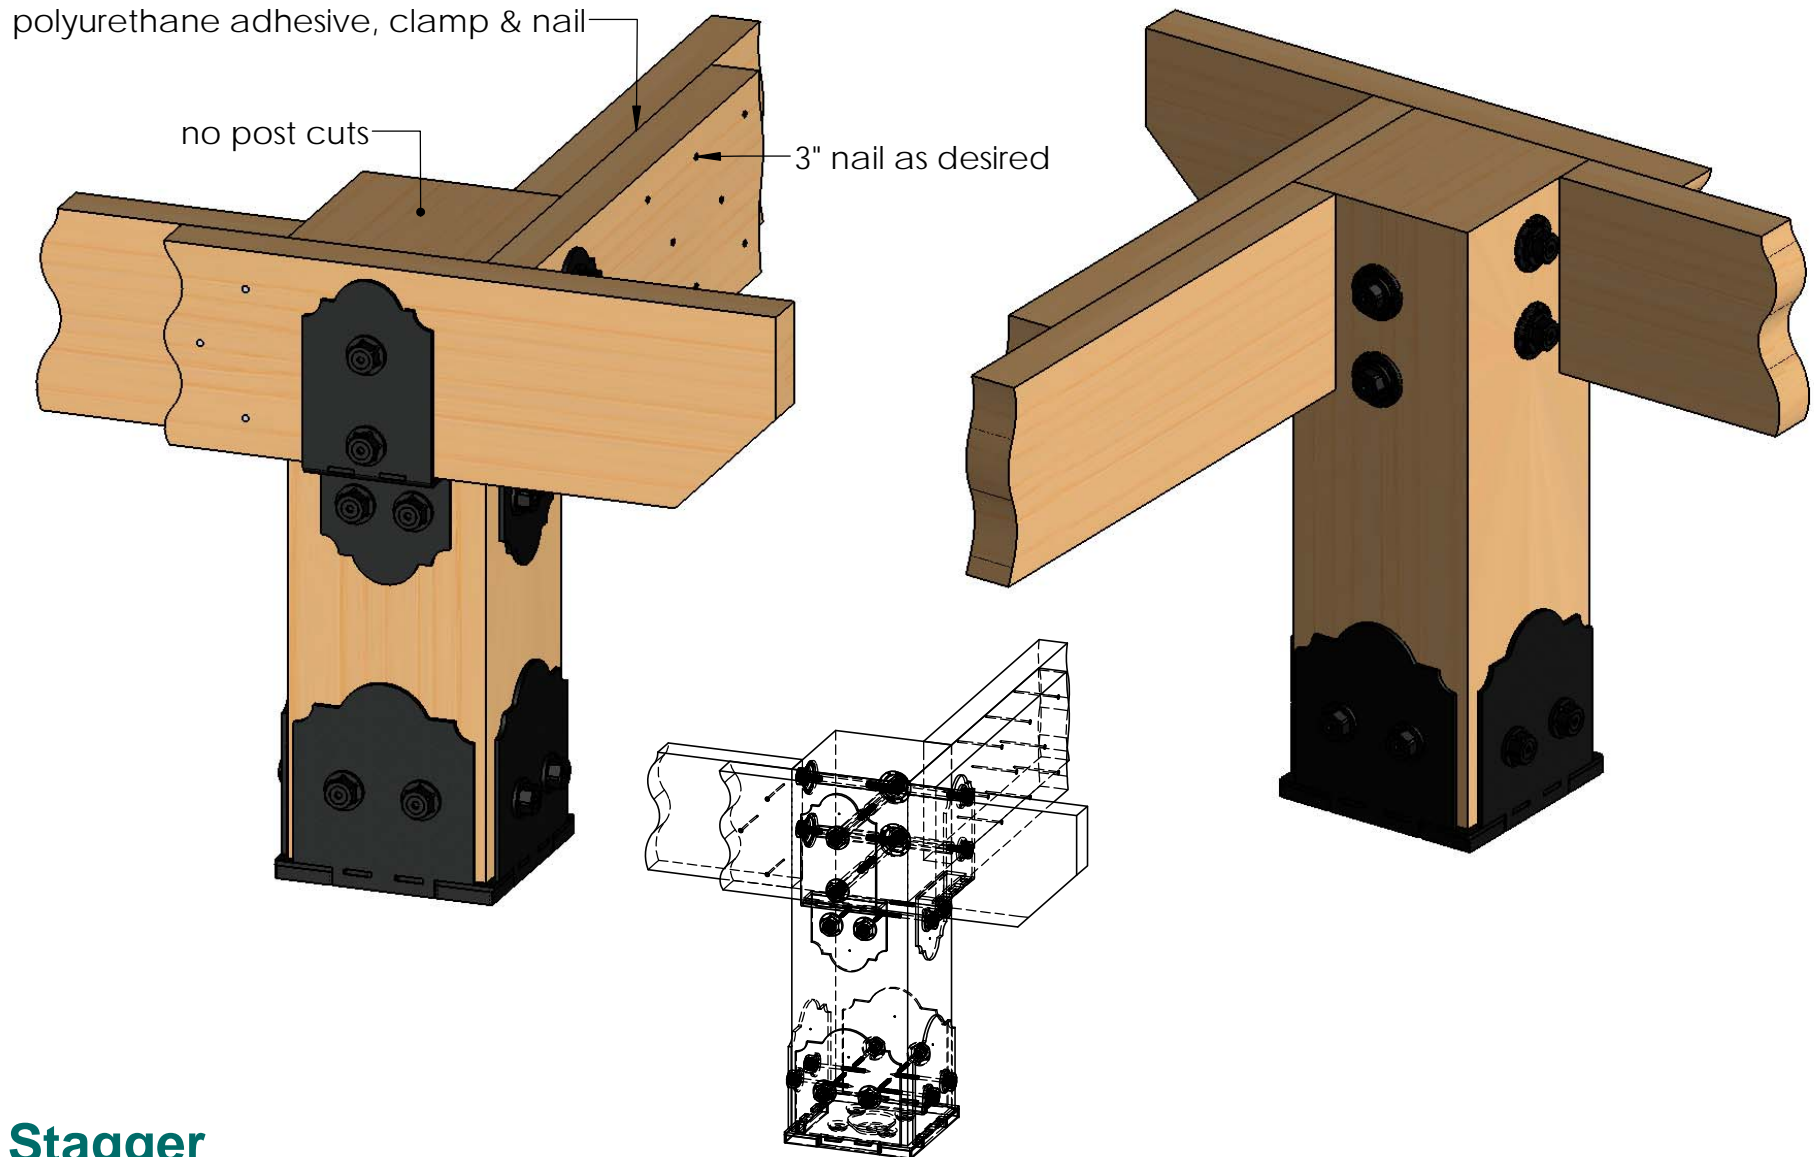
14

Ian's Concept

2x Stagger

2x Sandwich

4x

4x Beam Installation
- 3 style choices
- When 4x lumber not available or cost effective
- see subsequent pages for details on each style

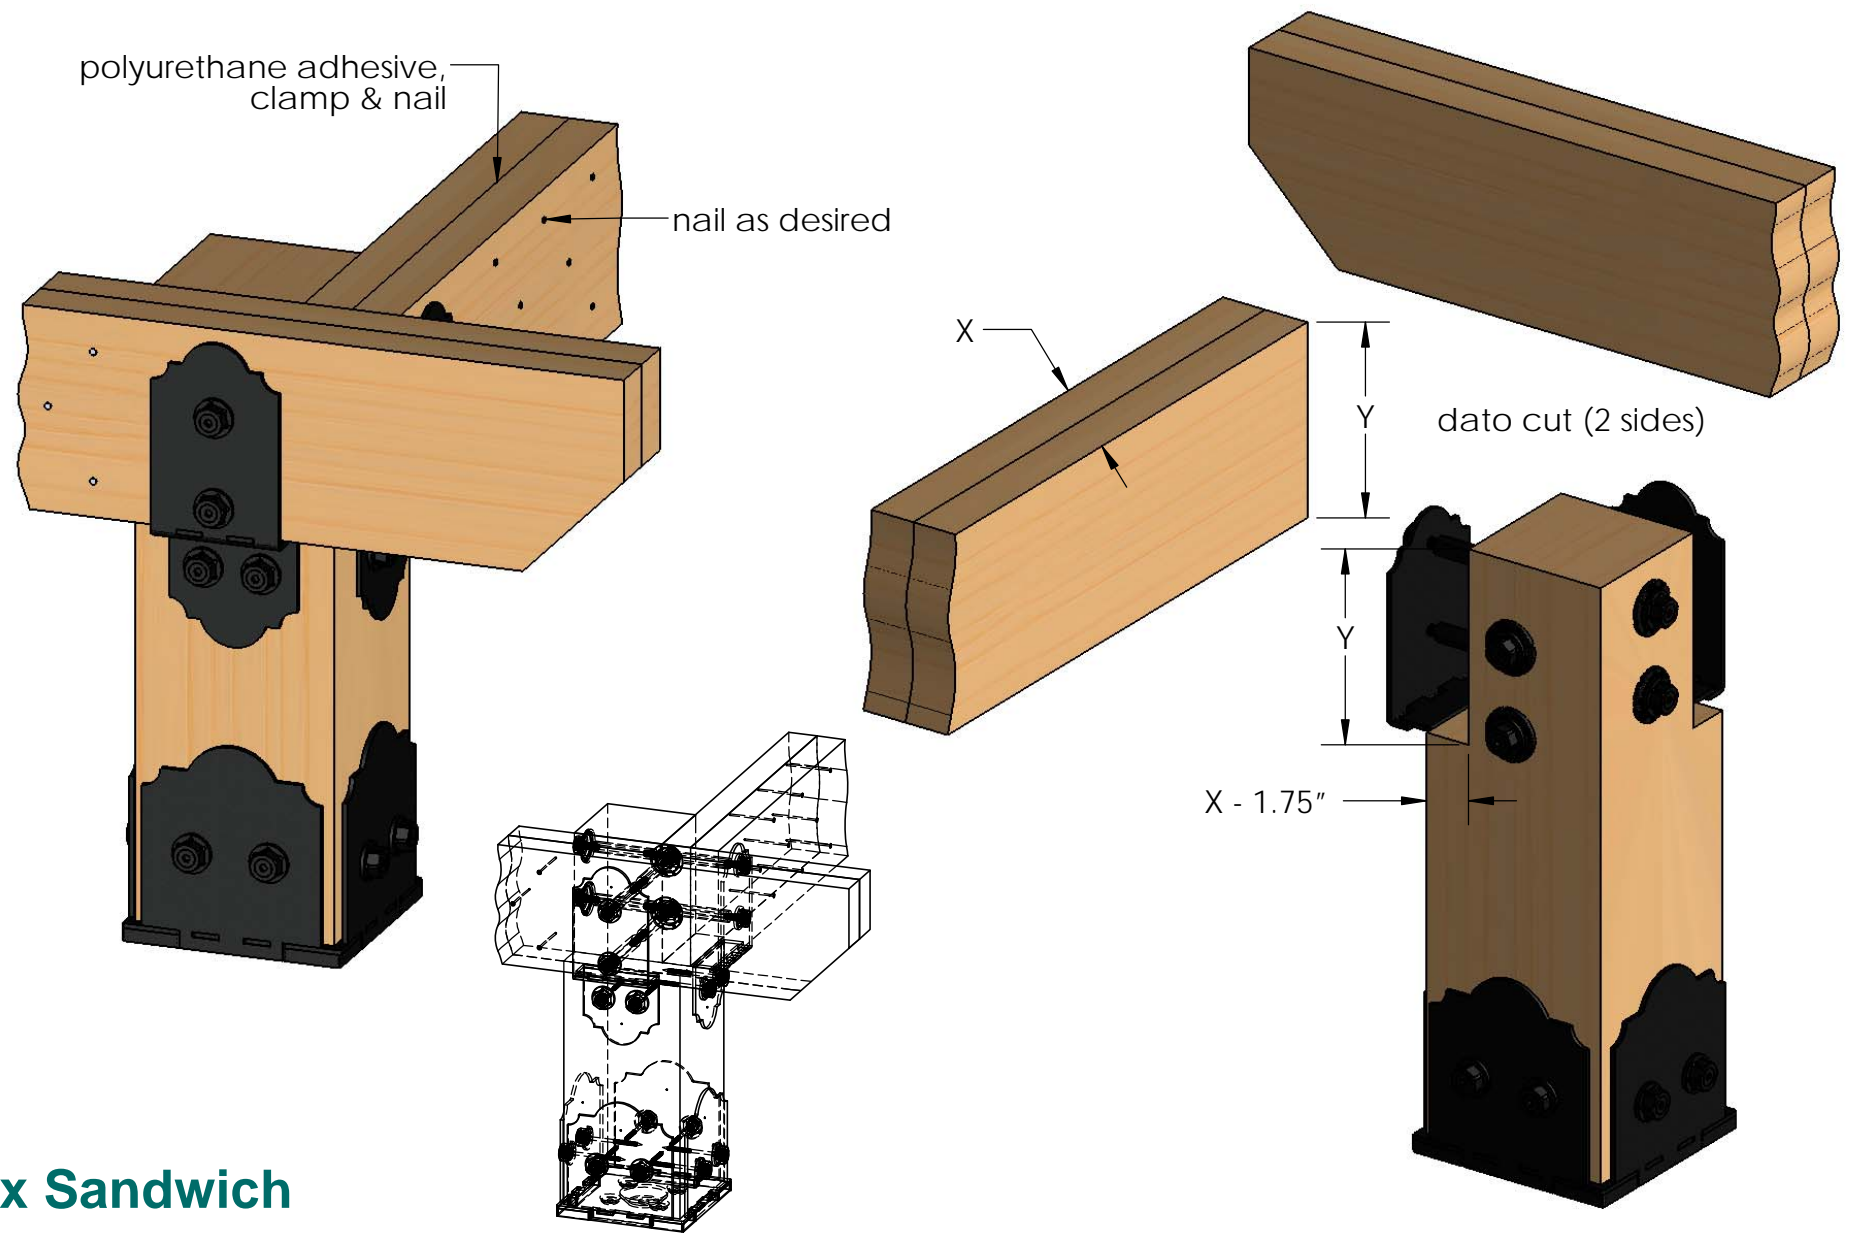see product installation instructions for hardware installation

OWT Ornamental Wood Ties
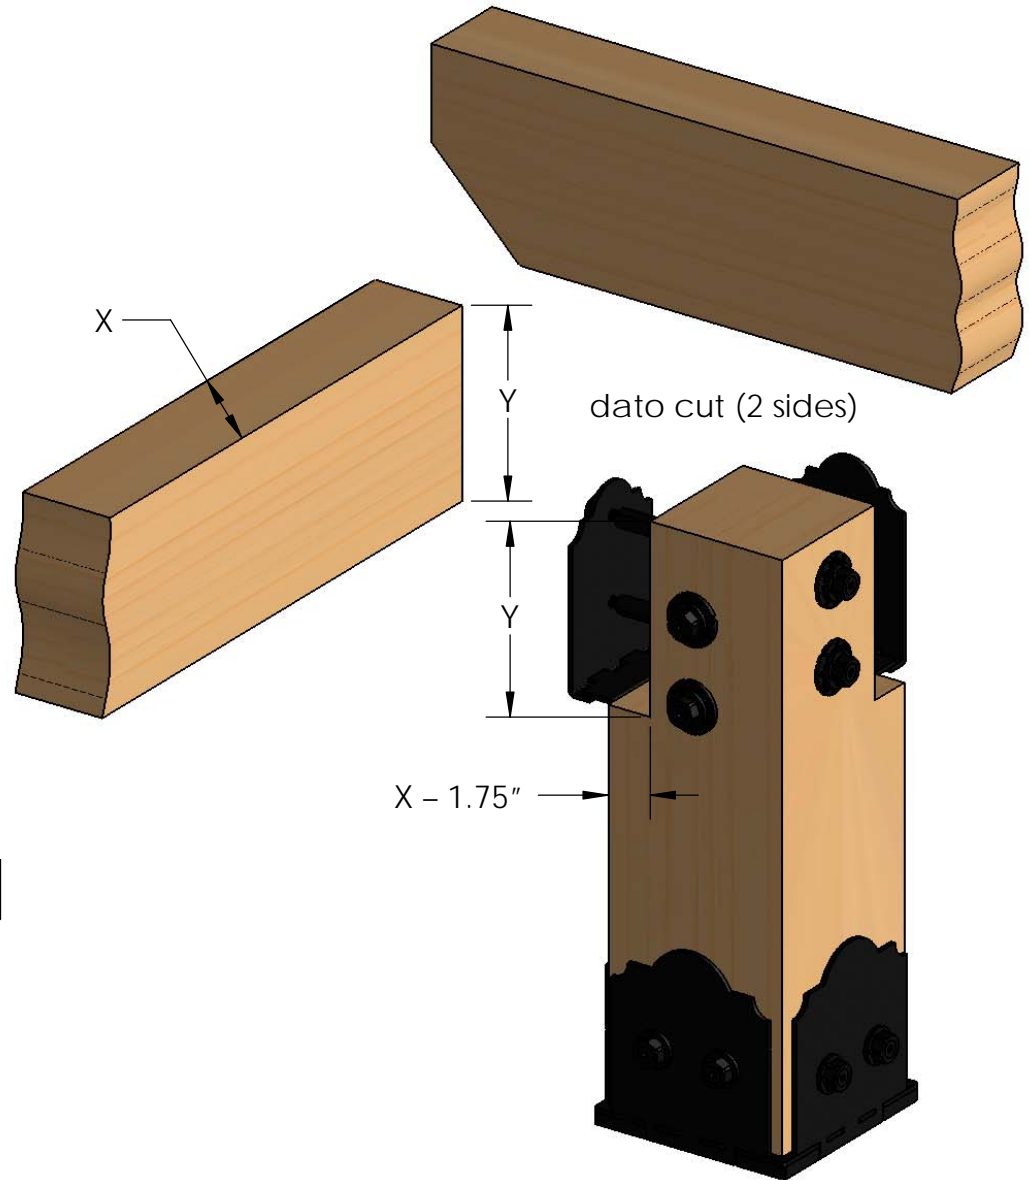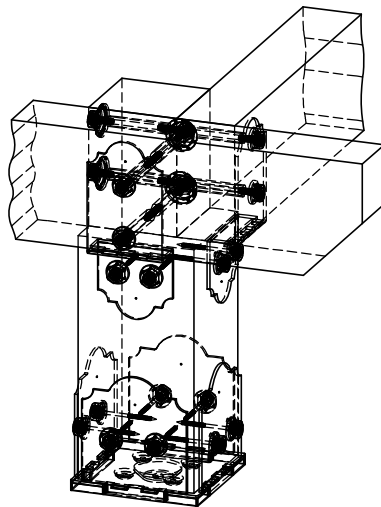
OZCO BUILDING PRODUCTS

polyurethane adhesive, clamp & nail

no post cuts

3" nail as desired

2x Stagger

Ian's Concept

V2.00 - Installation Instructions, Specifications and Project Plans are effective 6/14/2017 . This information is updated periodically and should not be relied upon after 2 years from 6/14/2017 . Please visit OZCOBP.com to get current information.

2

polyurethane adhesive, clamp & nail

nail as desired

X

Y

dato cut (2 sides)

Y

X - 1.75"

2x Sandwich

Ian's Concept

V2.00 - Installation Instructions, Specifications and Project Plans are effective 6/14/2017 . This information is updated periodically and should not be relied upon after 2 years from 6/14/2017 . Please visit OZCOBP.com to get current information. 3

X
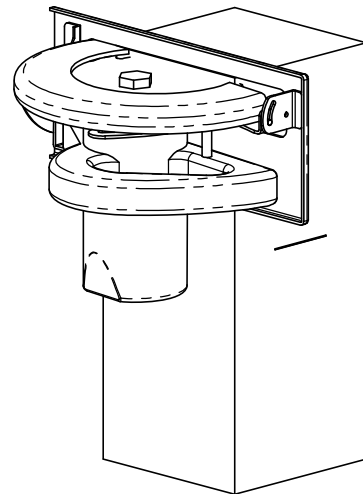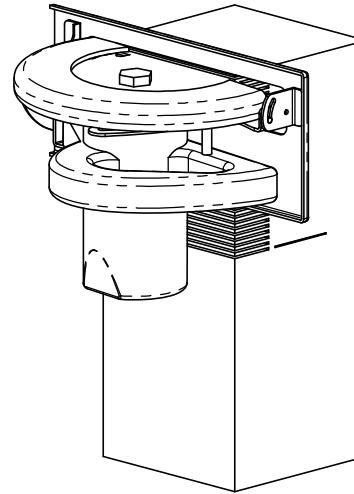
Y

Y

dato cut (2 sides)

X – 1.75″

4x

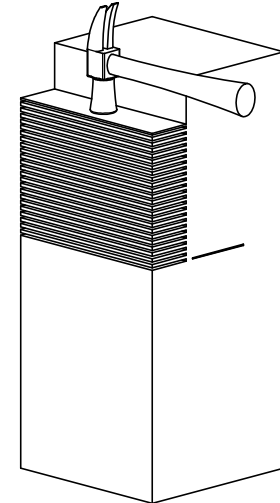**Ian's Concept**

4

mark ledge location

Y

pencil
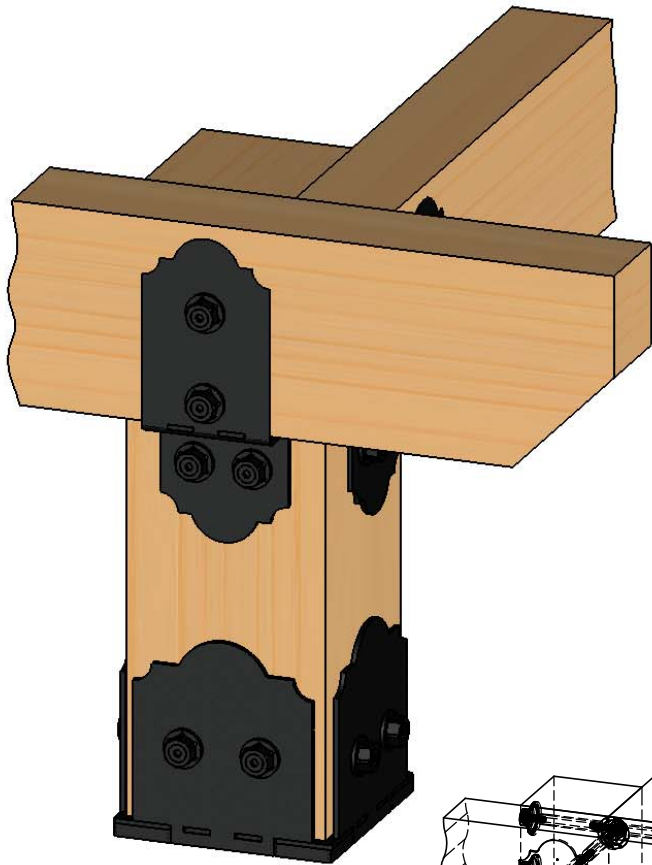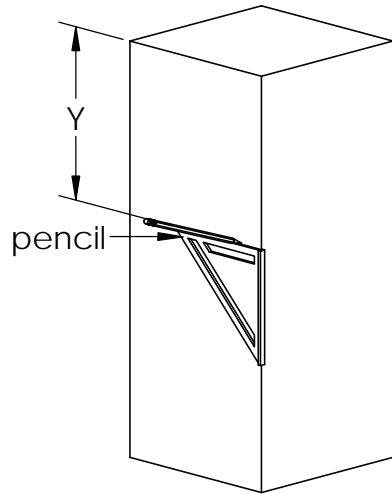
multiple cuts approximately 1/4" apart to mark

set saw cut depth; start cuts 1/4" from top

remove pieces

Dato cut details